

CC4300 Control Command List

Issued by:

Marantz America, Inc.

Key No.	RC4300 has a key	Function	Remote (IR) Code	
			Philips RC-5	RS-232C Code ASCII
1	X	POWER ON / STAND BY	20 12	32h 30h 31h 32h 0dh
2	X	DISC	20 30	32h 30h 33h 30h 0dh
3	X	1	20 01	32h 30h 30h 31h 0dh
4	X	2	20 02	32h 30h 30h 32h 0dh
5	X	3	20 03	32h 30h 30h 33h 0dh
6	X	4	20 04	32h 30h 30h 34h 0dh
7	X	5	20 05	32h 30h 30h 35h 0dh
8	X	6	20 06	32h 30h 30h 36h 0dh
9	X	7	20 07	32h 30h 30h 37h 0dh
10	X	8	20 08	32h 30h 30h 38h 0dh
11	X	9	20 09	32h 30h 30h 39h 0dh
12	X	0	20 00	32h 30h 30h 30h 0dh
13	X	REPEAT	20 29	32h 30h 32h 39h 0dh
14	X	A - B	20 59	32h 30h 35h 39h 0dh
15	X	RANDOM	20 28	32h 30h 32h 38h 0dh
16	X	PROGRAM	20 36	32h 30h 33h 36h 0dh
17	X	DELETE	20 49	32h 30h 34h 39h 0dh
18	X	INTRO	20 43	32h 30h 34h 33h 0dh
19	X	PLAY ►	20 53	32h 30h 35h 33h 0dh
20	X	PAUSE ■■	20 48	32h 30h 34h 38h 0dh
21	X	STOP ■	20 54	32h 30h 35h 34h 0dh
22	X	PREVIOUS ◀◀	20 33	32h 30h 33h 33h 0dh
23	X	NEXT ▶▶	20 32	32h 30h 33h 32h 0dh
24	X	REW ◀◀	20 50	32h 30h 35h 30h 0dh
25	X	FF ▶▶	20 52	32h 30h 35h 32h 0dh
26	X	EDIT	20 104	32h 30h 31h 30h 44h 0dh
27	X	T.SIZE	20 104 08	32h 30h 31h 30h 44h 30h 38h 0dh
28	X	DIMMER	20 71	32h 30h 37h 31h 0dh
29	X	TIME	20 11	32h 30h 31h 31h 0dh
a	---	POWER ON	20 12 01	32h 30h 31h 32h 30h 31h 0dh
b	---	STANDBY	20 12 02	32h 30h 31h 32h 30h 32h 0dh
c	---	DISC 1	20 55	32h 30h 35h 35h 0dh
d	---	DISC 2	20 56	32h 30h 35h 36h 0dh
e	---	DISC 3	20 57	32h 30h 35h 37h 0dh
f	---	DISC 4	20 64	32h 30h 36h 34h 0dh
g	---	DISC 5	20 65	32h 30h 36h 35h 0dh
h	---	NEXT DISC	20 114	32h 30h 31h 31h 34h 0dh
l	---	PREVIOUS DISC	20 115	32h 30h 31h 31h 35h 0dh

RC4300CC Key Assignment

