


marantz®

Model ZR6001 User Guide

AV Surround Receiver

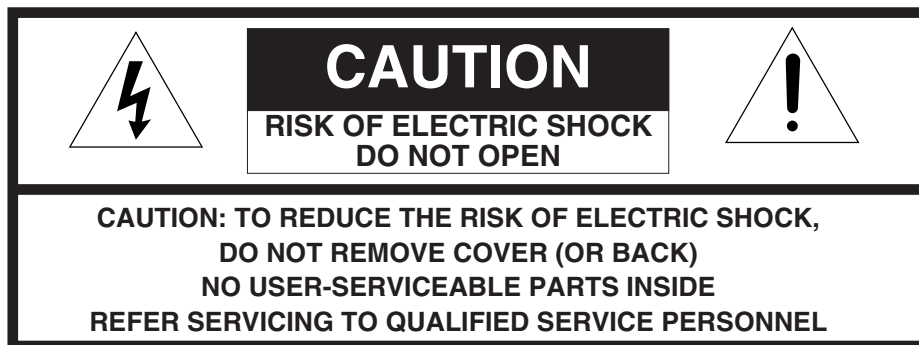

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG
TO WIDE SLOT, FULLY INSERT.**

**ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA
LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE
DE LA PRISE ET POUSSER JUSQU’AU FOND.**

NOTE TO CATV SYSTEM INSTALLER:

This reminder is provided to call the CATV (Cable-TV) system installer’s attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS

READ BEFORE OPERATING EQUIPMENT

 
This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer’s instructions, and should use a mounting accessory recommended by the manufacturer.
9. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instructions have been adhered to.
10. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.



AC POLARIZED PLUG

13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. Protective Attachment Plug – The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure 1.

16. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

18. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged.
 - If liquid has been spilled, or objects have fallen into the product.
 - If the product has been exposed to rain or water.

- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way, and
- When the product exhibits a distinct change in performance – this indicates a need for service.

22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**FIGURE 1
EXAMPLE OF ANTENNA GROUNDING AS PER
NATIONAL ELECTRICAL CODE, ANSI/NFPA 70**

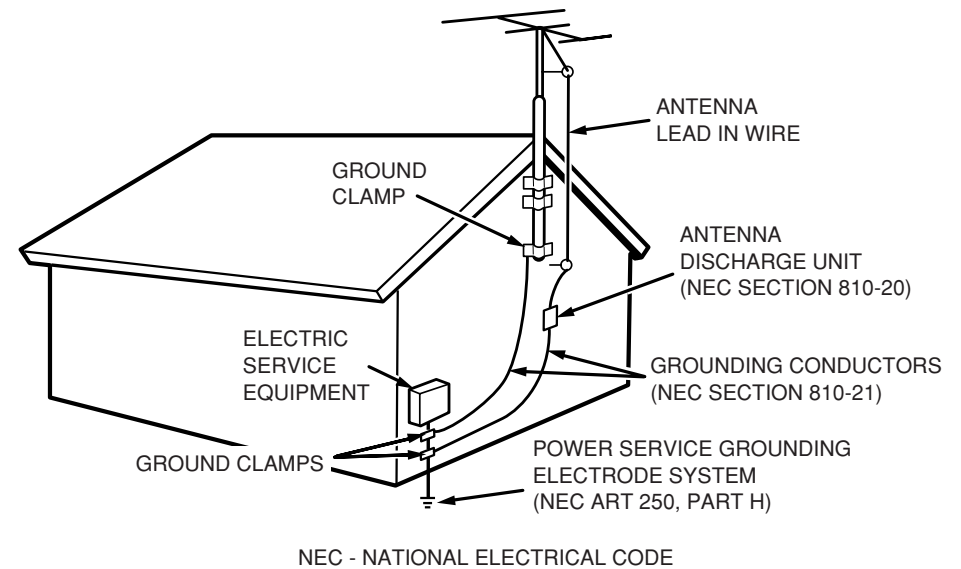


TABLE OF CONTENTS

INTRODUCTION	1	SIMPLE SETUP	26
PRECAUTIONS	1	BASIC OPERATION (PLAY BACK) ..	27
DESCRIPTION	2	SELECTING AN INPUT SOURCE	27
FEATURES	3	VIDEO CONVERT	27
ACCESSORIES	4	SELECTING THE SURROUND MODE	27
FRONT PANEL	5	ADJUSTING THE MAIN VOLUME	27
FL DISPLAY	6	ADJUSTING THE TONE (BASS & TREBLE) CONTROL ...	27
REAR PANEL	7	TEMPORARILY TURNING OFF THE SOUND	28
REMOTE CONTROL OPERATION	8	USING THE SLEEP TIMER	28
FUNCTION AND OPERATION	8	NIGHT MODE	28
PROGRAMMING THE REMOTE CONTROLLER	9	SURROUND MODE	28
OPERATION OF REMOTE CONTROL UNIT	10	OTHER FUNCTION	31
GENERAL INFORMATION OF RC5500SR TO ZR6001 ..	10	TV AUTO ON/OFF FUNCTION	31
CONNECTIONS	12	ATTENUATION TO ANALOG INPUT SIGNAL	31
CONNECTING FOR THE MULTI PLC LISTENING	12	LISTENING THROUGH HEADPHONES	31
CONNECTING AN IR EMITTER (OTHER BRAND PRODUCT) ..	13	DOLBY HEADPHONE MODE	31
SPEAKER PLACEMENT	13	VIDEO ON/OFF	31
CONNECTING SPEAKERS	14	DISPLAY MODE	31
CONNECTING AUDIO COMPONENTS	15	SELECTING ANALOG AUDIO INPUT OR DIGITAL AUDIO INPUT ..	32
CONNECTING VIDEO COMPONENTS	16	RECORDING AN ANALOG SOURCE	32
ADVANCED CONNECTING	17	HT-EQ	32
CONNECTING TO THE RC-5 (MARANTZ PRODUCTS ONLY) ..	17	7.1 CH INPUT	32
CONNECTING THE ANTENNA TERMINALS	18	AUX2 INPUT	33
CONNECTING FOR THE MULTI ROOM	19	LIP.SYNC	33
SETUP	20	BASIC OPERATION (TUNER)	33
ON SCREEN DISPLAY MENU SYSTEM	20	LISTENING TO THE TUNER	33
1 INPUT SETUP (ASSIGNABLE DIGITAL INPUT AND	21	PRESET MEMORY	34
COMPONENT VIDEO INPUT)	21	MULTI ROOM SYSTEM	36
2 SPEAKER SETUP	21	MULTI ROOM PLAYBACK USING THE MULTI ROOM	36
3 PREFERENCE	22	OUT TERMINALS	36
4 SURROUND	23	MULTI ROOM PLAYBACK USING THE MULTI SPEAKER	36
5 PL II (PRO LOGIC II)	23	TERMINALS	36
MUSIC PARAMETER	23	MULTI PLC SYSTEM	36
6 CS II (CIRCLE SURROUND II) PARAMETER	23	TROUBLESHOOTING	37
7 MULTI ROOM	23	TECHNICAL SPECIFICATIONS	38
8 7.1 CH INPUT LEVEL	24	DIMENSIONS	38
9 MULTI PLC SETUP	24		
10 SPEAKERS LEVEL SETTING WITHOUT TEST TONE ..	26		

INTRODUCTION



Thank you for purchasing the Marantz ZR6001 Surround receiver. This remarkable component has been engineered to provide you with many years of home theater enjoyment. Please take a few minutes to read this manual thoroughly before you connect and operate the ZR6001. As there are a number of connection and configuration options, you are encouraged to discuss your own particular home theater setup with your Marantz A/V specialist dealer.

PRECAUTIONS

CAUTIONS ON INSTALLATION

For heat dispersal, leave at least 20 cm/8 inch of space between the top, back and sides of this unit and the wall or other components.

- Do not obstruct the ventilation holes.

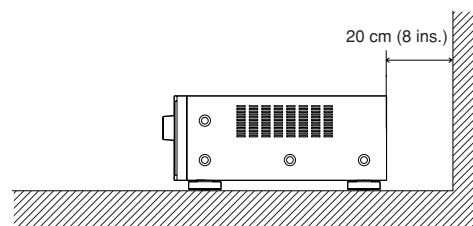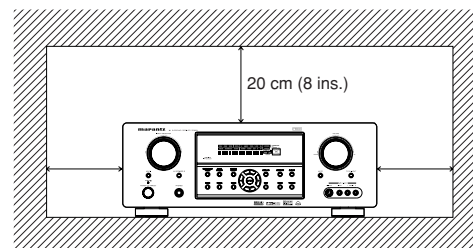

DESCRIPTION



DTS was introduced in 1994 to provide 5.1 channels of discrete digital audio into home theater systems. DTS brings you premium quality discrete multichannel digital sound to both movies and music. DTS is a multichannel sound system designed to create full range digital sound reproduction.

The no compromise DTS digital process sets the standard of quality for cinema sound by delivering an exact copy of the studio master recordings to neighborhood and home theaters.

Now, every moviegoer can hear the sound exactly as the moviemaker intended.

DTS can be enjoyed in the home for either movies or music on of DVD's, LD's, and CD's.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.



The advantages of discrete multichannel systems over matrix are well known.

But even in homes equipped for discrete multichannel, there remains a need for high-quality matrix decoding. This is because of the large library of matrix surround motion pictures available on disc and on VHS tape; and analog television broadcasts. The typical matrix decoder of today derives a center channel and a mono surround channel from two-channel matrix stereo material. It is better than a simple matrix in that it includes steering logic to improve separation, but because of its mono, band-limited surround it can be disappointing to users accustomed to discrete multichannel.

Neo:6 offers several important improvements as follow,

- Neo:6 provides up to six full-band channels of matrix decoding from stereo matrix material. Users with 6.1 and 5.1 systems will derive six and five separate channels, respectively, corresponding to the standard home-theater speaker layouts.
- Neo:6 technology allows various sound elements within a channel or channels to be steered separately, and in a way which follows naturally from the original presentation.
- Neo:6 offers a music mode to expand stereo nonmatrix recordings into the five- or six-channel layout, in a way which does not diminish the subtlety and integrity of the original stereo recording.



DTS-ES Extended Surround is a new multichannel digital signal format developed by Digital Theater Systems Inc. While offering high compatibility with the conventional DTS Digital Surround format, DTS-ES Extended Surround greatly improves the 360-degree surround impression and space expression thanks to further expanded surround signals. This format has been used professionally in movie theaters since 1999.

In addition to the 5.1 surround channels (FL, FR, C, SL, SR and LFE), DTS-ES Extended Surround also offers the SB (Surround Back) channel for surround playback with a total of 6.1 channels. DTS-ES Extended Surround includes two signal formats with different surround signal recording methods, as DTS-ES Discrete 6.1 and DTS-ES Matrix 6.1.

"DTS", "DTS-ES" and "Neo:6" are trademarks of Digital Theater Systems, Inc.



The stereo CD is a 16-bit medium with sampling at 44.1 kHz. Professional audio has been 20- or 24-bit for some time, and there is increasing interest in higher sampling rates both for recording and for delivery into the home. Greater bit depths provide extended dynamic range. Higher sampling rates allow wider frequency response and the use of anti-alias and reconstruction filters with more favorable aural characteristics.

DTS 96/24 allows for 5.1 channel sound tracks to be encoded at a rate of 96kHz/24bits on DVD-Video titles.

When DVD-video appeared, it became possible to deliver 24-bit, 96 kHz audio into the home, but only in two channels, and with serious limitations on picture. This capability has had little use.

DVD-audio allows 96/24 in six channels, but a new player is needed, and only analog outputs are provided, necessitating the use of the D/A converters and analog electronics provided in the player.

DTS 96/24 offers the following:

1. Sound quality transparent to the original 96/24 master.
2. Full backward compatibility with all existing decoders. (Existing decoders will output a 48 kHz signal)

3. No new player required: DTS 96/24 can be carried on DVD-video, or in the video zone of DVD-audio, accessible to all DVD players.

4. 96/24 5.1-channel sound with full-quality full-motion video, for music programs and motion picture soundtracks on DVD-video.

"DTS" and "DTS 96/24" are trademarks of Digital Theater Systems, Inc.



Dolby Digital identifies the use of Dolby Digital audio coding for such consumer formats as DVD and DTV. As with film sound, Dolby Digital can provide up to five full-range channels for left, center, and right screen channels, independent left and right surround channels, and a sixth (".1") channel for low-frequency effects.

Dolby Surround Pro Logic II is an improved matrix decoding technology that provides better spatiality and directionality on Dolby Surround program material; provides a convincing three-dimensional soundfield on conventional stereo music recordings; and is ideally suited to bring the surround experience to automotive sound. While conventional surround programming is fully compatible with Dolby Surround Pro Logic II decoders, soundtracks will be able to be encoded specifically to take full advantage of Pro Logic II playback, including separate left and right surround channels. (Such material is also compatible with conventional Pro Logic decoders.)

Dolby Digital EX creates six full-bandwidth output channels from 5.1-channel sources. This is done using a matrix decoder that derives three surround channels from the two in the original recording. For best results, Dolby Digital EX should be used with movies soundtracks recorded with Dolby Digital Surround EX.

About Dolby Pro Logic IIx

Dolby Pro Logic IIx technology delivers a natural and immersing 7.1-channel listening experience to the home theater environment. A product of Dolby's expertise in surround sound and matrix decoding technologies, Dolby Pro Logic IIx is a complete surround sound solution that maximizes the entertainment experience from stereo as well as 5.1-channel encoded sources.

Dolby Pro Logic IIx is fully compatible with Dolby Surround Pro Logic technology and can optimally decode the thousands of commercially available Dolby Surround encoded video cassettes and television programs with enhanced depth and spatiality. It can also process any high-quality stereo or Advanced Resolution 5.1-channel music content into a seamless 6.1- or 7.1-channel listening experience.




The Dolby Headphone technology provides a surround sound listening experience over headphones. When listening to multichannel content such as DVD movies over headphones, the listening experience is fundamentally different than listening to speakers. Since the headphone speaker drivers are covering the pinna of the ear, the listening experience differs greatly from traditional speaker playback. Dolby utilizes patented headphone perspective curves to solve this problem and provides a non-fatiguing, immersive, home theater listening experience. Dolby Headphone also delivers exceptional 3D audio from stereo material.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.



Circle Surround II (CS-II) is a powerful and versatile multichannel technology. CS-II is designed to enable up to 6.1 multichannel surround sound playback from mono, stereo, CS encoded sources and other matrix encoded sources. In all cases the decoder extends it into 6 channels of surround audio and a LFE/subwoofer signal. The CS-II decoder creates a listening environment that places the listener "inside" music performances and dramatically improves both hi-fi audio conventional surround-encoded video material. CS-II provides composite stereo rear channels to greatly improve separation and image positioning – adding a heightened sense of realism to both audio and A/V productions.

CS-II is packed with other useful feature like dialog clarity (SRS Dialog) for movies and cinema-like bass enrichment (TruBass). CS-II can enable the dialog to become clearer and more discernable in movies and it enables the bass frequencies contained in the original programming to more closely achieve low frequencies – overcoming the low frequency limitations of the speakers by full octave.

Circle Surround II, Dialog Clarity, TruBass, SRS and  symbol are trademarks of SRS Labs, Inc. Circle Surround II, Dialog Clarity and TruBass technology are incorporated under license from SRS Labs, Inc.



HDCD® (High Definition Compatible Digital®) is a patented process for delivering on Compact Disc the full richness and details of the original microphone feed. HDCD encoded CDs sound better because they are encoded with 20-bits of real musical information as compared to 16-bits for all other CDs. HDCD overcomes the limitation of the 16-bit CD format by using a sophisticated system to encode the additional four bits onto the CD while remaining completely compatible with the CD format. When listening to HDCD recordings, you hear more dynamic range, a focused 3-D sound stage, and extremely natural vocal and musical timbre. With HDCD, you get the body, depth and emotion of the original performance not a flat, digital imitation.

HDCD system manufactured under license from Microsoft. This product is covered by one or more of the following: In the United States 5,479,168 5,638,074 5,640,161 5,808,574 5,838,274 5,854,600 5,864,311 5,872,531 and in Australia 669,114 with other patents pending.


FEATURES

By simply plugging the power cables of the ZR6001 and ZC4001 into ordinary home electrical outlets, the ZR6001 sends audio sources over your home electrical line for playback by the ZC4001.

PLC (POWER LINE COMMUNICATION)

The ZR6001* converts analog audio signals into noncompressed linear PCM digital signals, modulates them into high frequency signals, and sends them over power lines. The ZC4001 demodulates the sent signals and converts them back to analog signals.

* If the condition of the power line degenerates because of the effects of noise from other devices or for other reasons, the ZR6001 uses an audio format of different sampling rate and data bit length.

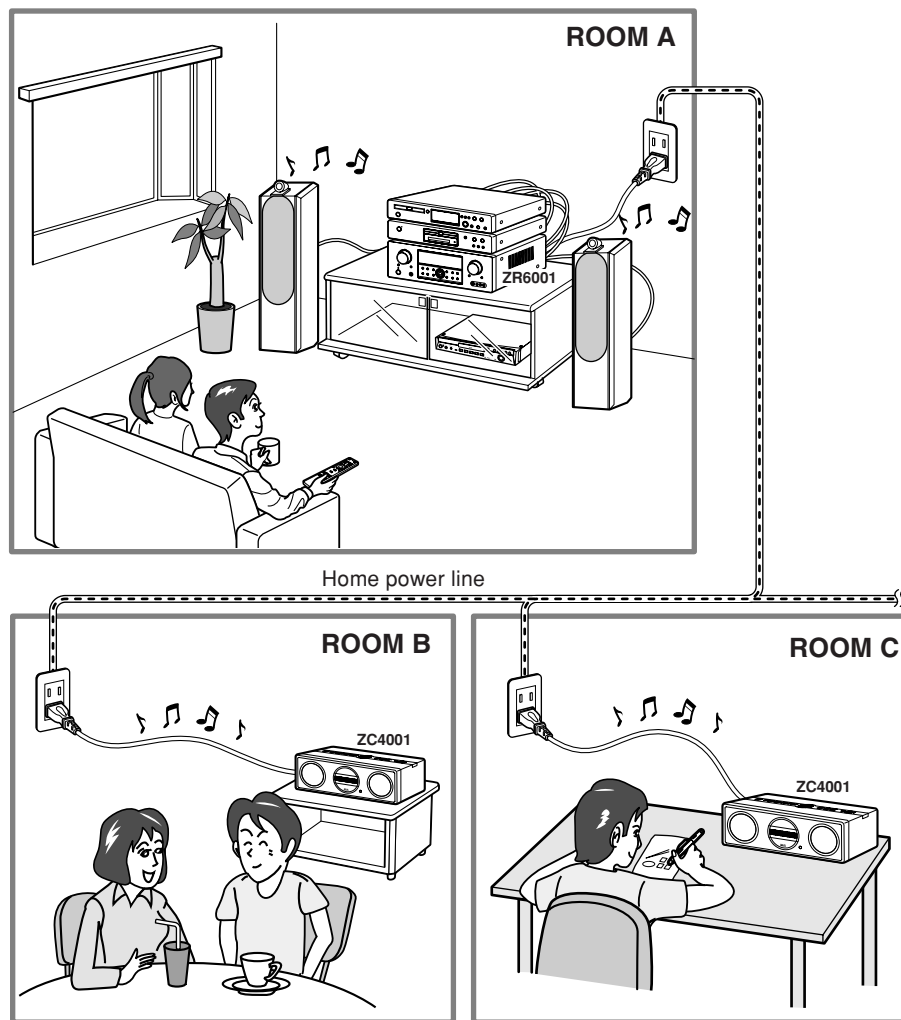

The ZR6001 incorporates the latest generation of digital surround sound decoding technology such as Dolby Digital EX, Dolby Digital, DTS-ES (Discrete 6.1 and Matrix 6.1), DTS Neo:6 (Cinema, Music), Dolby Pro-Logic IIx (Movie, Music and Game), Circle Surround II (Cinema and Music). In addition, Marantz has focused on the future. By utilizing pre-out jacks, 7.1 direct inputs and a RS-232C communication port, the ZR6001 is tomorrow's technology, today!

The ZR6001 features a fully discrete 7 channel amplifier section capable of delivering 90 watts of high-current amplification, for continuously clean and stable power into each of the 7 channels. It employs a massive EI power transformer in combination with oversized filter capacitors. Current feedback topology allows total operation stability, while requiring minimal amounts of negative feed-back, resulting in an excellent transient frequency response and superb sonic transparency. This design configuration is capable of a clear and powerful reproduction of the most demanding action movie soundtracks and full range (multichannel) music discs. Through its ability to generate very high output voltages, the ZR6001 can easily drive the most demanding speakers with optimum results.

The ZR6001 incorporates the most advanced Digital Signal Processing circuitry, along with a Crystal® 192 kHz/24 bit D/A converter in each of the 8 channels. Independent power supply circuits are incorporated for the FL display, audio and video sections for maximum separation, clarity and dynamic range. Together with hand-selected customized components, all elements work in harmony to recreate the emotion, exactly as the artist had intended.

The ZR6001 is designed and engineered with extensive feedback from custom installation experts, dealers and consumers. It features multi-room/multisource, a RS-232C communication port, heavy duty speaker binding posts and an extensive array of both analog and digital inputs / outputs. With 4 assignable digital inputs, 2 assignable component inputs, SACD Multi Channel (7.1 channel) direct inputs video convert system and OSD output versatility is taken to a stunning new level. Furthermore, the ZR6001 can output the OSD information through the Y/C (S-video) and composite video outputs.


An easy-to-use universal remote control allows full access to all of the operating functions and can be used for system operation as well.

This unit has Simple Setup function for easy setup. You can setup all speaker settings by just selecting your room size and the number of your speakers with Simple Setup function. You can also setup customized settings just like conventional AV amplifiers.


- Dolby Digital EX, Dolby Digital, DTS ES (Discrete 6.1, Matrix 6.1, Neo: 6)
- Dolby Headphone (DH1, DH2, DH3)
- Dolby Pro Logic IIx (Movie, Music, Game)
- Circle Surround II (Movie, Music, Mono)
- HDCD decoding
- 7 x 95 Watts (8 Ohm), Discrete Amplifiers
- High Power Current Feedback Circuitry
- Massive Energy Power Supply, Huge EI Transformer, Large ELCO's.
- 192 kHz/24 bit Crystal® DAC for all 8 Channels
- 32 bit Digital Surround Processing Chipsets
- Video Off Mode
- Large Heavy Duty Speaker Terminals for all Channels
- RS-232C Terminal for System Control
- Set Up Menu via all Video Output (Composite, S-Video and Component video)
- Auto Input Signal Detection
- Improved Station Name Input Method, 50 Presets
- Auto Adjust Function for Speaker Distance Settings (Delay Time)
- Front AUX Input (Digital Camera, Portable DVD)
- Universal remote control
- Simple Setup Function
- Video convert system
- LIP.SYNC Function (Audio delay)
- PLC (Power Line Communication) function to ZC4001.

ACCESSORIES


Remote Controller RC5500SR

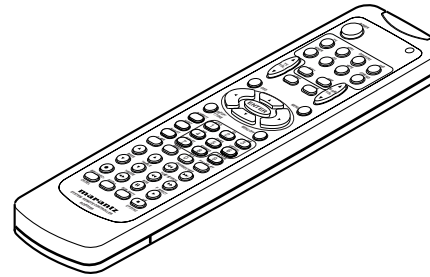


AAA-size batteries X 2

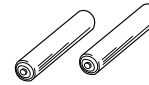 


AM Loop Antenna

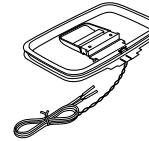


FM Antenna

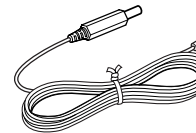


Front AUX Jack Cover

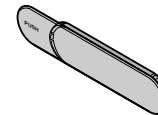 


AC Power Cord

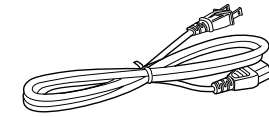 

User Guide

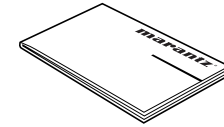

FRONT PANEL

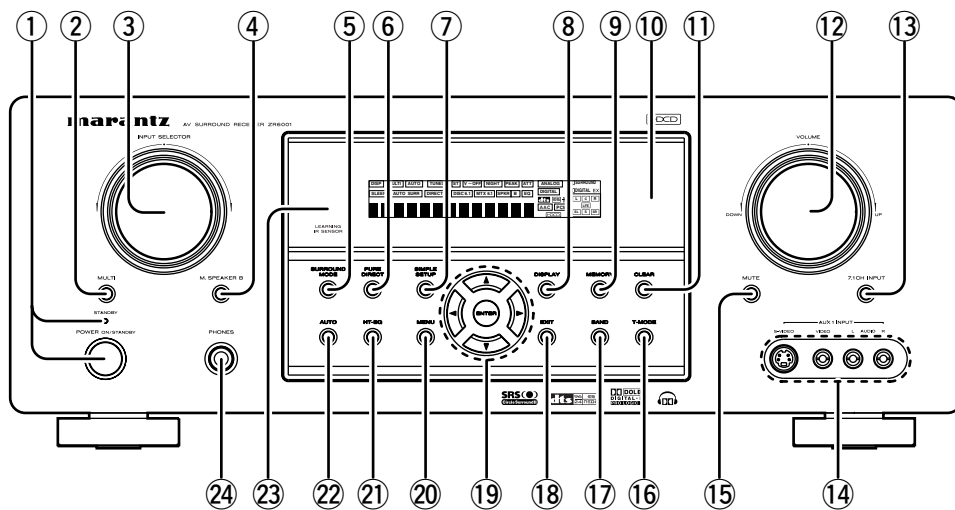

① POWER switch and STANDBY indicator
When this switch is pressed once, the unit turns ON and the display illuminates. When pressed again, the unit turns OFF and the STANDBY indicator will be illuminated.

② MULTI (Multi Room) button
Press this button to activate the Multiroom system. "MULTI" indicator will be illuminated in the display.

③ INPUT SELECTOR knob (AUDIO/ VIDEO)
This knob is used to select the input sources. The video function selector, such as TV, DVD, VCR1 and DSS, selects video and audio simultaneously. Audio function sources such as CD, TAPE, CDR/MD, and TUNER may be selected in conjunction with a Video source. This feature (Sound Injection) combines a sound from one source with a picture from another. Choose the video source first, and then choose a different audio source to activate this function.

④ M.(Multi Room) SPEAKER B button
Press this button to activate the Multiroom Speaker B system. "MULTI" indicator will be illuminated in the display. (See page 36)

⑤ SURROUND MODE button
You can select the surround mode by pressing this button.

⑥ PURE DIRECT button
When this button is pressed, the tone control circuitry is bypassed as well as Bass Management. "DIRECT" indicator will be illuminated in the display.

Notes:

- The surround mode is automatically switched to AUTO when the pure direct function is turned on.
- Additionally, Speaker Configurations are fixed automatically as follows.
Front SPKR = Large, Center SPKR = Large, Surround SPKR = Large, Sub woofer = On
- This function is unavailable when the M. speaker B system is activated. While this function is activated, this function will be canceled if the M. SPEAKER B button is pressed.

⑦ SIMPLE SETUP button
Press this button to enter the simple setup mode. You can setup the speaker conditions (speaker sizes, number of speakers, speaker delay times) quickly by pressing the cursor buttons.

⑧ DISPLAY button
When this button is pressed, the FL display mode is changed as Surround Mode → Auto-display Off → Display Off → Input Function and the display off indicator (DISP) lights up in condition of DISPLAY OFF.

⑨ MEMORY button
Press this button to enter the tuner preset memory numbers or station names. (See page 34)

⑩ INFRARED receiving sensor window
This window receives infrared signals for the remote control.

⑪ CLEAR button
Press this button to cancel the station-memory setting mode or preset scan tuning. (See page 34)

⑫ VOLUME control knob
Adjusts the overall sound level. Turning the control clockwise increases the sound level.

⑬ 7.1CH INPUT button
Press this button to select the output of an external multichannel player.

⑭ AUX1 INPUT jacks
These auxiliary video/audio input jacks accept the connections of a camcorder, portable DVD, game etc.

⑮ MUTE button
Press this button to mute the output to the speakers. Press it again to return to the previous volume level.

⑯ T-MODE button
Press this button to select the auto stereo mode or mono mode when the FM band is selected. The "AUTO" indicator lights in the auto stereo mode. (See page 34)

⑰ BAND button
Press this button to switch between FM and AM in the TUNER mode.

⑱ EXIT button
This button is used to exit from the SETUP MAIN MENU.

⑲ Cursor (◀, ▶, ▲, ▼) / ENTER button
Use these buttons when operating the SETUP MAIN MENU and TUNER function.

⑳ MENU button
This button is used to enter the SETUP MAIN MANU.

㉑ HT-EQ button
Used to turn on or off HT(Home Theater)-EQ mode. This mode compensates for the audio portion of a movie sounding "bright". When this button is pressed, "EQ" indicator lights up.

㉒ AUTO (Auto surround) button
Press this button to select the AUTO mode from the surround modes. When this mode is selected, the receiver determines the surround mode corresponding to a digital input signal automatically.


㉓ LEARNING IR SENSOR
This sensor is used to operate other brands from the ZC4001 via the Multi PLC feature when the 4-digit code of the source is not known.

㉔ HEADPHONE jack for stereo headphones
This jack may be used to listen to the ZR6001's output through a pair of headphones. Be certain that the headphones have a standard 1 / 4" stereo phono plug. Note that the main room speakers will automatically be turned off when the headphone jack is in use.

Notes:

- When using headphones, the surround mode will change to STEREO and Dolby Headphone by MENU and Cursor button.
- The surround mode returns to the previous setting as soon as the headphone plug is removed from the jack.

FL DISPLAY

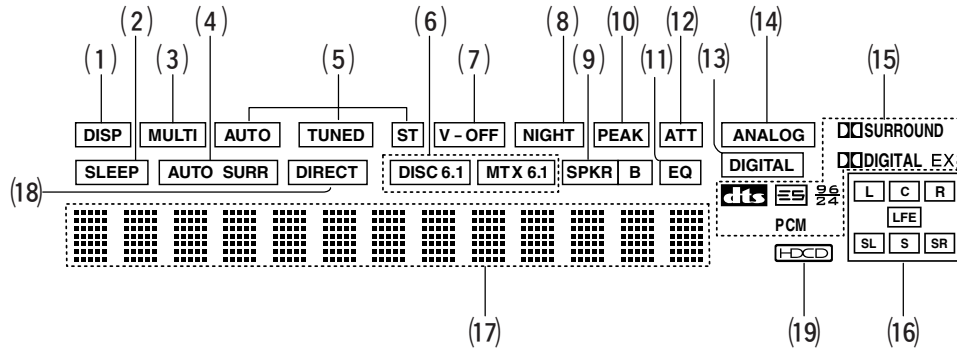**(1) DISP (Display Off) indicator**

This indicator is illuminated when the ZR6001 is in the display off condition.

(2) SLEEP timer indicator

This indicator is illuminated when the sleep timer function in the main-room is in use.

(3) Multi-room system indicator

This indicator is illuminated when the multi-room system is active.

(4) AUTO SURR (Auto Surround mode) indicator

This indicator is illuminated to show that the AUTO SURROUND mode is in use.

(5) TUNER's indicators

AUTO : This indicator illuminates when the tuner's Auto mode is in use.

TUNED : This indicator illuminates when a station is being received with sufficient signal strength to provide acceptable listening quality.

ST(Stereo) : This indicator illuminates when an FM station is being tuned into stereo condition.

(6) DTS-ES mode indicators (DISC6.1, MTX6.1)

These indicators will illuminate to show the DTS-ES decoding mode (Discrete 6.1 or Matrix 6.1).

(7) V (video)-OFF mode indicator

This indicator is illuminated when the Video-OFF function is active.

(8) NIGHT mode indicator

This indicator is illuminated when the ZR6001 is in the Night mode, which reduces the dynamic range of digital program material at low volume levels.

(9) SPKR (speaker) B indicator

This indicator is illuminated when the M (Multiroom) speaker B system is active.

(10) PEAK indicator

This indicator is a monitor for an analog audio input signal. If the selected analog audio input signal is greater than the capable level of internal processing, this will illuminate. If this happens, you should press the **ATT** button on the remote.

(11) EQ mode indicator

This indicator is illuminated when the HT-EQ function is active.

(12) ATT (Attenuation) indicator

This indicator is illuminated when the attenuation function is active.

(13) DIGITAL Input Indicator

This indicator lights when a digital input has been selected.

(14) ANALOG input indicator

This indicator is illuminated when an analog input source has been selected.

(15) SIGNAL FORMAT indicators

DIGITAL, EX, SURROUND, dts, ES, 96/24, PCM

When the selected input is a digital source, some of these indicators will be illuminated to display the specific type of signal in use.

(16) ENCODED CHANNEL STATUS indicators

These indicators display the channels that are encoded with a digital input signal. If the selected digital input signal is Dolby Digital 5.1ch or DTS 5.1ch, "L", "C", "R", "SL", "SR" and "LFE" will be illuminated. If the digital input signal is 2 channel PCM-audio, "L" and "R" will be displayed.

If Dolby Digital 5.1ch signal with Surround EX flag or DTS-ES signal comes in, "L", "C", "R", "SL", "S", "SR" and "LFE" will be illuminated.

(17) Main Information Display

This display shows messages relating to the status, input source, surround mode, tuner, volume level or other aspects of unit's operation.


(18) DIRECT (Puredirect) indicator

This indicator is illuminated when the ZR6001 is in the PURE DIRECT mode.

(19) HDCD indicator


When HDCD signal is decoded from digital input, this indicator will light up.

HOW TO ATTACH THE FRONT AUX JACK COVER

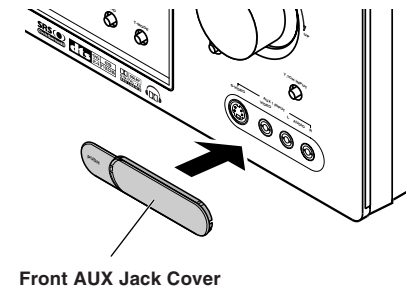

Front AUX Jack Cover

REAR PANEL

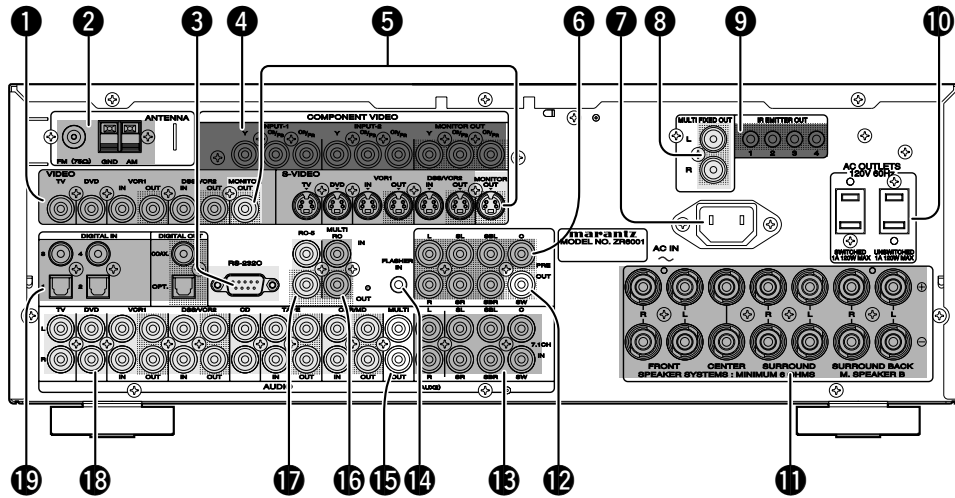

1 VIDEO IN/OUT (TV, DVD, VCR1, DSS/VCR2)

These are the video inputs and outputs. There are 4 video inputs and 2 video outputs and each one includes both composite video and S-video configurations. Connect VCRs, DVD players, and other video components to the video inputs. The 2 video output channels can be used to be connected to video tape recorders for making recordings.

The input signals of video and S-video are converted each other, and each of the converted video signals can be output.

2 FM antenna terminal (75 ohms)

Connect an external FM antenna with a coaxial cable, or a cable network FM source.

AM antenna and ground terminals

Connect the supplied AM loop antenna. Use the terminals marked "AM" and "GND". The supplied AM loop antenna will provide good AM reception in most areas. Position the loop antenna until you hear the best reception.

3 RS-232C

The RS-232C port is to be used in conjunction with an external controller to control the operation of the ZR6001 by using an external device.

4 COMPONENT VIDEO INPUT/OUTPUT

If your DVD player or other device has component video connectors, be sure to connect them to these component video connectors on the ZR6001. The ZR6001 has two component video input connectors to obtain the color information (Y, Cb, Cr) directly from the recorded DVD signal or other video component and one component video output connector to output it directly into the matrix decoder of the display device.

By sending the pure DVD component video signal directly, the DVD signal forgoes the extra processing that normally would degrade the image. The result is vastly increased image quality, with incredibly life like colors and crisp detail.

When the video convert function is enabled, video and S-video images can be output to the COMPONENT MONITOR OUT jack.

5 MONITOR OUT

This is a monitor output and each one includes both composite video and S-video configurations. When connecting two video monitors or televisions, be aware that the OSD interface can be used with both MONITOR OUT connections.

6 Preamp Outputs (L, R, SL, SR, SBL, SBR, C)

Jacks for L (front left), R (front right), C (Center), SL (surround left), SR (surround right), SBL (surround back left) and SBR (surround back right). Use these jacks for connection to external power amplifiers.

7 AC INLET

Plug the supplied power cord into this AC INLET and then into the power outlet on the wall. ZR6001 can be powered by 120V AC only.

8 Multiroom Fixed OUTPUT

These are the audio output jacks for the Multi zone (Multi room). Volume is fixed and cannot be changed.

9 IR EMITTER OUT (1-4)

Connect to an IR emitter. These terminals output remote control signals from the ZC4001 over the power line to control sources via the Multi PLC feature.

10 AC OUTLETS

Connect the AC power cables of components such as a DVD and CD player to these outlets. SWITCHED and UNSWITCHED outlets are provided.

The one marked SWITCHED provides power only when the ZR6001 is turned on and is useful for components which you use every time you play your system.

The one marked UNSWITCHED is always live as long as the ZR6001 is plugged into a live outlet.

A component connected here may be left on permanently, or may be switched off with via its own power switch.

Caution:

- In order to avoid potential turn-off thumps, anything plugged into these outlets should be powered up before the ZR6001 is turned on.
- The capacity of this AC outlet is 120W. Do not connect devices that consume electricity more than the capacity of these AC outlets. If the total power consumption of the connected devices exceeds the capacity, the protection circuit shuts down the power supply.

11 Speaker outputs terminals

Seven terminals are provided for the front left, front right, front center, surround left, surround right, surround back left and surround back right speakers.

Note:

- You can use surround back speaker terminals as M (Multiroom) SPEAKER B terminals, when you use no surround back speaker.

12 Subwoofer Output

Connect this jack to the line level input of a powered subwoofer. If an external subwoofer amplifier is used, connect this jack to the subwoofer amplifier input. If you are using two subwoofers, either powered or with a 2 channel subwoofer amplifier, connect a "Y" connector to the subwoofer output jack and run one cable from it to each subwoofer amplifier.

13 7.1 CHANNEL or AUX2 INPUT

By connecting a DVD Audio player, SACD multichannel player, or other components that has a multichannel port, you can playback the audio with 5.1 channel or 7.1 channel outputs.

14 FLASHER IN (Flasher input terminal)

These terminals are for controlling the unit from each room using a keypad, etc.

15 Multiroom Outputs (Audio L&R)

These are the audio output jacks for the Multi zone (Multi room).

Connect these jacks to optional audio power amplifiers to listen the source selected by the multiroom system in a remote room.

16 MULTI ROOM REMOTE IN/OUT terminals

IN: Connect to a multi-room remote control device, available from your Marantz dealer.

OUT: Connect to the Marantz component equipped with remote control (RC-5) terminals in Multi zone (Multi room).

17 REMOTE CONT. IN/OUT terminals

Connect to a Marantz component equipped with remote control (RC-5) terminals.

18 AUDIO IN/OUT (CD, TAPE, CD-R, TV, DVD, VCR1, DSS/VCR2)

These are the analog audio inputs and outputs. There are 7 audio inputs (4 of which are linked to video inputs) and 4 audio outputs (2 of which are linked to video outputs). The audio jacks are nominally labeled for cassette tape decks, compact disc players, DVD players and etc.... The audio inputs and outputs require RCA-type connectors.

19 DIGITAL INPUT (Dig.1 - 4) / OUTPUT (coaxial, optical)

These are the digital audio inputs and outputs. There are 2 digital inputs with coaxial jacks, 2 with optical jacks.

The inputs accept digital audio signals from a compact disc, LD, DVD, or other digital source component.


For digital output, there is 1 coaxial output and 1 optical output.

The digital outputs can be connected to MD recorders, CD recorders, DAT decks, or other similar components.

REMOTE CONTROL OPERATION

FUNCTION AND OPERATION

The provided remote control unit is a universal remote controller. The **POWER** button, numeric buttons and control buttons are used in common across different input source components. The input source controlled with the remote control unit changes when one of the input selector buttons is pressed.

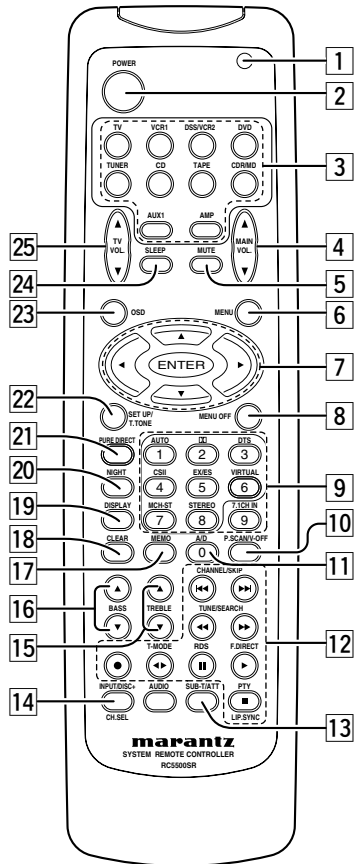

1 Transmitting indicator

Lights up during a button is pressed and an infrared signal is sending.

2 (Main) POWER buttons

(when AMP mode is selected)

Press to switch the power of the ZR6001 ON or OFF after pressing the **AMP** button.

3 Input selector buttons/ FUNCTION SELECTOR buttons (AUDIO/VIDEO INPUT)

These buttons are used to select a Audio or Video source component. Press one of these buttons once to change the function of the remote control. Press same button within 2 seconds, the input function of the ZR6001 is changed.

Audio function sources such as CD, TAPE, CDR/MD, and TUNER may be selected in conjunction with a Video source.

This feature (Sound Injection) combines a sound from one source with a picture from another. Choose the video source first, and then choose a different audio source to activate this function.

Notes:

- CDR/MD button is set CDR function at initial. To switch MD function, press and hold down CDR/MD button and press **2** button.
- To return CDR function, press and hold down CDR/MD button and press **1** button.

4 MAIN VOLUME UP (▲) /DOWN (▼) buttons

Main volume control of the ZR6001. The front, surround, center and subwoofer channel volumes controlled by these buttons simultaneously.

5 MUTE button

Muting button of the ZR6001. Press this button decrease the sound temporarily. Press this button again to return to the previous sound. When this button is pressed, "MUTE" indicator lights up.

6 MENU button

(when AMP mode is selected)

This button is used to enter the SETUP MAIN MENU.

7 Cursor (◀, ▶, ▲, ▼) / ENTER buttons

(when AMP mode is selected)

Use these button when operating the SETUP MAIN MENU.

8 MENU OFF button

(when AMP mode is selected)

This button is used to exit from the SETUP MAIN MENU.

9 Numeric buttons 1 to 9 / Surround mode buttons

Numeric buttons

These buttons are used to enter figures in the selection of a tuner preset station and station name preset or to set select a CD track number, etc. The functions of these buttons are dependent on the function button selected.

Surround mode buttons

(when AMP mode is selected)

These buttons are used to select the surround mode.

10 P.SCAN (Preset scan) / V(Video)-OFF button

(when TUNER mode is selected)

This button is used to start preset scan when ZR6001 is selected TUNER mode.

(when AMP mode is selected)

This is used when switching the video signals from the various monitor outputs to Video-Off mode. (See page 31)

11 0 / A/D button

0 button

This button is used to enter the number "0"

A/D button (when AMP mode is selected)

This is used to switch between the analog and digital inputs.

12 CONTROL buttons

These buttons are used when operating the CD player, TAPE deck, etc.

The function of these buttons are dependent on the function button selected.

For the controllable functions of each input function, please refer to controllable function table on the page 11.

13 SUB-T (Title) / ATT (attenuator) button

When the input signal is too high and the voice distorts even while adjusting the ZR6001 VOLUME control, turn on this function. "ATT" is illuminated when this function is activated.

The input level is reduced. Attenuator is invalid for the output signal of "REC OUT". (See page 31)

Note:

- This function is unavailable while the digital input is selected.

14 INPUT/DISC+ / CH.SEL buttons

This button is used to enter the input level setup menu.

15 TREBLE UP (▲) /DOWN (▼) buttons

These buttons are used to adjust the tone control of high frequency sound for left and right speaker.

16 BASS UP (▲) /DOWN (▼) buttons

These buttons are used to adjust the tone control of low frequency sound for left, right and subwoofer speaker.

17 MEMO button

Memory enable button for various preset functions.

18 CLEAR button

This button is used to cancel for certain memory or programming operations.

19 DISPLAY button

Selects the display mode for the front display of the ZR6001.

20 NIGHT button

Pressing this button prevents the Dolby Digital signal from playback at a loud voice. This function reduces the voice by 1/3 to 1/4 at maximum. Thus, it eliminates the occurrence of an abruptly loud voice at night. However, the function is valid only in the case when the Dolby Digital signal is entered into OPTICAL or COAXIAL and data to compress the voice exists in the signal to be played back. When this button is pressed, the "NIGHT" indicator is illuminated.

21 PURE DIRECT button

When this button is pressed, the tone control circuit is bypassed.

22 SETUP / T.TONE button

(when AMP mode is selected)

Used to enter the test tone menu.

23 OSD button

(when AMP mode is selected)

When this button is pressed, the current setting is displayed on the TV monitor.

24 SLEEP (sleep timer) button

This button is used for setting the sleep timer. It can be operated the same way as the button on the unit.

25 TV VOLUME UP (▲) /DOWN (▼) buttons

These buttons increase or decrease TV's volume.


PROGRAMMING THE REMOTE CONTROLLER

The remote controller RC5500SR must be programmed to use the codes for your appliances of different brands. This is done by keying in a 4-digit code or by scanning the codes until the correct one is found. We recommend to using the 4-digit code. This mode is faster and more reliable. The code scanning method should be used only if you cannot find the code for one of your appliances. The codes are listed at the end of this guide. (SET UP CODES FOR REMOTE CONTROLLER RC5500SR)

Important:

- Use the remote control buttons for programming, not the buttons of the receiver or other appliances.
- Some codes may be not match your equipment. In this case, your equipment cannot be controlled with this remote controller.

PROGRAMMING WITH THE 4-DIGIT CODE

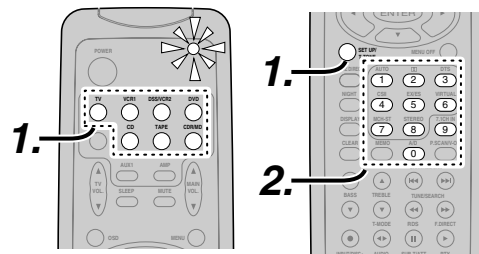


1. Press and hold down the **Function Selector** button for the appliance which should be controlled and press **SETUP** button until the indicator blinks twice.
2. Press the 4-digit code for appliance (code table at the end of this book)
3. When the procedure is successful, the indicator will blink twice.

Note:


- If the indicator did not blink twice, then repeat steps 1 through 2 and try entering the same code again.

SCANNING THE CODE TABLE

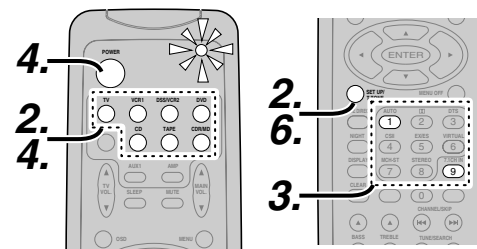

1. Switch on the appliance which should be controlled.
2. Press and hold down the **Function Selector** button for appliance which should be controlled and press **SETUP** button until the indicator blinks twice.
3. Press the code **9 - 9 - 1**. The indicator will blink twice.
4. Aim the remote control at the appliance and slowly alternate between pressing **POWER** button and the **Function Selector** button for the appliance.
5. Stop when the appliance turns off.
6. Press **SETUP** button once to lock in the code.

CHECKING THE CODE

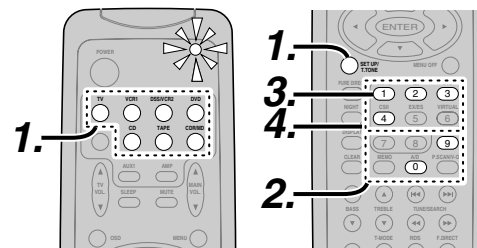


1. Press and hold down the **Function Selector** button for appliance which should be controlled and press **SETUP** button until the indicator blinks twice.
2. Press the code **9 - 9 - 0**. The indicator will blink twice.
3. To view the code for first digit, press **1** once. Wait 3 seconds, count the indicator blinks (e.g. 3 blinks = 3) and write down the number.

Note:

- If a code digit is "0", the indicator will not blink.
4. Repeat step 3 three more times for remaining digits. Use **2** for the second digit, **3** for the third digit, and **4** for the fourth digit.

RESETTING THE ALL CODE

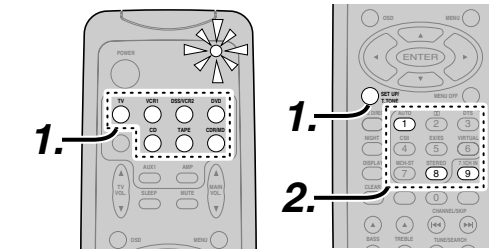

1. Press and hold down the any **Function Selector** button and press **SETUP** button until the indicator blinking twice.
2. Press the code **9 - 8 - 1**. The indicator will blink twice. Then, RC5500SR will return to the factory preset code.

Note:

- After this procedure, the selected function button is set initial code and other function buttons are set initial code too.

Once you have found and the codes for your various appliances, you may want to write them down here.


- TV -----
- VCR -----
- DSS -----
- DVD -----
- CD -----
- TAPE -----
- CDR -----
- MD -----

OPERATION OF REMOTE CONTROL UNIT

REMOTE CONTROL

The distance between the transmitter of the remote control and the IR SENSOR of the ZR6001 should be less than 5 meters. If the remote control is pointed in a direction other than the IR SENSOR or if there is an obstacle between them, use of the remote control may not be possible.

Remote-controllable range

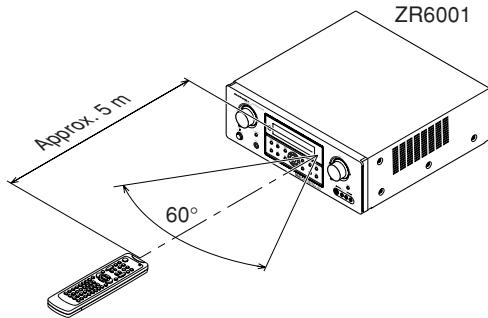


Remote control unit (RC5500SR)


LOADING BATTERIES

The life of the batteries used with the remote control is about 4 months with normal use. Also be sure to replace batteries earlier when you notice that they are getting weak.


1. Remove the back cover.

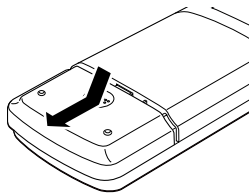

2. Insert the new batteries (AAA type) with correct ⊕ and ⊖ polarity.

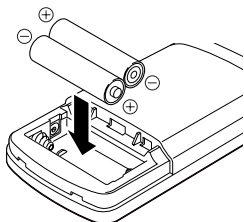

3. Close the cover until it clicks.

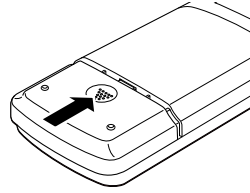

Notes:

- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.


CAUTIONS ON BATTERIES

- Use "AAA" type batteries in this remote control unit.
- If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the + and - marks in the remote control unit's battery compartment.
- To prevent damage or battery fluid leakage:
 - Do not use a new battery with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control unit for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country or area.

GENERAL INFORMATION OF RC5500SR TO ZR6001

To control the ZR6001 by your RC5500SR, you have to select the device AMP or TUNER by pressing the function selector button. Please refer below for the details in AMP and TUNER mode.

AMP MODE

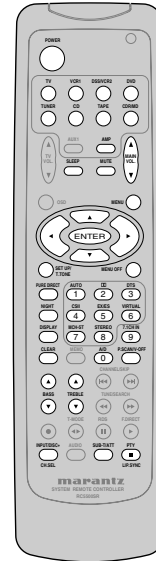

POWER	Turns the ZR6001 on and off
Function selector *	Selects a particular source component
SLEEP *	Sets the sleep timer function
MUTE *	Decreases the sound temporarily
VOL ▲▼ *	Adjusts the over all sound level
MENU	Enters the SETUP MENU
Cursor	Moves the cursor for settings in the SETUP MENU
ENTER	• Enters the SETUP MENU • Confirms the settings in SETUP MENU
SETUP/T.TONE	Enters the test tone mode for setting the Speaker Level Setup
MENU OFF	Exits from the SETUP MENU
PURE DIRECT *	Selects the Pure Direct mode
NIGHT *	Turns on or off the NIGHT mode
DISPLAY *	Change the front display mode
Surround mode (1-8)	Selects the surround mode
7.1CH-IN (9)	Selects the 7.1CH IN
A/D (0)	Switches between the analog and digital inputs
BASS ▲▼ *	Adjusts the tone control of low frequency sound
TREBLE ▲▼ *	Adjusts the tone control of high frequency sound
SUB-T/ATT	Reduces the input level
P.SCAN/V-OFF	Turns on or off the Video output
CH. SEL	Adjusts the input level
LIP.SYNC	Selects the LIP. SYNC mode


* These buttons are used to control ZR6001 in any function mode.

TUNER MODE



TUNER	Selects a frequency band
0-9	Inputs the numeric #s
CLEAR	Clears the inputting
MEMO	Enters the tuner preset memory numbers
P.SCAN/V-OFF	Starts preset scan
CHANNEL/SKIP	• Selects a preset station
◀◀ / ▶▶	
TUNE/SEARCH	Tunes a station
◀◀ / ▶▶	
T-MODE ◀▶	Selects the auto stereo mode or mono mode
F.DIRECT ▶	Selects the "Frequency direct input"

THE CONTRABLE FUNCTION TABLE

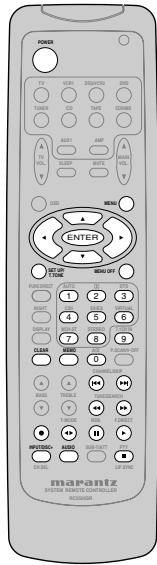


	TV	VCR	DVD	DSS	CD	TAPE	CDR	MD
POWER	POWER	POWER	POWER	POWER	POWER	POWER	POWER	POWER
MENU	CALL UP MENU	CALL UP MENU	CALL UP MENU	CALL UP MENU	SWITCH DISPLAY	SWITCH DISPLAY	SWITCH DISPLAY	SWITCH DISPLAY
Cursor	Cursor	Cursor	Cursor	Cursor	-	-	-	-
ENTER	OK	OK	OK	OK	-	-	-	-
SETUP/T.TONE	-	-	SETUP MENU	-	-	-	-	-
MENU OFF	-	CANCEL MENU	-	CANCEL MENU	-	-	-	-
0 - 9	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC	INPUT NUMERIC
CLEAR	INPUT CLEAR	TAPE SPEED	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR	INPUT CLEAR
MEMO	-	-	CALL PROGRAM	-	CALL PROGRAM	CALL PROGRAM	CALL PROGRAM	CALL PROGRAM
CHANNEL/SKIP ◀◀	CH-	PREV	PREV	CH-	PREV	PREV	PREV	PREV
CHANNEL/SKIP ▶▶	CH+	NEXT	NEXT	CH+	NEXT	NEXT	NEXT	NEXT
TUNE/SEARCH ◀◀	-	REWIND	REWIND	-	REWIND	REWIND	REWIND	REWIND
TUNE/SEARCH ▶▶	-	FF	FF	-	FF	FF	FF	FF
● (REC)	-	REC	-	-	-	REC	REC	REC
T-MODE ◀▶	-	-	-	-	-	DIRECTION	-	-
RDS	-	PAUSE	PAUSE	-	PAUSE	PAUSE	PAUSE	PAUSE
F.DIRECT ▶	-	PLAY	PLAY	-	PLAY	PLAY	PLAY	PLAY
INPUT/DISC+	INPUT SEL.	TV/VCR	DISC+	TV/DSS	DISC+	-	DISC+	-
AUDIO	-	AUDIO	AUDIO	AUDIO	-	-	-	-
PTY ■	-	STOP	STOP	-	STOP	STOP	STOP	STOP
SUB-T/ATT	-	-	SUBTITLE	-	-	-	-	-

CONNECTIONS

CONNECTING FOR THE MULTI PLC LISTENING

Connect the AC power cable of the ZR6001 to a wall electrical outlet. Also connect the AC power cable of the ZC4001 to a wall electrical outlet.


Up to four ZC4001 units may be connected to the same system at one time.

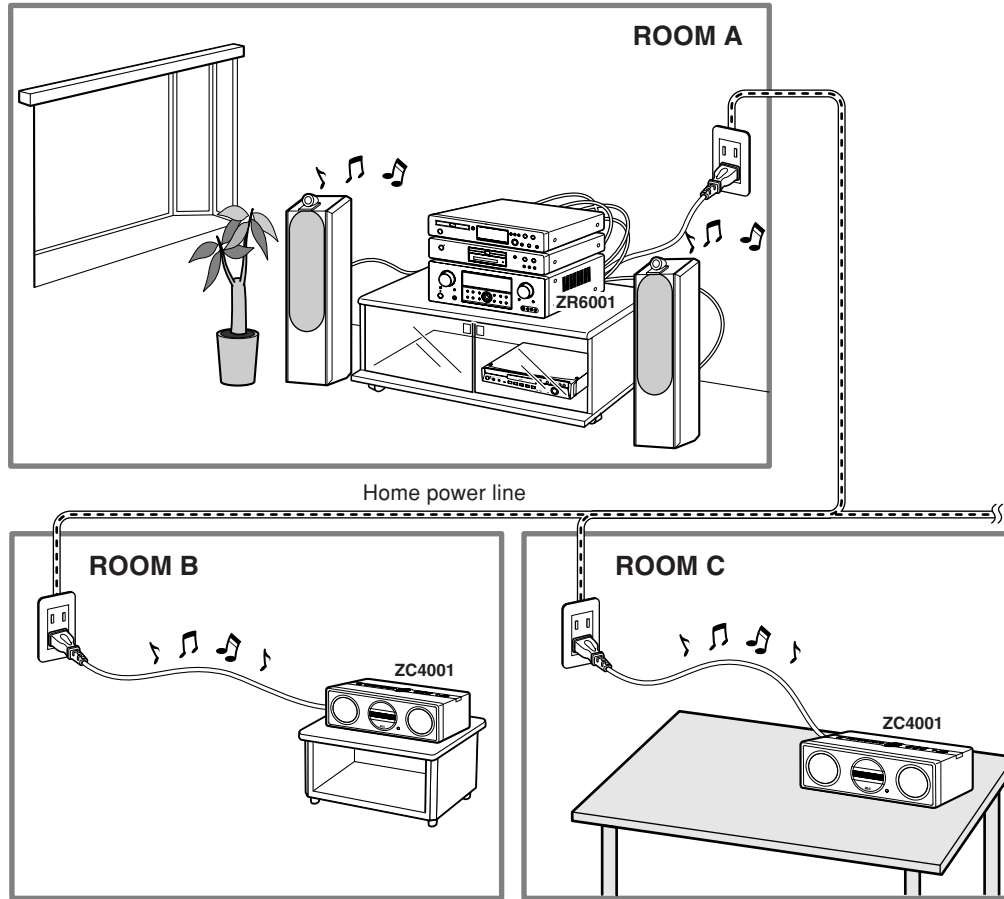


Notes:

- The ZR6001 sends audio data to the ZC4001 over power lines. Therefore, if the condition of the power line degenerates seriously because of the effects of noise from other devices or for other reasons, audio data may not be received or may skip.
- If the distance of the power line between the ZR6001 and ZC4001 is very long, audio data may not be received or may skip.
- At the time of purchase, all ZC4001 and ZR6001 are set to the same Group ID. If used with this same Group ID, you risk having your music listened into by others. Therefore, set the Group ID as explained herein.
- If the following trouble is experienced, block PLC signals from other sources using a commercially available power filter, etc.

When a ZC4001 and ZR6001 are connected over PLC, another ZR6001 cannot be added to the same power line and connected over PLC. In this case, PLC signals are not sent.

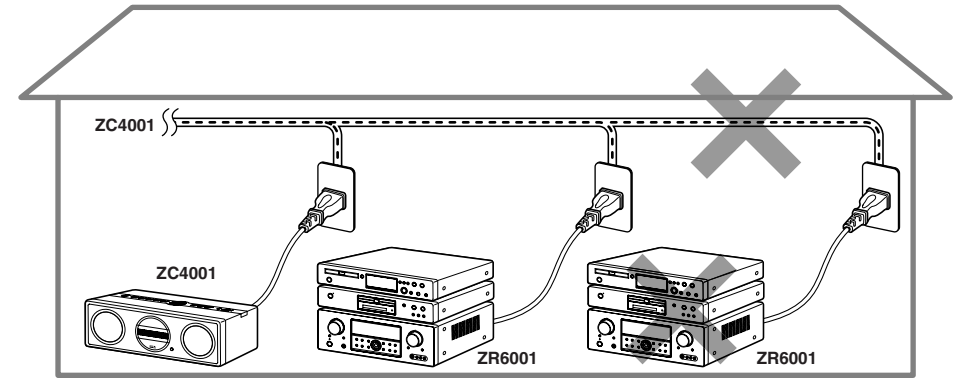


If a ZR6001 and ZC4001 are connected over PLC in a nearby apartment unit for example, and there is only a short distance between your apartment and your neighbor's, the PLC signals from your neighbor's apartment can travel over power lines to your place, mix with your system, and prevent audio output.

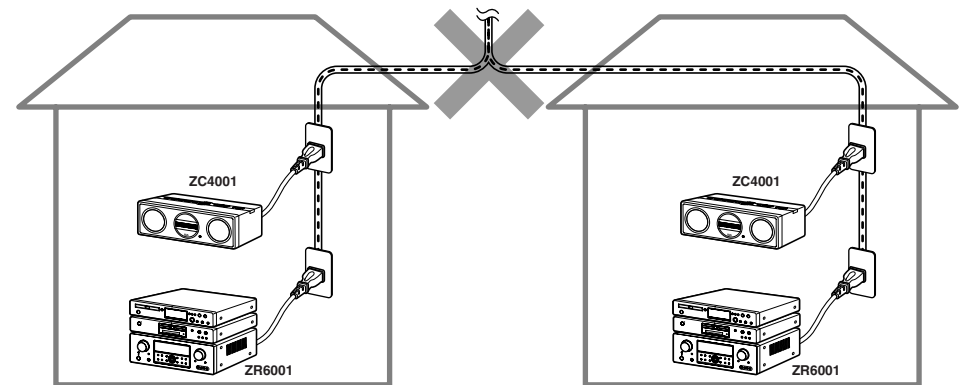

CONNECTING AN IR EMITTER (OTHER BRAND PRODUCT)

When the ZR6001 and ZC4001 are connected via the PLC, the ZC4001 can control other brand product. Other brand product is controlled by remote control signals sent from an emitter connected to the IR EMITTER OUT terminals of the ZR6001 to the IR sensor of the source unit. To control other brand's output, an IR code must be set. If the IR code of the source is unknown, the IR code learning feature must be used.

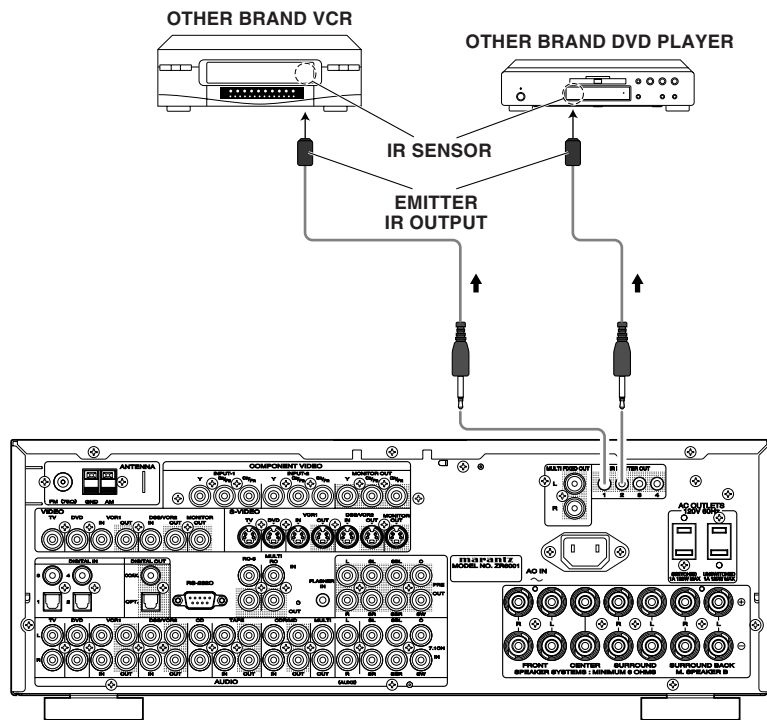

1. Connect an emitter to an IR EMITTER OUT terminal on the ZR6001.
2. Position the IR output of the emitter near to the IR sensor of the other brand source.

Notes:

- Up to 4 emitters can be connected to the ZR6001.
- To control Marantz products from the ZC4001 over a PLC connection, connect the source as explained in "CONNECTING TO THE RC-5" on page 17.

SPEAKER PLACEMENT

The ideal surround speaker system for this unit is 7-speaker systems, using front left and right speakers, a center speaker, surround left and right speakers, a surround back left and right speakers, and a subwoofer.


For best results we recommend that all front speakers be of the same type, with identical or similar driver units. This will deliver smooth pans across the front sound stage as the action moves from side to side.

Your center channel speaker is very important as over 80% of the dialog from a typical motion picture emanates from the center channel.

It should possess similar sonic characteristics to the main speakers. Surround channel speakers need not be identical to the front channel speakers, but they should be of high quality.

The surround center speaker is useful for playback of Dolby Digital Surround EX or DTS-ES. One of the benefits of both Dolby Digital and DTS is that surround channels are discrete full range, while they were frequency limited in earlier "Pro Logic" type systems.

Bass effects are an important part of home theater. For optimal enjoyment a subwoofer should be used as it is optimized for low frequency reproduction. If you have full range front speakers, however, they may be used in place of a subwoofer with proper setting of the switches in the menu system.

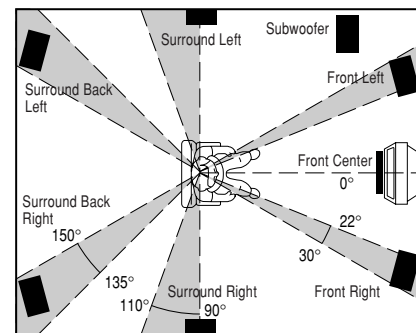

Front left and right speakers

We recommend to set the front L and R speakers with 45-60 degrees from the listening position.

Center speaker

Align the front line of the center speaker with the front L/R speakers. Or place the center speaker a little backward from the line.

Surround left and right speakers

When the ZR6001 is used in surround operation, the preferred location for surround speakers is on the side walls of the room, at or slightly behind the listening position.

The center of the speaker should face into the room.

Surround back left and right speakers

Surround back speakers are required when a full 7.1-channel system is installed.

Speakers should be placed on a rear wall, behind the listening position.

The center of the speaker should face into the room.

Subwoofer

We recommend using a sub-woofer to have maximum bass effect. Sub-woofer bears only low frequency range so you can place it anywhere in the room.


HEIGHT OF THE SPEAKER UNITS

Front left and right speakers, and a center speaker

Align the tweeters and mid-range drivers on the three front speakers at the same height, as best as possible.

Surround left and right speakers, and surround back speaker


Place the surround left, right and surround back speakers higher than your ears by about 2 Ft. – 3 Ft. (70 cm – 1 m). Also place the speakers at the same height, as best as possible.

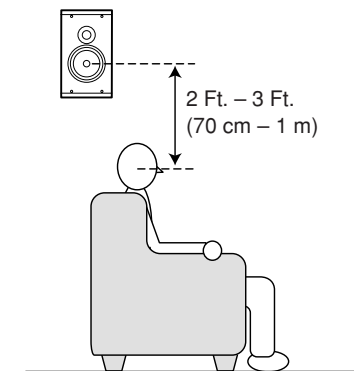

Note:


- Use magnetically-shielded speakers for front left, right and the center speakers when the speakers are installed near the TV and the TV is a monitor type.

CONNECTING SPEAKERS

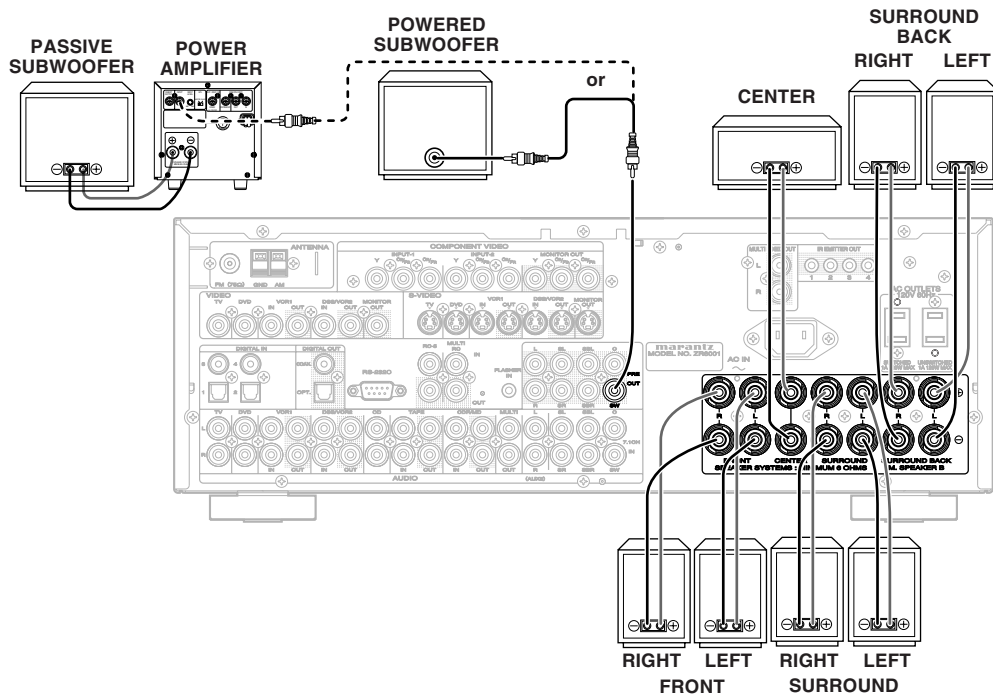


CONNECTING SPEAKER WIRE

1. Strip away approx. 3/8 inch (10 mm) of wire insulation.
2. Twist the bared wire ends tight, to prevent short circuits.
3. Loosen the knob by turning it counterclockwise.
4. Insert the bare part of the wire into the hole in side of each terminal.
5. Tighten the knob by turning it clockwise to secure the wire.

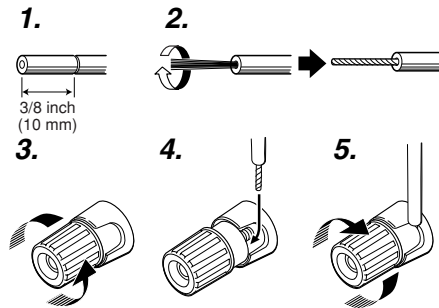

Caution:

- Be sure to use speakers with the specified impedance as shown on the rear panel of this unit.
- To prevent damage to circuitry, do not let the bare speaker wires touch each other and do not let them touch any metal part of this unit.
- Do not touch the speaker terminals when the power is on. It may cause you to receive an electric shocks.
- Do not connect more than one speaker cable to one speaker terminal. Doing so may damage this unit.

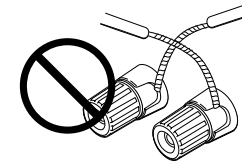


Note:

- Be sure to connect the positive and negative cables for the speaker properly. If they are miss-connected, the signal phase will be reversed and the signal quality will be corrupted.

CONNECTING A SUBWOOFER

Use the PRE OUT SUBWOOFER jack to connect a powered subwoofer (power amplifier built in). If your subwoofer is a passive type (power amplifier is not built in), connect a monaural power amplifier to the PRE OUT SUBWOOFER jack and connect the subwoofer to the amplifier.

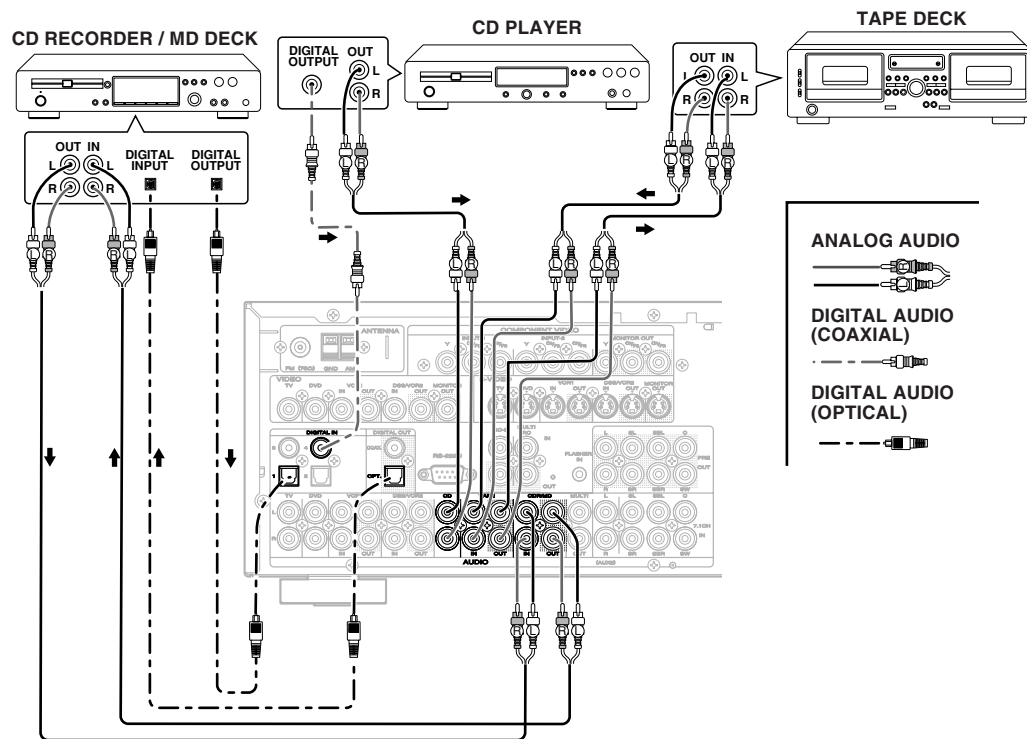

The output audio signal from the TAPE OUT jack and the CD-R/MD OUT jack is the same signal which is currently selected.

Caution:

- Do not connect this unit and other components to mains power until all connections between components have been completed.

Notes:

- Insert all plugs and connectors securely. Incomplete connections may make noise.
- Be sure to connect the left and right channels properly.
Red connectors are for the R (right) channel, and white connectors are for the L (left) channel.
- Be sure to connect input and output properly.
- Refer to the instructions for each component that is connected to this unit.
- Do not bind audio/video connection cables with power cords and speaker cables this will result in generating a hum or other noise.



CONNECTING DIGITAL AUDIO COMPONENTS

- There are 4 digital inputs, 2 coaxial jacks and 2 optical jacks, on the rear panel. You can use these jacks to input PCM, Dolby Digital and DTS bitstream signals from a CD, DVD, or other digital source components.
- There is one digital output coaxial jack and one optical output jack on the rear panel. These jacks can be connected to a CD recorder-, or a MD deck inputs, respectively.
- Refer to the instructions for each component. To setup the digital audio format of DVD player, or other digital source's connected to digital input jacks.
- Use fiber optical cables (optical) for DIG-1,2 input jacks. Use 75 ohms coaxial cables (for digital audio or video) for DIG-3, 4 input jacks.
- You can designate the input for each digital input/output jacks according to your component. See page 20.

Notes:

- There is no Dolby Digital RF input jack. Please use an external RF demodulator Dolby Digital decoder when connecting the Dolby Digital RF output jack of the video disc player to the digital input jack.
- The digital signal jacks on this unit conform to the EIA standard. If you use a cable that does not conform to this standard, this unit may not function properly.
- Each type of audio jack works independently. Signals input through the digital and analog jacks are output through the corresponding digital and analog jacks, respectively.

CONNECTING VIDEO COMPONENTS

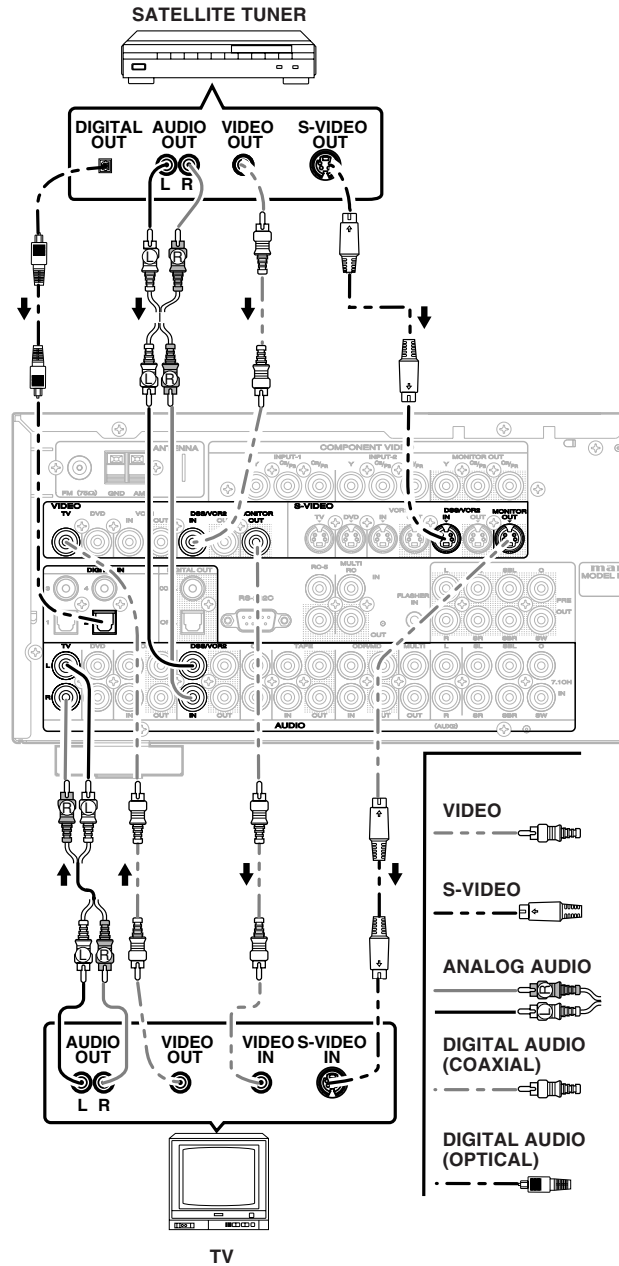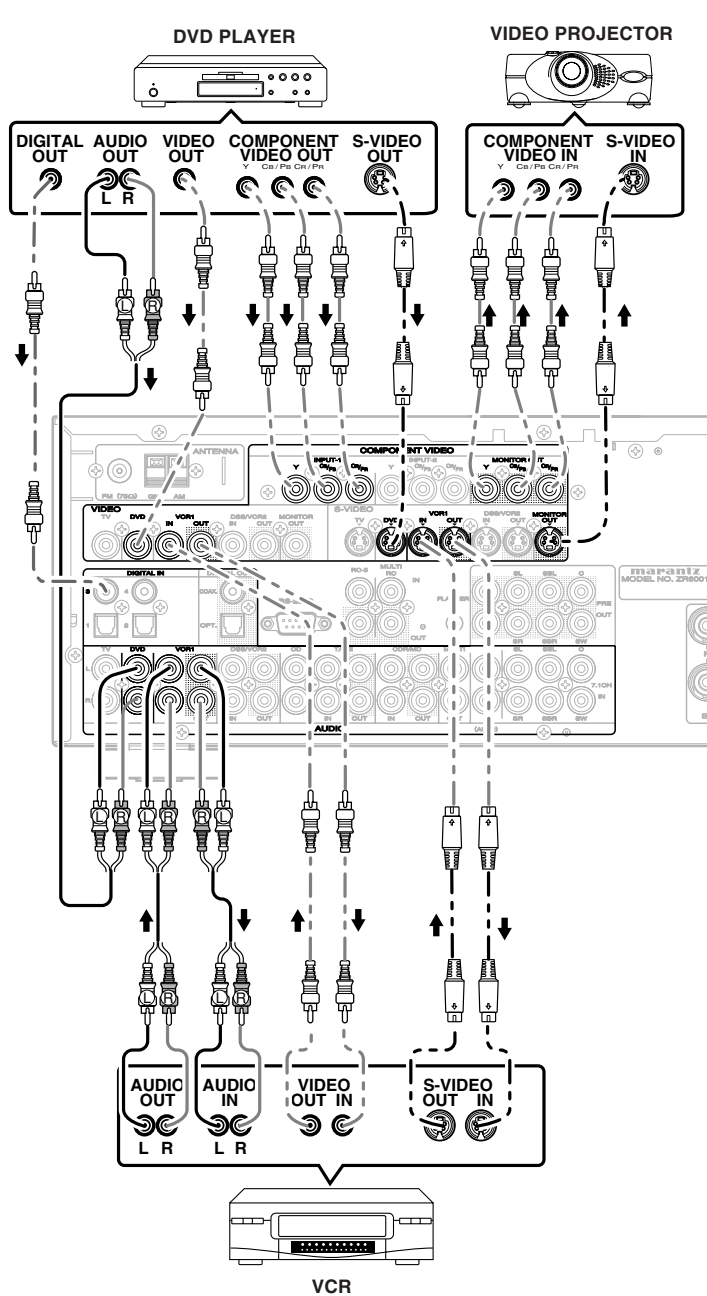

VIDEO, S-VIDEO, COMPONENT JACKS

There are 3 types of video jacks on the rear panel.

VIDEO jack

The video signal for the VIDEO jacks is the conventional composite video signal.

S-VIDEO jack


The video signal is separated into luminance (Y) and color (C) signals for the S-VIDEO jack. The S-VIDEO signals enables high-quality color reproduction. If your video component has an S-VIDEO output, we recommend to use it. Connect the S-VIDEO output jack on your video component to the S-VIDEO input jack on this unit.

Component jack

Make component video connections to a TV or monitor with component inputs to produce higher quality video images. Use a component video cable or 3 video cords to connect the component video out jacks on the ZR6001 to the monitor.

Notes:

- Be sure to connect the left and right audio channels properly.
Red connectors are for the R (right) channel, and white connectors are for L (left) channel.
- Be sure to connect the inputs and outputs of the video signals properly.
- If you connect the S-VIDEO or component signal to the S-VIDEO or component jack on this unit, it is not necessary to connect the conventional video signal to the VIDEO (composite) jack. If you use both video inputs, this unit gives priority to the S-VIDEO signal.
- Each type of video jack works independently. Signals input to the VIDEO (composite) and S-VIDEO jacks or component are output to the corresponding VIDEO (composite) and S-VIDEO or component jacks, respectively.
- This unit has the "TV-AUTO ON/OFF" function to turn the TV ON or OFF automatically, by sensing the incoming video signal from the VIDEO jacks.
- You may need to setup the digital audio output format of your DVD player, or other digital source components. Refer to the instructions of the each component connected to the digital input jacks.
- There is no Dolby Digital RF input jack. Please use an external RF demodulator with a Dolby Digital decoder to connect a video disc player which has a Dolby Digital output jack to the digital input jack on this unit.

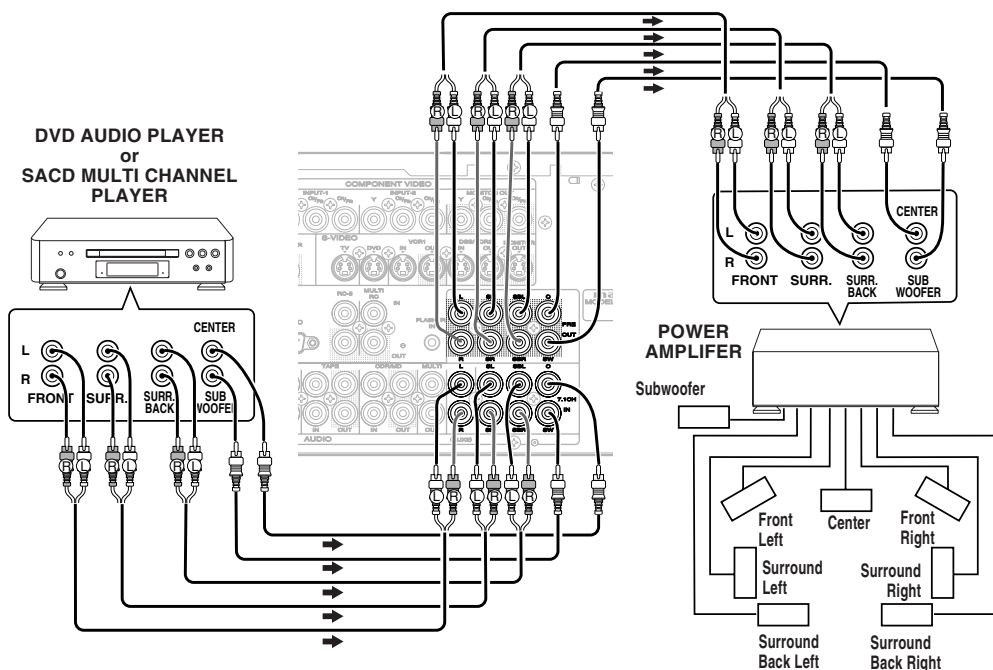


CONNECTING MULTI CHANNEL AUDIO SOURCE

The 7.1CH INPUT jacks are for multichannel audio source such as a SACD multichannel player, DVD audio player or external decoder. If you use these jacks, switch on the 7.1CH INPUT and set the 7.1CH INPUT level by using the SETUP MAIN MENU. See page 32.

CONNECTING AN EXTERNAL POWER AMPLIFIER

The PREOUT jacks are for connecting external power amplifiers. Be sure to connect each speaker to the corresponding external power amplifier.

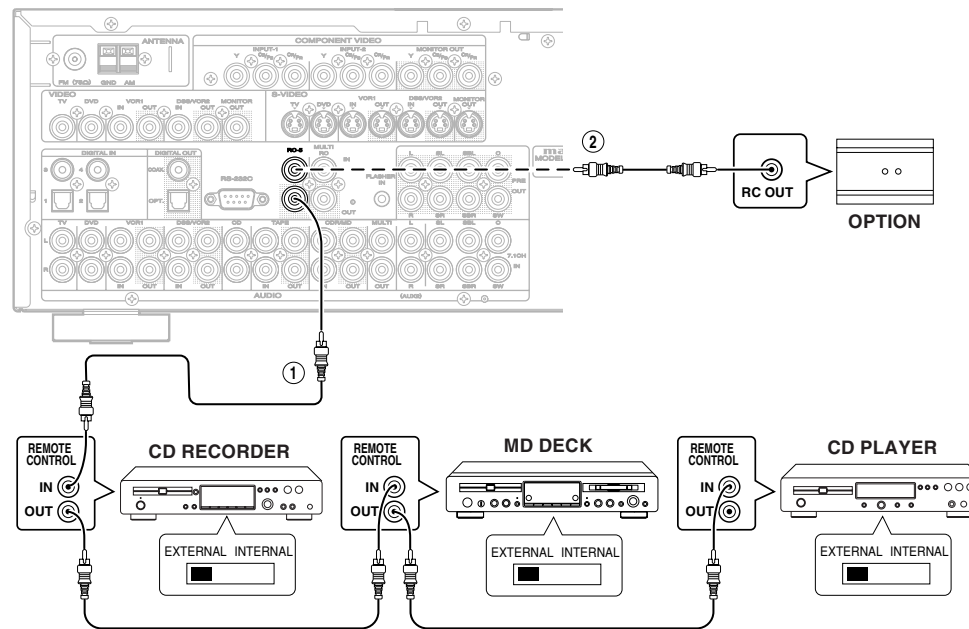

①

You can control other Marantz products through this unit with the remote control by connecting the REMOTE CONTROL terminals on each unit. The signal transmitted from the remote control is received by the remote sensor on this unit. Then the signal is sent to the connected device through this terminal. Therefore you need to aim the remote signal only to the unit. Also, if a Marantz power amplifier (some models excluded) is connected to one of these terminals, the power amplifier's power switch is synchronized with this unit's power switch.

Set the REMOTE CONTROL SWITCH on the units, other than the main unit to EXT.(EXTERNAL) for this feature.

②


Whenever external infrared sensors or similar devices are connected to RC-5 IN of the ZR6001, be sure to always disable operation of the infrared sensor on the main unit by using the following procedure.

1. Hold down the **MULTI** button and **MENU** button on the front panel at the same time for five seconds.
2. The setting "IR=ENABLE" is shown on the FL DISPLAY.
3. Press the ◀ or ▶ cursor button to change this to "IR=DISABLE".
4. Press the **ENTER** button. Once this setting is made, the infrared sensor on the main unit is disabled.

Note:


- Be sure to set to "IR=ENABLE" when external infrared sensors or similar devices are not connected. Otherwise, the main unit will be unable to receive remote control commands.
5. To restore the original setting, perform steps 1 to 4 to set to "IR=ENABLE".

CONNECTING THE ANTENNA TERMINALS

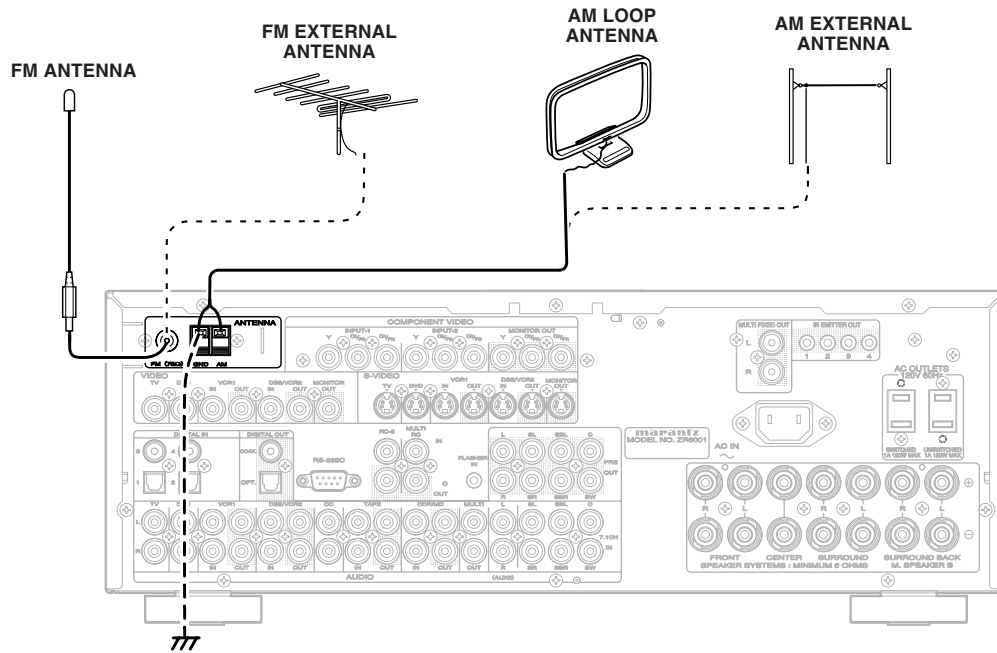


ASSEMBLING THE AM LOOP ANTENNA


1. Release the vinyl tie and take out the connection line.

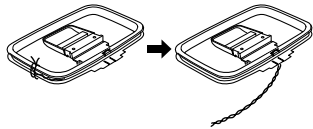


2. Bend the base part in the reverse direction.

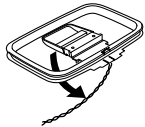

3. Insert the hook at the bottom of the loop part into the slot at the base part.

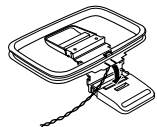

 4. Place the antenna on stable surface.

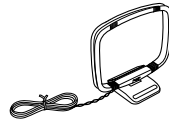

CONNECTING THE SUPPLIED ANTENNAS

Connecting the supplied FM antenna

The supplied FM antenna is for indoor use only. During use, extend the antenna and move it in various directions until the clearest signal is received. Fix it with push pins or similar implements in the position that will cause the least amount of distortion. If you experience poor reception quality, an outdoor antenna may improve the quality.

Connecting the supplied AM loop antenna

The supplied AM loop antenna is for indoor use only.

Set it in the direction and position it to where you receive the clearest sound. Put it as far away as possible from the unit, televisions, speaker cables, and power cords.

If you experience poor reception quality, an outdoor antenna may improve the quality.

1. Press and hold down the lever of the AM antenna terminal.
2. Insert the bare wire into the antenna terminal.
3. Release the lever.

CONNECTING AN FM OUTDOOR ANTENNA

Notes:


- Keep the antenna away from noise sources (neon signs, busy roads, etc.).
- Do not put the antenna close to power lines. Keep it well away from power lines, transformers, etc.
- To avoid the risk of lightning and electrical shock, grounding is necessary.

CONNECTING AN AM OUTDOOR ANTENNA

An outdoor antenna will be more effective if it is stretched horizontally above a window or outside.

Notes:

- Do not remove the AM loop antenna.
- To avoid the risk of lightning and electrical shock, grounding is necessary.

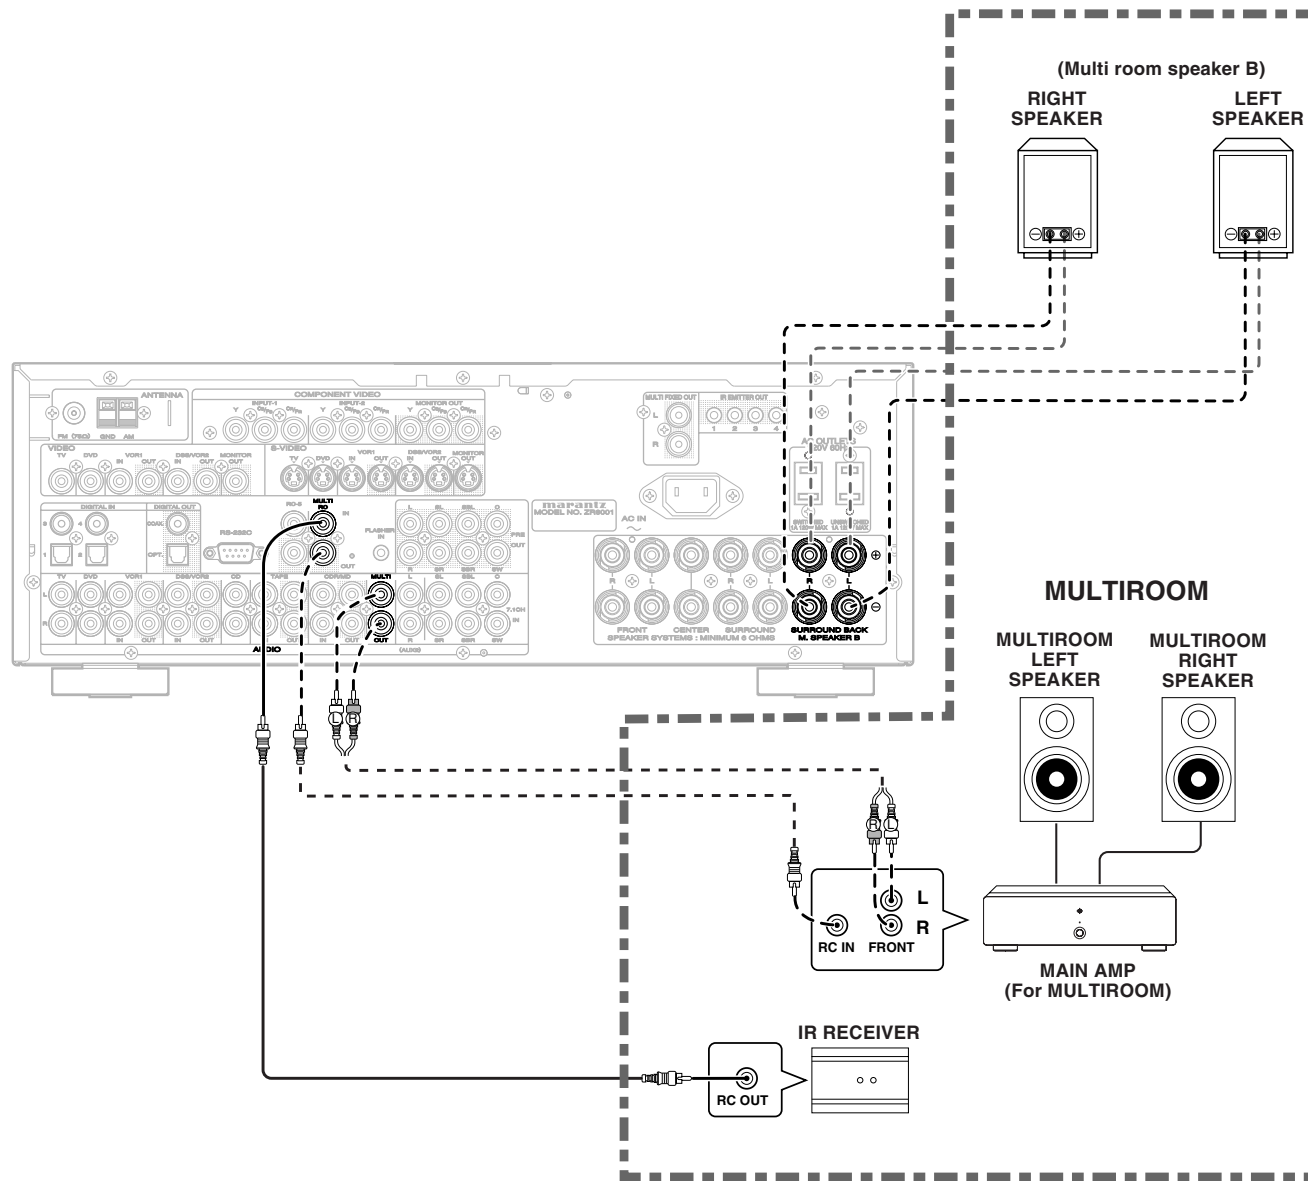

Note:

- You can use surround back speaker terminals as multi room speaker terminals when you use no surround back speaker.

SETUP

After all components are connected, initial setup must be performed.

ON SCREEN DISPLAY MENU SYSTEM

The ZR6001 incorporates an on-screen menu system, which makes various operations possible by using the cursor (▲, ▼, ◀, ▶) and **ENTER** buttons on the remote control or on the front panel.


Note:

- To view the on-screen displays, make certain you have made a connection from the Monitor Out jack on the rear panel to the composite, S-Video, component video input of your TV or projector. (see page 16)

- Press the **AMP** button of the remote control. (This step is not needed when operating the setup menus from the receiver itself.)
- Press the **MENU** button on the remote control or set to display the "SETUP MAIN MENU" of the OSD menu system. There are 8 items in the SETUP MAIN MENU.
- Select a desired sub-menu with the ▲ or ▼ cursor buttons, and press the **ENTER** button to enter. The display will change to the selected sub-menu. You can lock the condition of setup to each sub-menu with the ◀ or ▶ or cursor buttons.

Note:

- If you desire to adjust any sub-menu, you need to set it to UNLOCKED.
- If you desire to exit from this menu system, press the **EXIT** button, or move the cursor to **EXIT** and press the **ENTER** button.

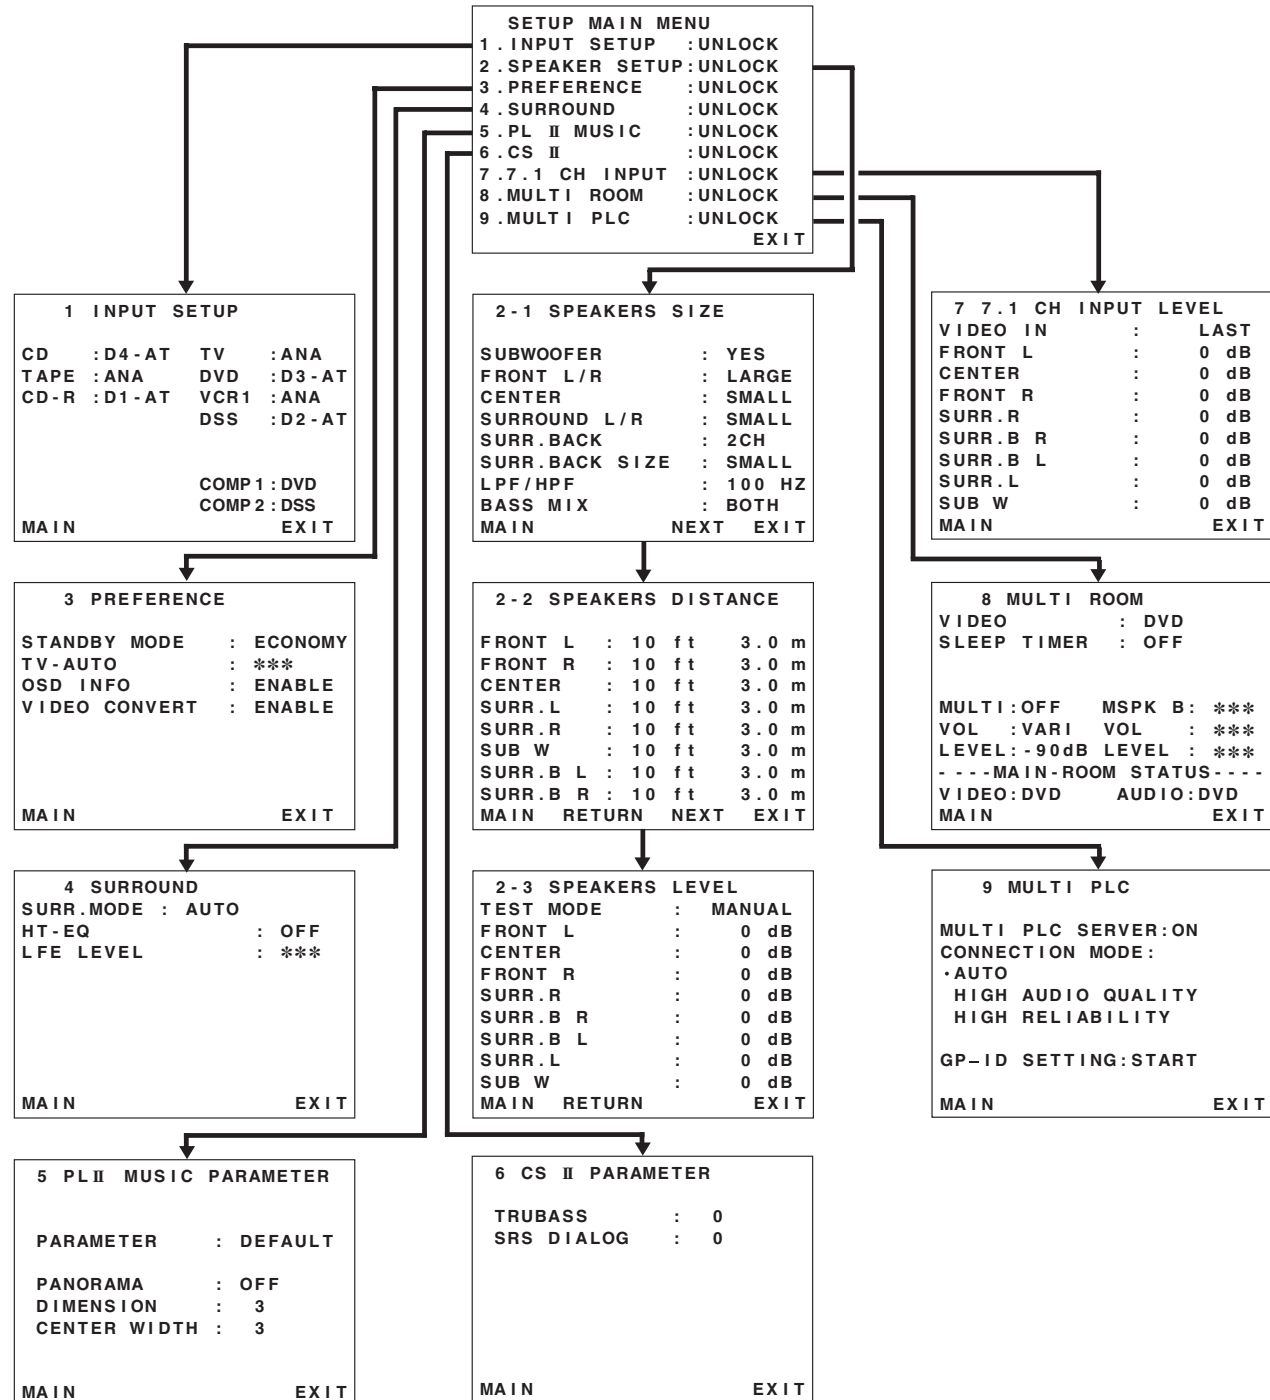

1 INPUT SETUP (ASSIGNABLE DIGITAL INPUT AND COMPONENT VIDEO INPUT)

4 digital inputs and 2 component video inputs can be assigned to a desired source. Use this menu to select the digital input jack to be assigned to the input source.

1. Select "INPUT SETUP" in SETUP MAIN MENU with ▲ or ▼ cursor button, and press the ENTER button.

1 INPUT SETUP			
CD	: D4 - AT	TV	: ANA
TAPE	: ANA	DVD	: D3 - AT
CD - R	: D1 - AT	VCR1	: ANA
		DSS	: D2 - AT
		COMP 1	: DVD
		COMP 2	: DSS
MAIN		EXIT	

2. To select the input source, press the ▲ or ▼ cursor buttons.
3. To select the digital input jack, press the ◀ or ▶ cursor buttons.
Select "Dx-AT" for input sources, for automatic detection of the digital input signal condition. If there is not a digital signal present, but there is an analog signal present, the analog signal will be played.
Select "Dig x", when only a digital signal will be used. Select "ANA" for input sources for which no digital input jacks are used.
4. To select the video source, select "COMP1" or "COMP2" by pressing the ▲ or ▼ cursor buttons, and press the ◀ or ▶ cursor buttons to select the video source to be assigned.
5. After you complete this portion of the set up, move the cursor to MAIN with the ▲ or ▼ cursor buttons and press the ENTER button.

Notes:

- The TUNER, AUX1 and AUX2 are fixed to the analog input, and cannot be selected for any digital input.
- When a DTS-LD or DTS-CD is playing, this setup is not available. This is to avoid noise being generated from the analog input.
- If "Dx-AT" is selected and a DVD, compact disc or LD is fast-forwarded during playback, decoded signals may produce a skipping sound. In such cases, change the setting to DIGITAL.

2 SPEAKER SETUP

After you have installed the ZR6001, connected all the components, and determined the speaker layout, it is now time to perform the settings in the Speaker Setup menu for the optimum sound acoustics for your environment and speaker layout.

Before you perform the following settings, it is important that you first determine the following characteristics:

2-1 SPEAKERS SIZE

When setting the speaker size in the SPEAKER SIZE sub-menu, use the guidelines given below.

LARGE:

The complete frequency range for the channel you are setting will be output from the speaker.

SMALL:

Frequencies of the channel you are setting lower than approx. 100 Hz will be output from the subwoofer.

If the Subwoofer is set to "NONE" and the front speakers are set to "LARGE," then the sound will be output from both the left and right speakers.

2 - 1 SPEAKERS SIZE	
SUBWOOFER	: YES
FRONT L/R	: LARGE
CENTER	: SMALL
SURROUND L/R	: SMALL
SURR. BACK	: 2CH
SURR. BACK SIZE	: SMALL
LPF/HPF	: 100 HZ
BASS MIX	: BOTH
MAIN	NEXT EXIT

1. Select "SPEAKER SETUP" in SETUP MAIN MENU with ▲ or ▼ cursor button, and press the ENTER button.
2. To select the each speaker, press the ▲ or ▼ cursor buttons.
3. To select the setting of each speaker size, press the ◀ or ▶ cursor buttons.
4. After you complete this portion of the set up, move the cursor to "NEXT" with the ▲ or ▼ cursor buttons and then press the ENTER button to go to the next page.

SUBWOOFER:

YES:

Select when a subwoofer is connected.

NONE:

Select when a subwoofer is not connected.

FRONT L/R

LARGE:

Select if the front speakers are large.

SMALL:

Select if the front speakers are small.

- If "NONE" is selected for the Subwoofer setting, then this setting is fixed to "LARGE."

CENTER

NONE:

Select if no center speaker is connected.

LARGE:

Select if the center speaker is large.

SMALL:

Select if the center speaker is small.

SURROUND L/R

NONE:

Select if no surround left and right speakers are connected.

LARGE:

Select if the surround left and right speakers are large.

SMALL:

Select if the surround left and right speakers are small.

SURR. BACK

NONE:

Select if no surround back left and right speakers are connected.

2CH:

Select if the surround back left and right speakers are connected.

1CH:

Select if the one surround back speaker is connected.

In this case, the audio signal is emitted from the Surround L output terminal.

Notes:

- If "NONE" is selected for the Surround L/R setting, then this setting is fixed to "NONE."
- You can use surround back speaker terminals as multi room speaker terminals when you use no surround back speaker. (See page 19)

SURR. BACK SIZE

LARGE:

Select if the surround back speaker is large.

SMALL:

Select if the surround back speaker is small.

Note:

- If "NONE" is selected for the Surround L/R setting, then this setting is not available.

LPF/HPF

When you use a subwoofer, you can select the cutoff frequency for the small speakers used. Select one of the crossover frequency levels according to the size of the small speaker connected.

80Hz:

Select this when the bass speaker is about 12 cm (4 3/4 inches).

100Hz:

Select this when the bass speaker is about 10 cm (3 15/16 inches).

120Hz:

Select this when the bass speaker is about 8 cm (3 3/16 inches).

Notes:

- Use the above comments as reference when adjusting.
- If Pure-Direct mode, 7.1CH Input is in use, this function does not take effect.

BASS MIX

The bass mix setting is only valid when "LARGE" is set for the front speakers and "YES" is set for the subwoofer during stereo playback.

This setting has effect only during playback of PCM or analog stereo sources.

When "BOTH" is selected, the low frequencies will be played through the main L&R, as well as the sub woofer.

In this playback mode, the low frequency range expand more uniformly through the room, but depending on the size and shape of the room, interference may result in a decrease of the actual volume of the low frequency range.

By selecting "MIX", the low frequencies will play through the main L&R ONLY.

Note:

- LFE signals during playback of Dolby Digital or DTS, will be played through the sub woofer.

2-2 SPEAKERS DISTANCE

Use this parameter to specify the distance of each speaker's position from the listening position. The delay time is automatically calculated according to these distances.

Begin by determining the ideal or most commonly used seating position in the room.

This is important for the timing of the acoustics to create the proper sound space that the ZR6001 and today's sound systems are able to produce.

Note:

- For speakers that you have selected "NONE" the Speaker Configuration sub-menu will not appear here. (There are several useful books and special DVD and LD's available to guide you through proper home theater configuration. If you are unsure, have your Marantz dealer perform the installation for you. They are trained professionals familiar with even the most sophisticated custom installations. Marantz recommends the WWW.CEDIA.ORG website for further information about this).

2 - 2 SPEAKERS DISTANCE		
FRONT L	: 10 ft	3.0 m
FRONT R	: 10 ft	3.0 m
CENTER	: 10 ft	3.0 m
SURR. L	: 10 ft	3.0 m
SURR. R	: 10 ft	3.0 m
SUB W	: 10 ft	3.0 m
SURR. B L	: 10 ft	3.0 m
SURR. B R	: 10 ft	3.0 m
MAIN	RETURN	NEXT EXIT

- To select each speaker, press the ▲ or ▼ cursor buttons.
- To set the distance for each speaker, press the ◀ or ▶ cursor buttons.
- After you complete this portion of the set up, move the cursor to "NEXT" with the ▲ or ▼ cursor buttons and then press the ENTER button to go to the next page.

FRONT L:

Set the distance from the front left speaker to your normal listening position.

Center:

Set the distance from the center speaker to your normal listening position.

FRONT R:

Set the distance from the front right speaker to your normal listening position.

SURR. L:

Set the distance from the surround left speaker to your normal listening position.

SURR. R:

Set the distance from the surround right speaker to your normal listening position.

SUB W:

Set the distance from the subwoofer to your normal listening position.

SURR. B L:

Set the distance from the surround back left speaker to your normal listening position.

SURR. B R:

Set the distance from the surround back right speaker to your normal listening position.

Notes:

- Set the distance to each speaker in meters (m) or feet (ft) as follows.
m: 0.3 - 9 m in 0.3 m steps
ft: 1 - 30 ft in 1 ft steps
- For the speakers that you have selected "NONE" the Speaker Size menu will not appear.
- The setting for Surr.Back L and Surr.Back R appears if you set for it to, two surround back speakers in the Speaker Size menu.
- The setting of Surr.Back appears if it is set for one surround back speaker in the Speaker Size menu.

2-3 SPEAKERS LEVEL SETTING WITH TEST TONE

Here you will set the volume for each speaker so that they are all heard by the listener at the same level. We recommend using a SPL (Sound Pressure Level) meter, when available.

Note:

- The speaker level settings are not available in 7.1 Channel Input mode, CS mode and Multi Channel Stereo mode.

2 - 3 SPEAKERS LEVEL		
TEST MODE	:	MANUAL
FRONT L	:	0 dB
CENTER	:	0 dB
FRONT R	:	0 dB
SURR. R	:	0 dB
SURR. B R	:	0 dB
SURR. B L	:	0 dB
SURR. L	:	0 dB
SUB W	:	0 dB
MAIN	RETURN	EXIT

TEST MODE :

Selects "MANUAL" or "AUTO" for generating the mode of the test tone with the ◀ or ▶ cursor buttons.

If you select "AUTO", the test tone will be cycled through in a circular pattern which is Left → Center → Right → Surround Right → Surround Back Right → Surround Back Left → Surround Left → Subwoofer → Left →.. increments of 2 seconds for each channel.

Using the ◀ or ▶ cursor buttons, adjust the volume level of the noise from the speaker so that it is the same level for all the speakers.

If you select "MANUAL", adjust the output level of each speaker as listed below.

- When you move the cursor to FRONT L by pressing the ▼ cursor button, the ZR6001 will emit a pink noise from the front left speaker. Remember the level of this noise and then press the ▼ cursor button.
(Note that this can be adjusted to any level between -10 and +10 dB in 1 dB intervals except the subwoofer setting. The subwoofer can be adjusted to any level between -15 and +10 dB in 1 dB intervals.)
The ZR6001 will now emit the pink noise from the center speaker.
- Using the ◀ and ▶ cursor buttons, adjust the volume level of the noise from the center speaker so that it is the same level as the front left speaker.
- Press the ▼ cursor button again. The ZR6001 will now emit the pink noise from the front right speaker.
- Repeat steps 2 and 3 above for the front right and other speakers until all speakers are adjusted to the same volume level.

After you complete this portion of the set up, press the ENTER button, the cursor will move to "MAIN" and then press the ENTER button to go to SETUP MAIN MENU.

Notes:

- Speakers that you selected "NONE" for in the Speaker Size menu will not appear.
- The setting of Surr.Back L and Surr.Back R appears if you have set it for two surround back speakers in the Speaker Size menu.
- The setting of Surr.Back appears if you have set it for one surround back speaker in the Speaker Size menu.
- To adjust the speaker levels for 7.1-channel input sources, you will need to use the 7.1CH-INPUT sub menu. (See page 24).

3 PREFERENCE

3 PREFERENCE	
STANDBY MODE	: ECONOMY
TV - AUTO	: ***
OSD INFO	: ENABLE
VIDEO CONVERT	: ENABLE
MAIN	EXIT

- Select "PREFERENCE" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
- To select a desired content, press the ▲ or ▼ cursor buttons.

STANDBY MODE:

When this function is set to "ECONOMY", you can reduce the power consumption when the unit is in the standby mode.

Note:

- TV-AUTO and RS-232C are disabled in the "ECONOMY" setting.

TV AUTO:

Select the TV AUTO ON/OFF function to enable or disable with the ◀ or ▶ cursor buttons. (refer to page 31)

OSD Info:

Select the OSD information function to enable or disable with the ◀ or ▶ cursor buttons.

If you select "ENABLE", the ZR6001 will display the status of the feature (Volume up/down, input select, etc..) on the TV monitor. But if you do not desire this information, select "DISABLE".

VIDEO CONVERT:

Select the VIDEO CONVERT function to enable or disable with the ◀ or ▶ cursor buttons. (Video cable connection: Refer to page 27)

After you complete this portion of the set up, move the cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

4 SURROUND

4 SURROUND	
SURR. MODE :	AUTO
HT-EQ :	OFF
LFE LEVEL :	0 dB
MAIN	EXIT

1. Select "SURROUND" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. To select a desired content, press the ▲ or ▼ cursor buttons.

SURR.MODE:

Select the desired surround mode with the ◀ or ▶ cursor buttons.

HT-EQ:

Select to activate the HT-EQ with the ◀ or ▶ cursor buttons.

The tonal balance of a film soundtrack will be excessively bright and harsh when played back over audio equipment in the home. This is because film soundtracks were designed to be played back in large movie theater environments. Activating the HT-EQ feature when watching a film made for movie theaters corrects this and restores the correct tonal balance.

The HT-EQ feature is available except in the following modes.

- 7.1 CH INPUT
- PURE-DIRECT
- When VIRTUAL is set for the surround mode

LFE LEVEL:

Select the output level of the LFE signal included in the Dolby Digital signal or the DTS signal.

Select 0 dB, -10 dB or OFF with the ◀ or ▶ cursor buttons.

After you complete this portion of the set up, move the cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

5 PL II (PRO LOGIC II) MUSIC PARAMETER

Pro Logic II-Music mode creates a rich and enveloping surround ambience from stereo sources such as CDs.

In this mode, ZR6001 includes three controls to fine-tune the soundfield as follows.

5 PL II MUSIC PARAMETER	
PARAMETER :	DEFAULT
PANORAMA :	OFF
DIMENSION :	3
CENTER WIDTH :	3
MAIN	EXIT

Select "PL II MUSIC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.

PARAMETER:

Select "DEFAULT" or "CUSTOM" with the ◀ or ▶ cursor buttons.

If you select "CUSTOM", you can adjust three parameters as listed below.

PANORAMA:

Select the Panorama mode On or Off with the ◀ or ▶ cursor buttons.

Panorama wraps the sound of the front left and right speakers around you, for an exciting perspective.

DIMENSION:

Set the Dimension level between 0 and 6 level in 1 level intervals with the ◀ or ▶ cursor buttons.

Adjust the soundfield either towards the front or towards the rear.

This can be useful to help achieve a more suitable balance from all the speakers with certain recordings.

CENTER WIDTH:

Set the Center width level between 0 and 7 in 1 level intervals with the ◀ or ▶ cursor buttons.

Center Width allows you to gradually spread the center channel sound into the front left and right speakers.

At its widest setting, all the sound from the center is mixed into the left and right.

This control may help achieve a more spacious sound or a better blend for the front image.

If "NONE" was selected for the Center speaker setting, in the Speaker size set up menu, then this setting will not appear.

After you complete this portion of the set up, move cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

6 CS II (CIRCLE SURROUND II) PARAMETER

6 CS II PARAMETER	
TRUBASS :	0
SRS DIALOG :	0
MAIN	EXIT

1. Select "CS II" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the ENTER button.
2. To Select desired contents as below, press the ▲ or ▼ cursor buttons.

TRUBASS:

Set the TRUBASS level between 0 and 6 level in 1 level interval with the ◀ or ▶ cursor buttons.

TRUBASS produced by the speakers are an octave below the actual physical capabilities of the speakers adding exciting, deeper bass effects.

SRS DIALOG:

Set the SRS DIALOG level between 0 and 6 in 1 level intervals with the ◀ or ▶ cursor buttons.

This can be popped out of the surround audio effects, allowing the listener to easily discern what the actors say.

If "NONE" was selected for the Center speaker setting, in the Speaker size set up menu, then this setting will not appear.

After you complete this portion of the set up, move cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the ENTER button.

7 MULTI ROOM

ZR6001 has features in MULTI ROOM SYSTEM such as source selector, sleep timer, Multi Room Speaker output and remote control.

You can set these feature in this sub-menu.

7 MULTI ROOM	
AUDIO :	DVD
SLEEP TIMER :	OFF
MULTI : OFF	MSPK B : ***
VOL : VARI	VOL : ***
LEVEL : -90dB	LEVEL : ***
- - - MAIN - ROOM STATUS - - -	
VIDEO : DVD	AUDIO : DVD
MAIN	EXIT

1. Select "MULTI ROOM" in the SETUP MAIN MENU with ▲ or ▼ cursor button, and press the ENTER button.

2. To Select desired contents, press ▲ or ▼ cursor button

AUDIO:

Select the audio source of the Multi-room output with ◀ or ▶ cursor buttons.

SLEEP TIMER:

SLEEP timer function is available during the multiroom is active, set the time with ◀ or ▶ cursor buttons.

MULTI (MULTI ROOM):

To switch on the Multi-room output ON or OFF, press ◀ or ▶ cursor button.

VOL (VOLUME SETUP):

Select whether the Multi-room output level is variable or fixed with a ◀ or ▶ cursor buttons.

LEVEL (VOLUME LEVEL):

Adjust the Multi-room output level with ◀ or ▶ cursor buttons.

MSPK B (MULTI SPEAKER B):

To switch on the Multi-speaker B output ON or OFF, press ◀ or ▶ cursor buttons.

Note:

- This setting can be changed when the Surr Back is set "NONE" in 2-1 SPEAKER SIZE menu. When this setting is unavailable, "***" is displayed

VOL (VOLUME SETUP):

Select whether the Multi-speaker output level is variable or fixed with a ◀ or ▶ cursor buttons.

Note:

- This setting can be changed when the Surr Back is set "NONE" in 2-1 SPEAKER SIZE menu. When this setting is unavailable, "***" is displayed

LEVEL (VOLUME LEVEL):

Adjust the Multi-speaker output level with ◀ or ▶ cursor button.

Note:

- This setting can be changed when the Surr Back is set "NONE" in 2-1 SPEAKER SIZE menu. When this setting is unavailable, "***" is displayed

MAIN ROOM STATUS:

Selected input source in the main room will be displayed.

Note:

- If "VOLUME" is set to "FIXED", the multi-room output level cannot be adjusted from the second zone.

After you complete this portion of the set up, move the cursor to "MAIN" with ▲ or ▼ cursor buttons and press **ENTER** button.

8 7.1 CH INPUT LEVEL

This sub-menu is to adjust the speaker levels for 7.1-channel input sources.

Here you will adjust the volume for each channel so that they are all heard by the listener at the same level.

8 7.1 CH INPUT LEVEL		
VIDEO IN	:	LAST
FRONT L	:	0 dB
CENTER	:	0 dB
FRONT R	:	0 dB
SURR . R	:	0 dB
SURR . B R	:	0 dB
SURR . B L	:	0 dB
SURR . L	:	0 dB
SUB W	:	0 dB
MAIN	:	EXIT

- Select "7.1CH INPUT" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the **ENTER** button.
- To select "VIDEO IN", press ▲ or ▼ cursor button.
- Using the ◀ or ▶ cursor buttons, select the video input source which is emitted from Monitor out in the 7.1 CH INPUT function. The input source is switched by pressing the ◀ or ▶ cursor buttons as follows;
LAST ↔ TV ↔ DVD ↔ VCR1 ↔ DSS ↔ AUX1 ↔ V-OFF ↔ LAST ↔

Notes:

- When select LAST, the source is set previous source before 7.1 CH INPUT function is activated.
 - When select V-OFF, no signal is emitted from monitor out terminal.
- To Select desired channel , press the ▲ or ▼ cursor buttons.
 - Using the ◀ or ▶ cursor buttons, adjust the volume level of each channel.
 - After you complete this portion of the set up, move the cursor to "MAIN" with the ▲ or ▼ cursor buttons and press the **ENTER** button.

Notes:

- These settings will be memorized to 7.1CH INPUT source.
- This feature can be directly selected with the **CH.SEL** button of the remote controller.

9 MULTI PLC SETUP

This submenu is for setting up the Multi PLC feature of the ZR6001.

9 MULTI PLC	
MULTI PLC SERVER:ON	
CONNECTION MODE:	
· AUTO	
HIGH AUDIO QUALITY	
HIGH RELIABILITY	
GP-ID SETTING:START	
MAIN	EXIT

- Select "9. MULTI PLC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons and press the **ENTER** button.
- To select desired contents, press ▲ or ▼ cursor button.

MULTI PLC SEVER:

Select "ON" or "OFF" with the ◀ / ▶ cursor buttons to turn the Multi PLC Server feature ON/OFF.

CONNECTION MODE:

Select the Connection Mode of the Multi PLC feature with the ▲ / ▼ cursor buttons.

The available Connection Modes are:

- AUTO :Normal mode
Use this mode as standard.
- HIGH AUDIO QUALITY(H-AQ)
:Emphasizes audio quality.
Use this mode to listen to high audio quality. (However, when multiple ZC4001 units are connected, audio may be lost or noise may occur in a ZC4001 that experience poor reception.)
- HIGH RELIABILITY(H-R)
:Emphasizes reliability.
Use this mode when multiple ZC4001 units are connected, audio is lost, or noise occurs.

GP-ID SETTING

To set a Group ID, connect the AC power cables of the ZR6001 and ZC4001 to wall power outlets as close to each other as possible. Set the Group ID simultaneously for the ZR6001 and ZC4001.


<ZR6001>

Using the OSD menu system, set "GP-ID SETTING" to "START".

ZR6001 ON SCREEN DISPLAY MENU SYSTEM

9 MULTI PLC	
MULTI PLC SERVER:ON	
CONNECTION MODE:	
· AUTO	
HIGH AUDIO QUALITY	
HIGH RELIABILITY	
GP-ID SETTING:START	
MAIN	EXIT

- Select "9. MULTI PLC" in the SETUP MAIN MENU with the ▲ or ▼ cursor buttons, and press the **ENTER** button.
- Select "GP-ID SETTING" with the ▲ or ▼ cursor buttons.

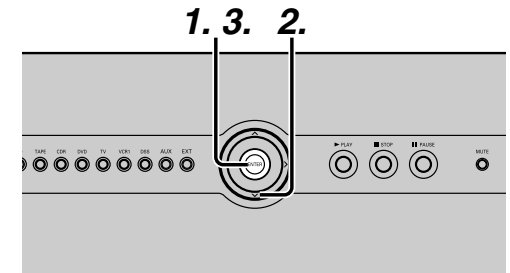
<ZC4001>

- Press and hold the **ENTER** button for 5 sec or more.

```


=====PLC SETTING=====
>RECALIBRATION
  
```

 
- Press the **▼** button once.

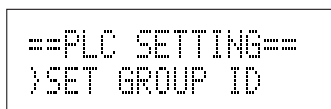

- Simultaneously press the **ENTER** buttons of the ZR6001 and ZC4001.
 
<ZC4001>




<ZR6001>

GP-ID SETTING : * *

The below message appears when the Group ID has been successfully set.
 
<ZC4001>




<ZR6001>

GP-ID SETTING : SUCCEED

The below message appears if the units fail to set the Group ID.
 
<ZC4001>



<ZR6001>

GP-ID SETTING : MISSING

Notes:

One possible reason the Group ID cannot be set is power line noise. In that case, unplug the power cable of the device that is generating noise, then plug it back in and try setting the Group ID again.

PLC IR EMITTER OUT SETUP

When the ZR6001 and ZC4001 are connected over the PLC, the ZC4001 can control output from other brands.

The ZR6001's IR EMITTER OUT terminals output remote control signals from the ZC4001 to an emitter, which are then picked up by the IR sensor of other brand products. To control other brand sources, an IR code must be set. If the IR code of the source is unknown, the IR code learning feature must be used.


IR CODE SETTING

- Press and hold the **MENU** button for 5 sec. or more.
- "**SET REMOTE IR**" appears, followed by "**INPUT IR CODE**".
- Press the **ENTER** button.
- Select a function to be controlled by ZR6001 with the **▲ / ▼** buttons. (Select from DVD, TV, VCR1, DSS, AUX1, TAPE, CD-R and CD.) "**FUNCTION : DVD**"
- Press the **ENTER** button.
- Select a source device of the other brand with the **▲ / ▼** buttons. (See the **PLC REMOTE CODES** table at the end of this guide. Select from TV, CABLE, V.ACC, DSS, VCR, LD, DVD, TUNER, AMP, CD, HOME, TAPE, CD-R and AUX.) "**DEVICE : DVD**"
- Press the **ENTER** button.
- Input the code of the source with the **▲ / ▼** buttons. Move to other digits in the code with the **◀ / ▶** buttons. "**CODE NR : 6000**"
- After inputting the code, press the **ENTER** button. "**WRONG NUMBER**" appears if an incorrect code is input. In that case, press the **ENTER** button. "**CHECK IR CODE**" appears followed by "**CODE: POWER**" if the correct code is input.
- Press the **ENTER** button to output the Power Code from the IR EMITTER OUT terminal and subsequently via the emitter as a test.

IR CODE LEARNING

- Press and hold the **MENU** button for 5 sec. or more.
- "**SET REMOTE IR**" appears, followed by "**INPUT IR CODE**".
- Select "**LEARN IR CODE**" with the **▲ / ▼** buttons.
- Press the **ENTER** button.
- Select a function to be controlled by ZR6001 with the **▲ / ▼** buttons. (Select from DVD, TV, VCR1, DSS, AUX1, TAPE, CD-R and CD.) "**FUNCTION : DVD**"
- Press the **ENTER** button.
- Select a source device of the other brand with the **▲ / ▼** buttons. (Select from TV, CABLE, V.ACC, DSS, VCR, LD, DVD, TUNER, AMP, CD, HOME, TAPE, CD-R and AUX.) "**DEVICE : DVD**"
- Press the **ENTER** button.
- Select a button to learn with the **▲ / ▼** buttons. (Select from 0, 1-9, SKIP+, SKIP-, POWER, ENTER, INPUT, PLAY, STOP, SEARCH+, SEARCH- and PAUSE.) "**KEY : POWER**"
- Press the **ENTER** button.

- Face the remote controller of the other brand source towards the learning IR sensor on the front panel of the ZR6001 and press the remote controller button to provide the code. (In this case, the Power button is pressed.)

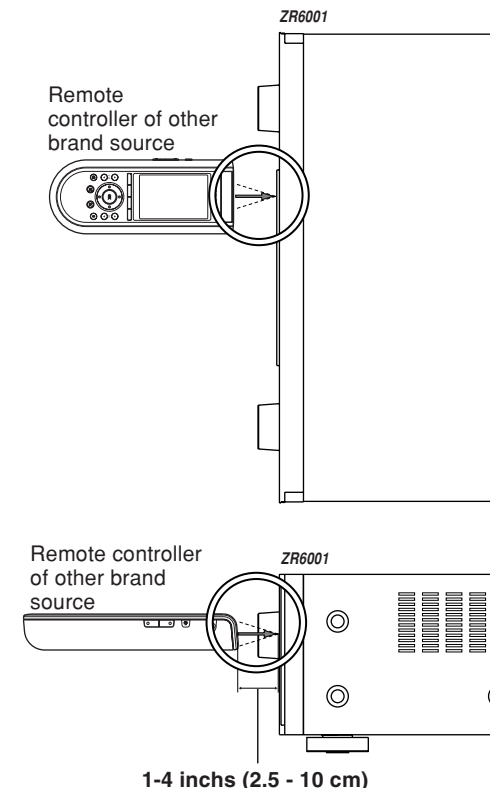

- "**LEARNING***" appears. "**FAIL LEARNING**" appears if the ZR6001 fails to learn the IR code. "**SUCCEED**" appears if the ZR6001 successfully learns the IR code. After that, "**CHECK IR CODE**" appears, followed by "**CODE: POWER**".
- Press the **ENTER** button to output the Power Code from the IR EMITTER OUT terminal and subsequently via the emitter as a test.
- Press the **EXIT** button and repeat the procedure to learn the IR code for another remote controller button.

10 SPEAKERS LEVEL SETTING WITHOUT TEST TONE

Channel level (speaker level) can be adjusted without using test tone.

Note:

- Four channel level settings can be memorized for reproduction: the 7.1 ch input mode, CS mode, Multi channel stereo mode, and all other surround modes, respectively.


CH LEVEL ADJUST		
FRONT L	:	0 dB
CENTER	:	0 dB
FRONT R	:	0 dB
SURR. R	:	0 dB
SURR. B R	:	0 dB
SURR. B L	:	0 dB
SURR. L	:	0 dB
SUB W	:	0 dB

1. Set the surround mode or 7.1 ch input mode which you want to adjust the channel level.
2. Press the **CH.SEL** button on the remote.
3. Select the desired channel (speaker) with the ◀ or ▶ cursor buttons.
4. Adjust the level with the ▲ or ▼ cursor buttons.
5. After completing the setup, press the **CH.SEL** button again.

SIMPLE SETUP

You can setup the speaker conditions quickly with SIMPLE SETUP menu. In this menu, the number of speakers and speaker delay time can be set. These settings can be changed more detail in "2. SPEAKER" setup menu.

Press the **SIMPLE SETUP** button on the unit to enter this menu.

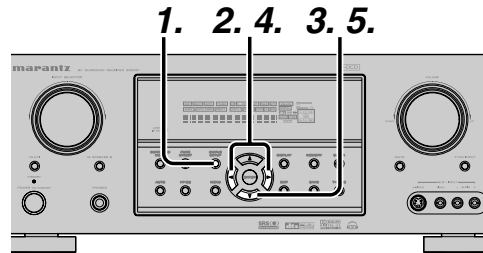

1. Press the **SIMPLE SETUP** button on the unit to enter the "SPEAKERS" menu.
2. Press ◀ or ▶ cursor button to select the speaker number.
3. Press the ▼ cursor button to enter the "ROOM" menu.
4. Press ◀ or ▶ cursor button to select the room size.
5. After finishing all setup, press the ▼ cursor button to exit the SIMPLE SETUP menu.

Note:

- All Simple Setup menu is reset when the speaker setting is changed with Speaker Setup menu.

SIMPLE SETUP		
1. SPEAKERS	:	?
2. ROOM	:	?
EXIT		

The relation of the speakers number and connected speaker

CHANNEL	Front L/R (F)	Front Center (C)	Surround L/R (S)	Surround Back L/R (SB)	Sub woofer (SW)
7.1 ch	LARGE	SMALL	SMALL	2ch	YES
7.0 ch	LARGE	SMALL	SMALL	2ch	NONE
6.1 ch	LARGE	SMALL	SMALL	1ch	YES
6.0 ch	LARGE	SMALL	SMALL	1ch	NONE
5.1 ch	LARGE	SMALL	SMALL	NONE	YES
5.0 ch	LARGE	SMALL	SMALL	NONE	NONE
4.1 ch	LARGE	NONE	SMALL	NONE	YES
4.0 ch	LARGE	NONE	SMALL	NONE	NONE
3.1 ch	LARGE	SMALL	NONE	NONE	YES
3.0 ch	LARGE	SMALL	NONE	NONE	NONE
2.1 ch	LARGE	NONE	NONE	NONE	YES
2.0 ch	LARGE	NONE	NONE	NONE	NONE

The relation of the room size and floor space

SIZE	Floor space	Width (W)	Depth (D)	Imaging Distance	
SMALL	10 m ²	2.7 m	3.6 m	Front (F)	6 ft. (1.8 m)
				Center (C)	5 ft. (1.5 m)
				Surround (S)	4 ft. (1.2 m)
				Surr. Back (SB)	5 ft. (1.5 m)
				Sub Woofer (SW)	5 ft. (1.5 m)
MEDIUM	16 m ²	3.6 m	4.5 m	Front (F)	7 ft. (2.1 m)
				Center (C)	6 ft. (1.8 m)
				Surround (S)	5 ft. (1.5 m)
				Surr. Back (SB)	7 ft. (2.1 m)
				Sub Woofer (SW)	6 ft. (1.8 m)
LARGE	24 m ²	4.5 m	5.4 m	Front (F)	9 ft. (2.7 m)
				Center (C)	8 ft. (2.4 m)
				Surround (S)	7 ft. (2.1 m)
				Surr. Back (SB)	8 ft. (2.4 m)
				Sub Woofer (SW)	8 ft. (2.4 m)

The relation of the room size and floor space is a roughly standard.

BASIC OPERATION

(PLAY BACK)

SELECTING AN INPUT SOURCE

Before you can listen to any input media, you must first select the input source on the ZR6001.

Example : DVD



To select DVD, turn the **INPUT FUNCTION SELECTOR** knob on the front panel or simply press the **DVD** button on the remote. After you have selected DVD, simply turn on the DVD player and play the DVD.

- As the input source is changed, the new input name will appear momentarily on the video display. The input name will also appear in the display, on the front-panel.
- As the input is changed, the ZR6001 will automatically switch to the digital input, surround mode, attenuation, and night mode status which were entered during the configuration process for that source.
- When an audio source is selected, the last video input used remains routed to the **VCR1 & DSS/ VCR2** Outputs and **Monitor** Output. This permits simultaneous viewing and listening to different sources.
- When a Video source is selected, the video signal for that input will be routed to the **Monitor Output** jacks and will be viewable on a TV monitor connected to the ZR6001. If a component video input is connected to the **DVD** or **DSS** component inputs, it will be routed to the **Component Video Output**. Make certain that your TV is set to the proper input to view the signal.

VIDEO CONVERT

When this function is activated, the video or S-video signal can be emitted from the video, S-video or component video output terminal. To activate this function, select VIDEO CONVERT in PREFERENCE menu and set ENABLE.


Notes:

- The component video signal is emitted only from component video output terminal. When the video equipment is connected by component terminal, connect the monitor and ZR6001 by the component terminal.
- This function is unavailable for the REC out terminal.
- This function is unavailable for the still picture, fast forward and reverse playing of the video component.
- If, while attempting to use the video convert feature, the ZR6001 cannot synchronize with the display device, "NO SIGNAL" appears on the monitor, or noise is generated, this feature cannot be used. All of these signs are caused by equipment incompatibility; there is nothing wrong with the ZR6001.



In such case, set VIDEO CONVERT in the PREFERENCE menu to DISABLE. Also, connect the video input signal to the display device via the MONITOR OUT terminal under VIDEO and the S-video input signal to the display device via the MONITOR OUT terminal under S-VIDEO.

Example:

Monitor is connected with the component.

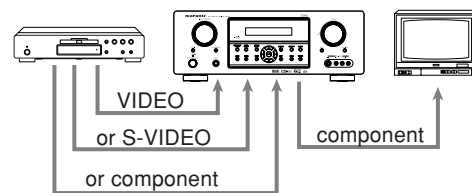

Monitor is connected with the video or S-video.

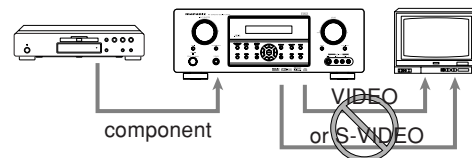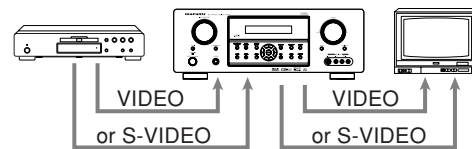

The signal cannot be converted from the component to the video or S-video.

Notes of OSD menu:


- The setup menu can be displayed through all video out (COMPONENT, S-VIDEO, VIDEO).
- The setting informations (e.g. volume setting) are displayed through all video out when the VIDEO CONVERT function are set ENABLE.

Note:

- No setting information is displayed when the signal is emitted from the COMPONENT IN to COMPONENT OUT.
- The setting informations (e.g. volume setting) are displayed through the S-VIDEO or VIDEO out when the VIDEO CONVERT function are set DISABLE. When the S-VIDEO and VIDEO outputs are used simultaneously, the setting informations are displayed through the S-VIDEO out only.


SELECTING THE SURROUND MODE

Example: AUTO SURROUND

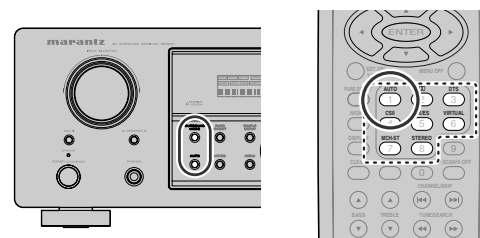

To select the surround mode during playback, press the **SURROUND MODE** button on the front panel or the **Surround mode** buttons on the remote.

ADJUSTING THE MAIN VOLUME

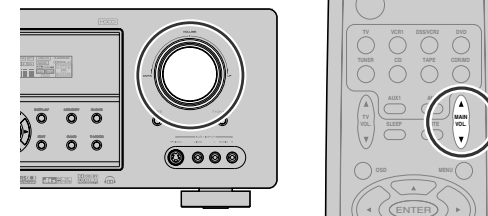

Adjust the volume to a comfortable level using the **VOLUME** control knob on the front panel or **VOL ▲ / ▼** buttons on the remote.


To increase the volume, turn the **VOLUME** knob clockwise or press **VOL ▲** button on the remote, to decrease the volume, turn counterclockwise or press **VOL ▼** button on the remote.

Notes:

- The volume can be adjusted within the range of $-\infty$ to 18 dB, in steps of 1 dB.
- However, when the channel level is set as described on page 22, if the volume for any channel is set at +1 dB or greater, the volume cannot be adjusted up to 18 dB.

(In this case the maximum volume adjustment range is "18 dB - Maximum value of channel level")

ADJUSTING THE TONE (BASS & TREBLE) CONTROL

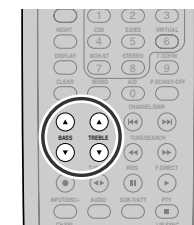

During a listening session you may wish to adjust the Bass and Treble Control to suit your listening tastes or room acoustics.

(Using the remote control unit)


To adjust the bass effect, press **BASS▲** or **BASS▼** on the remote.

To adjust the treble effect, press **TREBLE▲** or **TREBLE▼** on the remote.

Note:

- The tone control function can work in the AUTO Surround, Stereo, Dolby PLIIx, DTS, DTS-ES, and Multi Ch. Stereo mode.

TEMPORARILY TURNING OFF THE SOUND

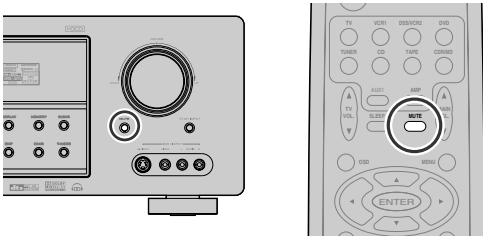


To temporarily silence all speaker outputs such as when interrupted by a phone call, press the **MUTE** button on the front panel or **MUTE** button on the remote.

This will interrupt the output to all speakers and the head-phone jack, but it will not affect any recording or dubbing that may be in progress.

When the system is muted, the display will show "MUTE".


Press the **MUTE** button again to return to normal operation.

USING THE SLEEP TIMER

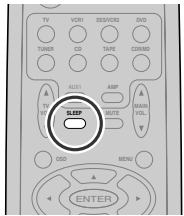

To program the ZR6001 for automatic standby, press the **SLEEP** button on the remote.

 Each press of the button will increase the time before shut down in the following sequence.

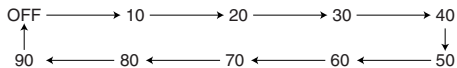

The sleep time will be shown for a few seconds in the display on the front panel, and it will count down until the time has elapsed.

When the programmed sleep time has elapsed, the unit will automatically turn off.

Note that the SLEEP indicator on the display will illuminate when the Sleep function is programmed. To cancel the Sleep function, press the **SLEEP** button until the display shows "SLEEP OFF" and the SLEEP indicator will disappear.

NIGHT MODE



Press the **NIGHT** button on the remote to turn on the NIGHT mode.

Selecting the Night Mode ON is effective in Dolby Digital only, and it compresses the dynamic range. This softens loud passages such as sudden explosions, to help prevent disturbing others late at night.

To turn off the Night mode, press the **NIGHT** button again.

SURROUND MODE

The ZR6001 is equipped with many surround modes. These are provided to reproduce a variety of surround sound effects, according to the content of the source to be played.

The available surround modes may be restricted depending on the input signal and speaker setup.

AUTO

When this mode is selected, the receiver determines whether the digital input signal is Dolby Digital, Dolby Digital Surround EX, DTS, DTS-ES, DTS 96/24 or PCM-audio.

Surround EX & DTS-ES will operate for multichannel source that has a Dolby Digital Surround EX or DTS-ES auto trigger flag in the digital signal.

When a Dolby Digital or DTS signal is input, the number of channels for which the corresponding signal is encoded will be played.

Inputting a Dolby Digital two channel signal with Dolby surround status automatically subjects that signal to Pro Logic Ix movie processing before play.

PCM 96 kHz source material can be played in this mode.

Notes:

- When you use this mode with certain DVD and CD players, performing operations such as "Skip" or "Stop" may momentarily interrupt the output.
- When the signal is not decoded, the mode is changed to AUTO mode automatically. Refer to page 27 to confirm the available decoding mode.

DOLBY DIGITAL

(Dolby Digital, Pro Logic Ix MOVIE, Pro Logic Ix MUSIC, Pro Logic Ix GAME, Pro Logic)

This mode is used with source materials encoded in Dolby Digital and Dolby Surround.

DOLBY DIGITAL

This mode is enabled when playing source materials encoded in Dolby Digital.

Playing multichannel encoded 6.1 or 7.1-channel Dolby Digital sources provides five main audio channels (left, center, right, surround left and surround right) and Low Frequency Effect channel. Dolby Digital EX decoding is not available in this mode.

Dolby Pro Logic Ix brings the excitement of surround sound to any stereo mix, while making existing Dolby Surround mixes sound more like discrete 7.1 channels Surround sound.

Dolby Pro Logic Ix has 3 modes. Please see below.

Pro Logic Ix MOVIE

This mode provides 6.1 or 7.1 channel surround sound from Dolby Surround encoded stereo movie sound tracks.

Pro Logic Ix MUSIC

This mode provides 6.1 or 7.1 channel surround sound from conventional stereo sources, analog or digital, such as CD, Tape, FM, TV, Stereo VCR, etc.

Pro Logic Ix GAME

Game mode restores the impact low-frequency surround effects by routing them to the system's subwoofer.

Pro Logic

This mode emulated original Dolby Pro Logic decoding (3/1 surround) suit for Dolby Surround encoded stereo movie soundtracks.

Notes:

- Pro Logic Ix mode will decode as Pro Logic II mode when the SURROUND BACK SPEAKER is set NONE in SPEAKER SETUP menu. (See SPEAKER SETUP, page 21)
- Pro Logic Ix mode is available for a 2ch input signal which is encoded in Dolby Digital or PCM format.
- PCM-audio signals can be subjected to Pro Logic processing when the sampling frequency is 32 kHz, 44.1 kHz or 48 kHz.

EX/ES

This mode provides 6.1 channel surround for DOLBY DIGITAL EX, DTS-ES encoded source material such as DVD.

This mode cannot be used when an analog input has been selected.

Dolby Digital EX

In a movie theater, film soundtracks that have been encoded with Dolby Digital surround EX technology are able to reproduce an extra channel which has been added during the mixing of the program.

This channel, called Surround Back, places sounds behind the listener in addition to the currently available front left, front center, front right, surround right, surround left and subwoofer channels.

This additional channel provides the opportunity for more detailed imaging behind the listener and brings more depth, spacious ambience and sound localization than ever before.

Dolby Digital EX is not available in the system without surround back speaker(s).

DTS-ES (Discrete 6.1, Matrix 6.1)

DTS-ES adds the surround center channel audio to the DTS 5.1-channel format to improve the acoustic positioning and makes acoustic image movement more natural with the 6.1-channel reproduction.

This receiver incorporates a DTS-ES decoder, which can handle DTS-ES Discrete-encoded and DTS-ES Matrix-encoded program sources from DVD, etc..

DTS-ES Discrete 6.1 features digital discrete recording of all channels including the surround back channel(s) and higher quality of audio reproduction.

DTS-ES is not available in the system without a surround back speaker.

dts MODE**(dts, Neo:6 Cinema, Neo:6 Music)**

This mode is for DTS encoded source materials such as LASER DISC, CD, and DVD. Neo:6 is for some 2 channel sources.

dts : This mode is enabled when playing source materials encoded in dts multichannel.

Playing multichannel encoded 5.1-channel dts sources provides five main audio channels (left, center, right, surround left and surround right) and Low Frequency Effect channel.

dts-ES decoding is not available in this mode.

The DTS mode cannot be used when an analog input has been selected.

Neo:6 Cinema, Neo:6 Music

This mode decodes 2-channel signals into 6-channel signals using high-accuracy digital matrix technology.

The DTS NEO:6 decoder has near-discrete properties in the frequency characteristics of the channels as well as in channel separation.

According to the signals to be played back, DTS NEO:6 uses either the NEO:6 CINEMA mode optimized for movie playback or the NEO:6 MUSIC mode optimized for music playback.

Notes:

- Neo:6 mode is available to 2ch input signals which are encoded in Dolby Digital or PCM format.
- PCM-audio signals can be subjected to Pro Logic processing when the sampling frequency is 32 kHz, 44.1 kHz or 48 kHz.

MULTI CH. ST

This mode is used to create a wider, deeper and more natural soundstage from two channel source material. This is done by feeding the left channel signal to both left front and left surround speaker and the right channel signal to both right front and right surround speaker. Additionally, the center channel reproduces a mix of the right and left channel.

**CIRCLE SURROUND II
(CSII-CINEMA, CSII-MUSIC, CSII-MONO)**

Circle Surround is designed to enable multichannel surround sound playback of non-encoded and multichannel encoded material.

Backward compatibility provides listeners with up to 6.1 channels of surround performance from entire collection of music and film, including broadcast, videotape and stereo recorded music. Depending on source material, you can select **CSII-Cinema** mode, **CSII-Music** mode or **CSII-Mono** mode.

CSII Cinema mode

This mode is suited for playing back Circle Surround-encoded and non-encoded film and television soundtracks. Cinema Mode enables 6.1-channel surround playback of 2-channel sources such as Video Cassettes, TV broadcasts, streaming media and DVDs.

CSII Music mode

This mode is suited for playing back Circle Surround-encoded and non-encoded music. Music Mode decodes, music DVDs, radio and TV music broadcasts and CDs into enveloping 6.1-channel surround.

CSII-Mono mode

This mode plays back monaural recordings from any source, including CDs, DVDs and TV and radio broadcasts in compelling 6.1-channel surround.

Notes:

- CS II mode is available for 2ch input signals which are encoded in Dolby Digital or PCM format.
- PCM-audio signals can be subjected to Pro Logic processing when the sampling frequency is 32 kHz, 44.1 kHz or 48 kHz.

VIRTUAL

This mode creates a virtualized surround sound experience from a two-speaker (front L and R) playback system playing any multichannel audio source (such as found on DVDs and digital broadcasts), including Dolby Digital, Dolby Pro Logic or DTS.

STEREO

This mode bypasses all surround processing.

In stereo program sources, the left and right channels play normally when PCM-audio or analog stereo is input.

With Dolby Digital and DTS sources, the 5.1 multichannels are converted to two channel stereo. 96 kHz PCM source material can be played back in stereo mode.

PURE-DIRECT

In the Pure Direct mode, the tone control circuit and bass management configuration are bypassed for full range frequency response and the purist audio reproduction.

96 kHz PCM source material can be played back in this mode.

Notes:

- Internal speaker size is setup to front L/R = LARGE, Center = LARGE, Surround L/R = LARGE and Subwoofer = YES automatically. Tone controls and additional processing are also defeated.
- When you use this mode with certain DVD and CD players, performing operations such as "Skip" or "Stop" may momentarily interrupt the output.

CAUTION**NOTE for DTS signal**

* Connected DVD-player, laser-disc player or CD-player needs to support DTS-digital output. You may not be able to play some DTS source signals from certain CD players and LD players even if you connect the player to the ZR6001 digitally. This is because the digital signal has been processed (such as the output level, sampling frequency, or frequency response) and the ZR6001 cannot recognize the signal as DTS data.

* Depending on the player used, DTS play may produce a short noise. This is not a malfunction.

* While signals from DTS-laser disc or CD are playing in another Surround mode, you cannot switch to digital input or from digital input to analog input by INPUT SETUP in SETUP MAIN MENU or the A/D button.

* The outputs for the VCR 1 OUT, DSS/VCR 2 OUT, TAPE OUT, and CD-R OUT output analog audio signals. Do not record from CDs or LDs that support DTS using these outputs. If you do, the DTS-encoded signal will be recorded as noise.

NOTE for Dolby Digital Surround EX signal

* When playing Dolby Digital Surround EX-encoded software in 6.1 channels, it is required to set the EX/ES mode.

* Note that some of Dolby Digital Surround EX-encoded software does not contain the identification signal. In this case, set the EX/ES mode manually.

NOTE for 96kHz PCM audio

* AUTO, PURE-DIRECT, and STEREO modes can be used when playing PCM signals with a sampling frequency of 96 kHz (such as from DVD-Video discs that contain 24 bit, 96 kHz audio). If such signals are input during playback in one of the other surround modes, output from ZR6001 will be muted.

* Certain DVD player models inhibit digital output. For details, refer to the player's operation manual.

* Some DVD formatted discs feature copy protection. When using such disc, 96 kHz PCM signal is not output from the DVD player. For details, refer to the player's operation manual.

NOTE for HDCD signal

* HDCD is effective only at the time of digital input.

* AUTO, PURE DIRECT, and STEREO modes can be used when playing HDCD signals (such as from CD discs that contain HDCD).

* You may not be able to play some HDCD source signals from certain CD players if you connect the player to the ZR6001 digitally. This is because the digital signal has been processed (such as the output level, sampling frequency, or frequency response) and the ZR6001 cannot recognize the signal as HDCD data.

The relation between the selected surround mode and the input signal

The surround mode is selected with the surround mode selector on ZR6001 or the remote control unit. However, the sound you hear is subject to the relationship between the selected surround mode and input signal. That relationship is as follows;

Surround Mode	Input Signal	Decoding	Output Channel					Front information display	
			L/R	C	SL SR	SBL SBR	SubW	Signal format indicators	Channel status
AUTO	Dolby Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Dolby Digital 2.0	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic IIx movie	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS 96/24	DTS 96/24	○	○	○	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM(Audio)	PCM (Stereo)	○	-	-	-	-	PCM	L, R
	PCM 96kHz	PCM (96kHz Stereo)	○	-	-	-	-	PCM	L, R
	HDCD	PCM (Stereo)	○	-	-	-	-	PCM HDCD	L, R
	Analog	Stereo	○	-	-	-	-	ANALOG	-
PURE DIRECT	Dolby D Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Dolby Digital 2.0	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic IIx movie	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS 96/24	DTS 96/24	○	○	○	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	PCM (Stereo)	○	-	-	-	-	PCM	L, R
	PCM 96kHz	PCM (96kHz Stereo)	○	-	-	-	-	PCM	L, R
	Analog	Stereo	○	-	-	-	-	ANALOG	-
	EX/ES	Dolby D Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL
Dolby D (5.1ch)		Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, LFE
DTS-ES		DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
DTS(5.1ch)		DTS-ES	○	○	○	○	○	dts	L, C, R, SL, SR, LFE
DOLBY (PL IIx movie) (PL IIx music) (PL IIx game) (Pro Logic)	Dolby D Surr. EX	Dolby Digital 5.1	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Pro Logic IIx	○	○	○	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Pro Logic IIx	○	○	○	-	-	DD DIGITAL, DD SURROUND	L, R, S
	PCM (Audio)	Pro Logic IIx	○	○	○	○	-	PCM	L, R
	Analog	Pro Logic IIx	○	○	○	○	-	ANALOG	-
	DTS-ES	DTS 5.1	○	○	○	-	○	dts, ES	L, C, R, SL, SR, S, LFE
DTS (Neo:6 Cinema) (Neo:6 Music)	DTS 96/24	DTS 96/24	○	○	○	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Neo:6	○	○	○	○	-	PCM	L, R
	Analog	Neo:6	○	○	○	○	-	ANALOG	-
	Dolby D (2ch)	Neo:6	○	○	○	○	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Neo:6	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	PCM (Audio)	CS II	○	○	○	○	○	PCM	L, R
CS II Cinema CS II Music CS II Mono	Analog	CS II	○	○	○	○	○	ANALOG	-
	Dolby D (2ch)	CS II	○	○	○	○	○	DD DIGITAL	L, R
	Dolby D (2ch Surr)	CS II	○	○	○	○	○	DD DIGITAL, DD SURROUND	L, R, S
STEREO	Dolby Surr. EX	Stereo	○	-	-	-	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Stereo	○	-	-	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Stereo	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Stereo	○	-	-	-	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	Stereo	○	-	-	-	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS 96/24	Stereo	○	-	-	-	○	dts 96/24	L, C, R, SL, SR, LFE
	DTS (5.1ch)	Stereo	○	-	-	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Stereo	○	-	-	-	-	PCM	L, R
	PCM 96kHz	Stereo	○	-	-	-	-	PCM	L, R
	HDCD	PCM (Stereo)	○	-	-	-	-	PCM HDCD	L, R
	Analog	Stereo	○	-	-	-	-	ANALOG	-
Virtual	Dolby Surr. EX	Virtual	○	-	-	-	-	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Virtual	○	-	-	-	-	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Virtual	○	-	-	-	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Virtual	○	-	-	-	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	Virtual	○	-	-	-	-	dts, ES	L, C, R, SL, SR, S, LFE
	DTS (5.1ch)	Virtual	○	-	-	-	-	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Virtual	○	-	-	-	-	PCM	L, R
Analog	Virtual	○	-	-	-	-	ANALOG	-	
Multi Ch. Stereo	Dolby Surr. EX	Dolby Digital EX	○	○	○	○	○	DD DIGITAL	L, C, R, SL, SR, S, LFE
	Dolby D (5.1ch)	Dolby Digital 5.1	○	○	○	-	○	DD DIGITAL	L, C, R, SL, SR, LFE
	Dolby D (2ch)	Multi Channel Stereo	○	○	○	○	-	DD DIGITAL	L, R
	Dolby D (2ch Surr)	Multi Channel Stereo	○	○	○	○	-	DD DIGITAL, DD SURROUND	L, R, S
	DTS-ES	DTS-ES	○	○	○	○	○	dts, ES	L, C, R, SL, SR, S, LFE
	DTS (5.1ch)	DTS 5.1	○	○	○	-	○	dts	L, C, R, SL, SR, LFE
	PCM (Audio)	Multi Channel Stereo	○	○	○	○	-	PCM	L, R
Analog	Multi Channel Stereo	○	○	○	○	-	ANALOG	-	

Notes:

- Dolby Digital (2 ch: Lt/Rt): signal with Dolby Surround flag Speakers are full set.
- No sound outputs from the surround speaker, center speaker and subwoofer if the DVD disc has no surround data.

Abbreviations

- L/R : Front speakers
- C : Center speaker
- SL/SR : Surround speakers
- SBL/SBR : Surround Back speakers
- SubW : Sub woofer speaker

OTHER FUNCTION

TV AUTO ON/OFF FUNCTION

This function allows the component connected to the TV-VIDEO in jack to control the power (ON/OFF) to the ZR6001.

AUTO POWER ON

1. Be sure the TV auto mode is ENABLED. (Refer page 22 : System Setup)
2. Connect your TV TUNER (etc) to the TV-VIDEO in terminal. Be sure to connect the VIDEO input.
3. Turn OFF the power to the TV TUNER and the ZR6001.
4. Turn ON the TV TUNER and tune in a receivable station.
5. When the station is received, the ZR6001 turns ON and TV is selected automatically.

AUTO POWER OFF

1. In the above situation, turn the TV TUNER OFF or select a channel that does not contain any broadcast.
2. The power to the ZR6001 switches to STANDBY after approx. 5 minutes.

Notes:

- AUTO POWER OFF is canceled if the ZR6001 is set to a source other than TV. The function reactivates when TV is selected again.
- Some TV broadcasts may cause the TV AUTO FUNCTION to turn ON.
- The S-Video terminal does not support "TV AUTO ON/OFF" function.

ATTENUATION TO ANALOG INPUT SIGNAL




If the selected analog audio input signal is greater than the capable level of internal processing, the "PEAK" indicator will light up on the front display. If this happens, you should press the **ATT** button on the remote.

"ATT" indicator will be illuminated when this function is activated. The signal-input level is reduced by about half. Attenuation will not work with the output signal of TAPE-OUT, CD-R/MD-OUT, VCR1-OUT and DSS/VCR2-OUT. This function is memorized for each individual input source.

LISTENING THROUGH HEADPHONES

This jack may be used to listen to the ZR6001's output through a pair of headphones. Be certain that the headphones have a standard 1/4" stereo phono plug. (Note that the speakers will automatically be turned off when the headphone jack is in use.)

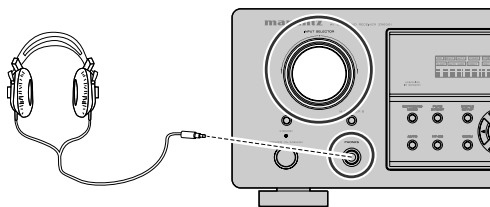

Note:

- The surround mode returns to the previous setting as soon as the plug is removed from the jack.

DOLBY HEADPHONE MODE

This feature simulates the waveforms of the actual sounds heard from the speakers.

When headphones are used, the **MENU** button automatically switches to the Dolby headphone mode.

The OSD that appears when the **MENU** button is pressed is shown below.

HEAD PHONE	
DOLBY HP MODE	: BYPASS
SURROUND	: ***
L LEVEL	: 0dB
R LEVEL	: 0dB

DOLBY HP (Headphone) MODE can be selected with the left and right cursor buttons.

BYPASS → DH1 → DH2 → DH3 → BYPASS

BYPASS: Bypasses the Dolby headphone mode and delivers ordinary 2-channel stereo.

DH1: The size of a typical living room space is simulated.

DH2: The expansiveness of a structure as large as a music hall is simulated.

DH3: A large space such as that found in a movie theater is simulated.

When the PURE DIRECT mode is selected, Dolby surround processing is bypassed and "***" is displayed as the mode indication.

The surround mode can be selected when any of the modes in DH1, DH2, or DH3 is selected.

L/R LEVEL can be set in the ±10 dB range.


Notes:

- The surround mode returns to the previous setting as soon as the plug is removed from the jack.
- TONE cannot be set when any of the modes in DH1, DH2, or DH3 is selected.
- The Dolby Headphone function will not work when 32 or 96 kHz PCM digital signals are input.



VIDEO ON/OFF

When no video signal is connected to the ZR6001 or a DVD, etc., is connected directly to your TV, the unnecessary video circuit can be turned off by selecting the "VIDEO OFF" setting.

To select video off, press the **AMP** button and press the **V-OFF** button.

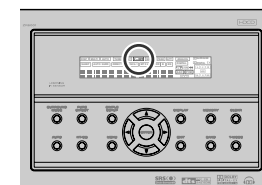

DISPLAY MODE

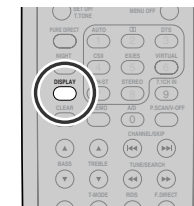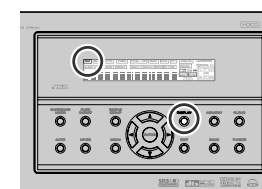

You can select the display mode for the front display of the ZR6001.

To select this mode, press the **DISPLAY** on the remote control.

When this button is pressed, the display mode is switched in the following sequence.

→ Surround Mode → Auto-display Off → Display Off → Input Function → Surround Mode...


In Auto display off mode, the display is off. But, if you make a change to the unit such as input or surround mode, the display will show that change, then go back to off after about 3 seconds. When changing the volume, it is not displayed.

In Display off mode, the display is off completely.

Note:

- Only the DISP indicator will be illuminated on the front display in display off condition

SELECTING ANALOG AUDIO INPUT OR DIGITAL AUDIO INPUT

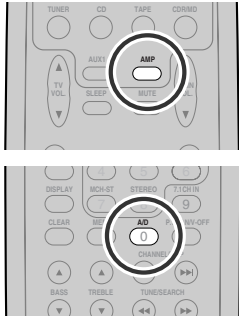

If you have already assigned the digital inputs, you can temporarily select the audio input mode for each input source as following procedures. Press the **AMP** button and press the **A/D (0)** button. When this button is pressed, the input mode is switched in the following sequence.
→ Digital Auto → Digital → Analog → Digital Auto...

In Digital Auto mode, the types of signals being input to the digital and analog input jacks for the selected input source are detected automatically. If no digital signal is being input, the analog input jacks are selected automatically.

In Digital mode, input is fixed to an assigned digital input terminal.

In analog mode, the analog input jacks are selected. This selecting is temporary, so the result will not be stored in memory.


If you need to change the input mode completely, use INPUT SETUP in OSD menu system. (see page 21)

RECORDING AN ANALOG SOURCE

In normal operation, the audio or video source selected for listening through the ZR6001 is sent to the record outputs.

This means that any program you are watching or listening to may be recorded simply by placing machines connected to the outputs for **TAPE OUT**, **CD-R/MD OUT**, **VCR1 OUT**, and **DSS/VCR2 OUT** in the record mode.

To record the input source signal you are currently watching or listening to

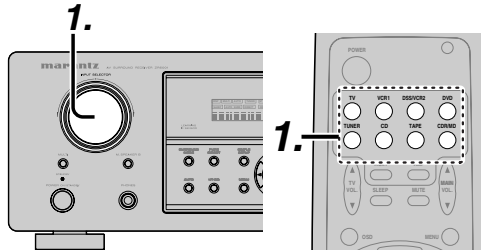


1. Select the input source to record by turning the **INPUT FUNCTION SELECTOR** knob on the front panel or simply press the **input selector** buttons on the remote. The input source is now selected and you may watch or listen to it as desired.
2. The currently selected input source signal is output to the **TAPE OUT**, **CD-R/MD OUT**, **VCR1 OUT**, and **DSS/VCR2 OUT** outputs for recording.
3. Start recording to the recording component as desired.

Recording the video from one source and the audio from another

You can add the sound from one source to the video of another source to make your own video recordings.

Below is an example of recording the sound from a compact disc player connected to CD IN and the video from a video camera connected to VCR1 to video cassette recorder connected to the DSS/VCR2 OUT jack.

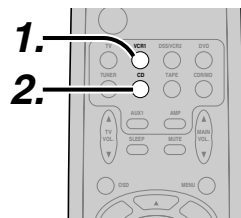


1. Switch the video output source to VCR1 by simply pressing the **input selector** buttons on the remote.
2. Switch the audio input source to CD by simply pressing the **input selector** buttons on the remote.
3. Now "CD" has been selected as the audio input source and "VCR1" as the video input source.

Notes:

- If you change the input source during recording, you will record the signals from the newly selected input source.
- You cannot record the surround effects.
- Digital input signals are only output to the digital outputs. There is no conversion from digital to analog.

When connecting CD players and other digital components, do not connect only the digital terminals, but the analog ones as well.

HT-EQ

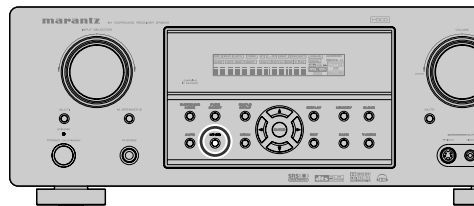

Press the **HT-EQ** button on the front panel to turn on the HT-EQ mode.

The tonal balance of a film soundtrack will be excessively bright and harsh when played back over audio equipment in the home. This is because film soundtracks were designed to be played back in large movie theater environments.

Activating the HT-EQ feature when watching a film made for movie theaters corrects this and restores the correct tonal balance.

The HT-EQ feature is available except in the following modes.

- 7.1 CH INPUT
- PURE-DIRECT
- When VIRTUAL is set for the surround mode


7.1 CH INPUT

The ZR6001 is equipped for future expansion through the use of Multi channel SACD multichannel player or DVD-Audio player.

When this is selected, the input signals connected to the L(front left), R (front right), CENTER, SL (surround left), SR (surround right) and SBL (surround back left) and SBR (surround back right) channels of the 7.1 CH. In jacks are output directly to the front (left and right), center, surround (left and right) and surround back speaker systems as well as the pre-out jacks without passing through the surround circuitry.

In addition, the signal input to the SW (subwoofer) jack is output to the PRE OUT SW (subwoofer) jack.

When 7.1 CH. INPUT is selected, the last video input used remains routed to the **Monitor Outputs**. This permits simultaneous viewing with video sources

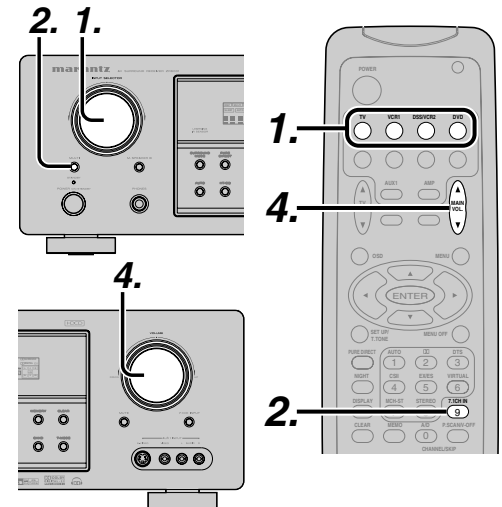

1. Select a desired Video source to decide the routed video signal to the **Monitor Outputs**.
2. Press the **7.1 CH INPUT** button on the front panel or press **7.1 CH IN** on the remote to switch the 7.1 channel input.

3. If it is necessary to adjust the output level of each channel, press the **CH.SEL** button on the remote.

Adjust the speaker output levels so that you can hear the same sound level from each speaker at the listening position. For the front left, front right, center, surround left, surround right and surround back speakers, the output levels can be adjusted between -10 to +10 dB. The subwoofer can be adjusted between -15 and +10 dB.

These adjustments result will be stored to 7.1 CH. INPUT memory.

4. Adjust the main volume with the **MAIN VOLUME** knob or the **VOL** buttons on the remote.


To cancel the 7.1 CH. INPUT setting, press the **7.1 CH INPUT** button on the front panel or press **7.1 CH IN** on the remote.

Notes:

- When the 7.1 CH. Input is in use, you may not select a surround mode, as the external decoder determines processing.
- In addition, there is no signal at the record outputs when the 7.1 CH. Input is in use.

AUX2 INPUT

If you don't need to connect 7.1 Ch. input terminals with multi channel decoder, L(front left) and R (front right) inputs terminals are available as AUX2 input. In this case, You can connect additional audio source to AUX2 as other audio input terminals.

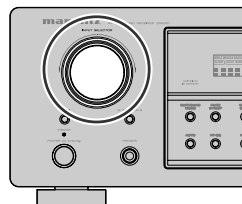

LIP.SYNC

Depending on the image device (TV, monitor, projector, etc.) connected to the ZR6001, a time lag can occur between image signal processing and audio signal processing. Though minor, this time lag can interfere with movie and music enjoyment. The LIP.SYNC feature delays the audio signal with respect to the image signal output from the ZR6001 to correct the time lag between the sound and image. It can be operated with the "LIP.SYNC" and ◀ and ▶ cursor buttons of the remote controller. Set the remote controller to the AMP mode before operating the LIP.SYNC feature. The initial setting is OFF (0 ms).The time lag can be adjusted in 10 ms steps up to 200 ms. Watch the picture on the image device (i.e., TV, monitor, projector, etc.) as you adjust the time lag.

Note:

- The LIP.SYSNC feature turns OFF (0 ms) in the PURE DIRECT mode. When the PURE DIRECT mode is deactivated, the set value of the LIP.SYSNC feature is automatically restored.

BASIC OPERATION (TUNER)


LISTENING TO THE TUNER

Frequency scan step for AM is selectable. Default setup is 10 kHz step, if your country's standard is 9 kHz step, Press **TUNER** button on the remote more than 6 seconds. Scan step will change.

Note:

- Preset memory for the tuner will clear by changing this setup.
- When using the PLC feature, AM sensitivity may decrease because of the effects of the PLC signals. There is nothing wrong with the equipment.

AUTO TUNING

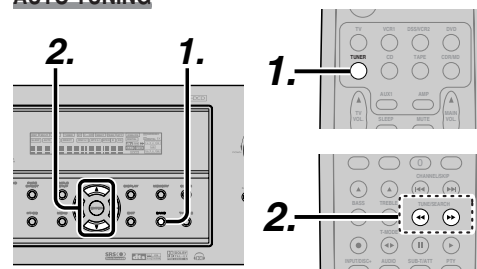

(Using the ZR6001)


1. To select tuner and desired band (FM or AM), press the **BAND** button on the front panel.
2. Press the ▲ or ▼ cursor buttons on the front panel for more than 1 second to start the auto tuning function.
3. Automatic searching begins then stops when a station is tuned in.

(Using the remote control unit)

1. To select tuner and desired band (FM or AM), press the **TUNER** button twice within in two seconds on the remote.
2. Press the ◀ or ▶ for more than 1 second on the remote.
3. Automatic searching begins then stops when a station is tuned in.

If tuning does not stop at the desired station, use to the "Manual tuning" operation.

MANUAL TUNING

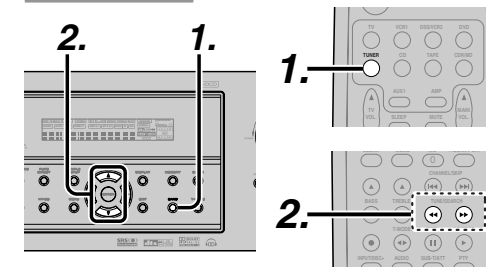


(Using the ZR6001)

1. To select tuner and desired band (FM or AM), press the **BAND** button on the front panel
2. Press the ▲ or ▼ cursor buttons on the front panel to select the desired station.

(Using the remote control unit)


1. To select tuner and desired band (FM or AM), press the **TUNER** button twice within in two seconds on the remote.
2. Press the ◀ or ▶ on the remote to tune in the desired station.

DIRECT FREQUENCY CALL

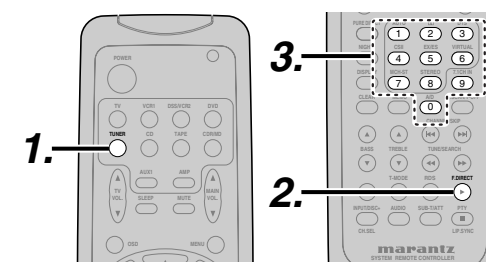

1. To select tuner and desired band (FM or AM), press the **TUNER** button twice within two seconds on the remote.
2. Press the **F.DIRECT** on the remote, display will show "FREQ - - -".
3. Input your desired station's frequency with the **numeric** buttons on the remote.
4. The desired station will automatically be tuned.

(FM) TUNING MODE (AUTO STEREO OR MONO)

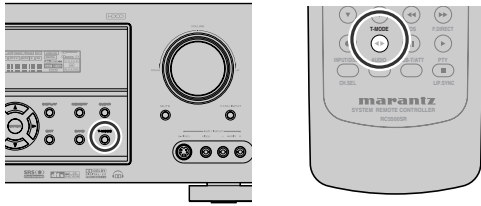


When in the auto stereo mode, **AUTO** indicator will be illuminated on the display. The **“ST”** indicator is illuminated when a stereo broadcast is tuned in. At open frequencies, the noise is muted and the **“TUNED”** and **“ST”** indicators are not illuminated. If the signal is weak, it may be difficult to tune into the station in stereo. In such a case, press the **T-MODE** button on the front panel or remote. **“AUTO”** indicator is not illuminated, if FM stereo broadcasts are received in monaural and the **“ST”** indicator is not illuminated. To return to auto stereo mode, press the **T-MODE** button or press **T-MODE** button on the remote again. **AUTO** indicator is illuminated on the display.

PRESET MEMORY

With this unit you can preset up to 50 FM/AM stations in any order. For each station, you can memorize the frequency and reception mode if desired.


AUTO PRESET MEMORY

This function automatically scans the FM and AM band and enters all stations with proper signal strength into the memory.

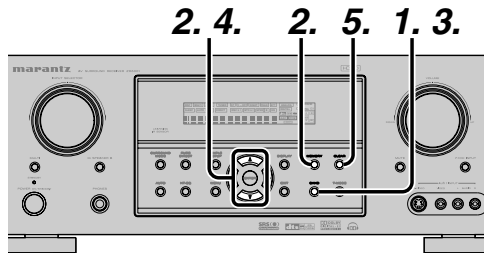

1. To select FM, press the **BAND** button on the front panel.
2. While pressing the **MEMO** button, press the ► cursor button. **“AUTO PRESET”** will appear on the display, and scanning starts from the lowest frequency.
3. Each time the tuner finds a station, scanning will pause and the station will be played for five seconds. During this time, the following operations are possible. The band can be changed by the **BAND** button.
4. If no button is pressed during this period, the current station is memorized in location Preset 02. If you wish to skip the current station, press the ▲ cursor button during this period, this station is skipped and auto presetting continues.
5. Operation stops automatically when all 50 preset memory positions are filled or when auto scanning attains the highest end of all bands. If you desire to stop the auto preset memory at anytime, press the **CLEAR** button.

MANUAL PRESET MEMORY

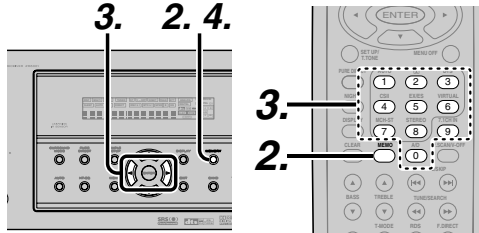

- (Using the ZR6001)*
1. Tune into the radio station you desire (Refer to the **“MANUAL TUNING”** or **“AUTO TUNING”** section).
 2. Press the **MEMO** button on the front panel. **“- -”** (preset number) starts blinking on the display.
 3. Select the preset number by pressing the ◀ or ▶ cursor buttons, while this is still blinking (approx. 5 seconds)
 4. Press the **MEMO** button again to enter. The display stops blinking. The station is now stored in the specified preset memory location.


(Using the remote control unit)

1. Tune into the radio station you desire (Refer to the **“MANUAL TUNING”** or **“AUTO TUNING”** section).
2. Press the **MEMO** button on the remote. **“- -”** (preset number) starts blinking on the display.
3. Enter the desired preset number by pressing the **numeric** buttons.

Note:

- When entering a single digit number (2 for example), either input **“02”** or just input **“2”** and wait for a few seconds.

RECALLING A PRESET STATION

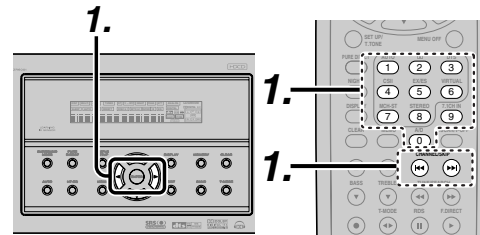


(Using the ZR6001)

1. Select the desired preset station by pressing the ◀ or ▶ cursor buttons on the front panel

(Using the remote control unit)

1. Press the ◀◀ or ▶▶ buttons to select the desired preset station, or input your desired preset channel with the **numeric** buttons on the remote.

PRESET SCAN

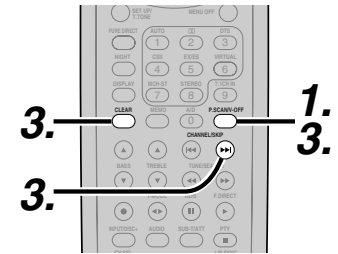


(Using the remote control unit)

1. Press the **P.SCAN** on the remote. **“PRESET SCAN”** appears on the display and then the preset station with the lowest preset number is recalled first.
2. Preset stations are recalled in sequence (No.1 → No.2 → etc.) for 5 seconds each. No stored preset number will be skipped.
3. You can fast forward the preset stations by pressing the ▶▶ continuously. When the desired preset station is received, cancel the preset scan operation by pressing the **CLEAR** button or **P.SCAN** on the remote.

CLEARING STORED PRESET STATIONS

You can remove preset stations from the memory using the following procedure.

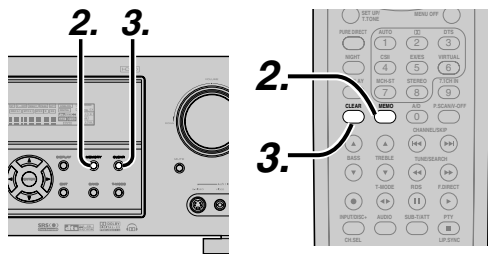


1. Recall the preset number to be cleared with the method described in "Recalling" a preset station.
2. Press the **MEMO** button on the front panel or press the **MEMO** button on the remote.
3. The stored preset number blinks in the display for 5 seconds. While blinking, press the **CLEAR** button on the front panel or the remote.
4. "xx CLEAR" appears on the display to indicate that the specified preset number has been cleared.

Note:

- To clear all stored preset stations, press and hold the **CLEAR** and the **ENTER** buttons for two seconds.

SORTING PRESET STATIONS

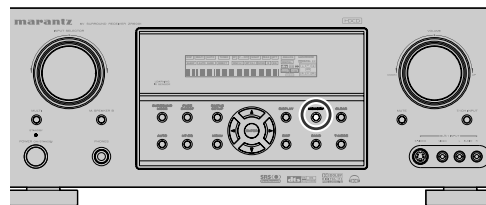

If you have stations memorized, and there is a gap in the sequential order:

I.e. the stations are stored as follows

- 1) 87.1 MHz
- 2) 93.1 MHz
- 3) 94.7 MHz
- 10) 105.9 MHz

(notice there is no stations programmed for pre sets for 4-9), you can have pre set 10 become pre set 5:



To sort the numbers, press and hold the **MEMO** and the **▼** cursor buttons.

"PRESET SORT" will appear on the display and sorting will be done.

NAME INPUT OF THE PRESET STATION.

This function allows the name of each preset channel to be entered using alphanumeric characters.

Before name inputting, you need to store preset stations with the preset memory operation.

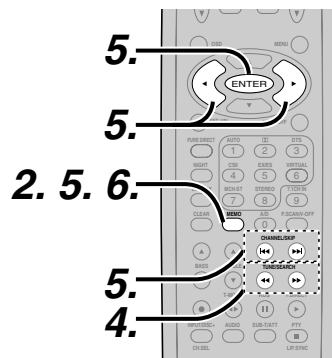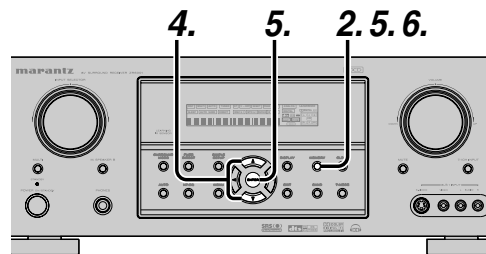

1. Recall the preset number to be inputted name with the method described in "Recalling" a preset station.
2. Press the **MEMO** button on the front panel or press the **MEMO** button on the remote for more than 3 seconds.
3. The left most column of the station name indicator flashes, indicating the character entry ready status.
4. When you press the **▲** or **▼** cursor buttons on the front panel or the **◀ / ▶** buttons on the remote, alphabetic and numeric characters will be displayed in the following order:
A → B → C ... Z → 1 → 2 → 3 0 → - → + → / → (Blank) → A
UP →
← DOWN
5. After selecting the first character to be entered, press the **MEMO** or **ENTER** buttons, press the **MEMO** button on the remote. The entry in this column is fixed and the next column starts to flash. Fill the next column the same way.
 To move back and forth between the characters, press the **◀ / ▶** cursor buttons or press **◀◀** or **▶▶** buttons on the remote.

Note:

- Unused columns should be filled by entering blanks.
- 6. To save the name, press the **MEMO** button on the front panel or remote for more than 2 seconds.

Ten keypad	Press, press again, press again, etc.
1	A → B → C → 1 → A
2	D → E → F → 2 → D
3	G → H → I → 3 → G
4	J → K → L → 4 → J
5	M → N → O → 5 → M
6	P → Q → R → 6 → P
7	S → T → U → 7 → S
8	V → W → X → 8 → V
9	Y → Z → space → 9 → Y
0	- → + → / → 0

MULTI ROOM SYSTEM

The Multi Room system is a function which allows you to listen to the same or a different source in a room other than the room in which the ZR6001 is located.

To use this function, a multi room remote unit and remote control signal receiver available from your Marantz dealer are necessary.

The operations possible with the multi room function are explained briefly below.

For details, refer to the instruction manual supplied with the multi room remote control unit and receiver.

When the outputs of the MULTI OUT terminals are wired and connected to amplifiers installed in other rooms or M (MULTI) SPEAKER B terminals are wired and connected to L&R speakers in other room, different sources can be played in rooms other than the main room in which this unit and the playback devices are installed.


ZR6001 has some feature to MULTI ROOM SYSTEM as source selector, sleep timer, Multi Room Speaker output and remote control.

MULTI ROOM PLAYBACK USING THE MULTI ROOM OUT TERMINALS

The ZR6001 is equipped with audio pre-out terminals for which the volume is adjustable as the MULTI output terminals.

A separately sold stereo power amplifier can be connected to enjoy multi room playback.

The MULTI OUT system can not be operated with the supplied remote controller.

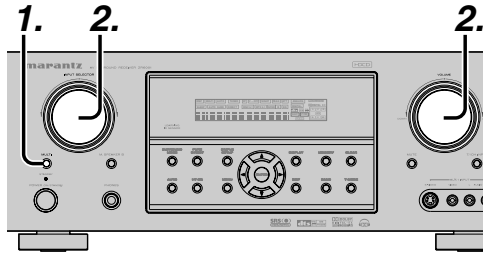


1. Press the **MULTI** button. The unit enters multi room mode and the display indicates “**SELCT SOURCE**” and flashes the “**MULTI**” indicator for approx. 10 seconds.
2. In this time, you can select the input source by turning the input selector knob. Then, the display indicates “**MULTI VOLUME**” “**MULTI VOL. xx**” for approx. 5 seconds.
3. During this time, you can set the volume level in the multi room as desired. This will only set the volume in the second room.

MULTI ROOM PLAYBACK USING THE MULTI SPEAKER TERMINALS

The ZR6001 allows you to connect another set of speakers and place them in a different room or separated area for listening to music.

The MULTI ROOM SPEAKER system can not be operated with the supplied remote controller.

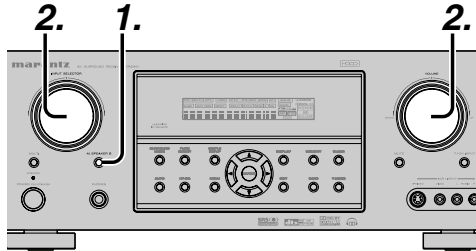

1. Press the **M. SPEAKER B** button. The unit enters multi room speaker mode and the display indicates “**SELCT SOURCE**” and flashes the “**MULTI**” indicators for approx. 10 seconds.
2. In this time, you can select the input source by turning the input selector knob.
3. Then, the display indicates “**MSPKR VOLUME**” “**MSPKR VOL.-18**” for approx. 5 seconds. During this time, you can set the volume level in the multi room as desired. This will only set the volume in the multi room.

Notes for MULTI ROOM SPEAKER

- MULTI ROOM SPEAKER On/ Off is available in main room only.
- MULTI ROOM SPEAKER output terminals can be used when the SURROUND BACK SPEAKER is set NONE in SPEAKER SETUP menu. (See SPEAKER SETUP, page 21)
- “The Surr. Back Speakers are in use” is displayed by pressing the **MULTI SPEAKER** button when the SURROUND BACK SPEAKER is set except NONE in SPEAKER SETUP menu. (See SPEAKER SETUP, page 21)
- Multi room operations cannot be performed from the remote controller.

MULTI PLC SYSTEM

With the ZR6001, the source selected for the Multi PLC and MULTI ROOM features are one and the same.

Accordingly, the source selected for the “MULTI ROOM” setting also becomes the source for the Multi PLC feature.

For PLC settings, see pages 24 – 25.

TROUBLESHOOTING

In case of trouble, check the following before calling for service:

1. Are the connections made properly ?
2. Are you operating the unit properly following the user's guide ?
3. Are the power amplifiers and speaker working properly ?

If the unit does not operate properly, check items shown in the following table.

If your trouble cannot be recovered with the remedy actions listed in the following table, malfunction of the internal circuitry is suspected; immediately unplug the power cable and contact your dealer, nearest Marantz authorized dealer or the Marantz Service Center in your country.

SYMPTOM	CAUSE	REMEDY
ZR6001 cannot be turned up.	The power plug is not connected.	Connect the power plug to the outlet.
No sound and picture are output even when power is on.	Mute is on.	Cancel mute using the remote control unit.
	The input cable is not connected correctly.	See the connection diagram and connect the cables correctly.
	The master volume control is turned all the way down.	Adjust the master volume.
	The function selector position is wrong.	Select correct position.
No speaker output.	The headphones are connected to the headphone jack.	Disconnect the headphones. (Speakers will not output sound when headphones are connected.)
Incorrect Audio or Video for selected source.	Input cable connected incorrectly.	Connect the cable correctly by referring to the connection diagram.
Incorrect Audio from a channel.	Speaker cable connected incorrectly.	Connect the cable correctly by referring to the connection diagram.
	The center speaker cable connection is incomplete.	Connect the cable correctly.
	STEREO has been selected for Surround mode.	When STEREO is selected for Surround mode, no sound will be output from the center speaker. Set another Surround mode.
No Audio output from the center channel speaker.	Center = NONE has been selected in SETUP mode.	Make the correct setting.
	The surround speaker cable connection is incomplete.	Connect the cable correctly.
	STEREO has been selected for Surround mode.	When STEREO has been selected for Surround mode, no sound will be output from the surround speaker. Set another Surround mode.
No Audio output from the surround speakers.	Surround = NONE has been selected in SETUP mode.	Make the correct setting.
	The surround back speaker cable connection is incomplete.	Connect the cable correctly.
	Surround mode is not EX/ES mode.	Set surround mode EX/ES.
No Audio output from the surround back speakers.	Surround back = NONE has been selected in SPEAKERS SIZE SETUP	Make the correct setting.
	Surround center= NONE has been selected in SPEAKERS SIZE SETUP	Make the correct setting.
	Input signal is incompatible.	Use 5.1 channel source.

SYMPTOM	CAUSE	REMEDY
Can not select Pro Logic IIx mode.	Input signal is incompatible.	Use 2 channel Dolby Digital input signal, PCM input signal or analog input signal.
Can not select Neo:6 mode.	Input signal is incompatible.	Use 2 channel Dolby Digital input signal, PCM input signal or analog input signal.
Can not select CSII mode.	Input signal is incompatible.	Use 2 channel Dolby Digital input signal, PCM input signal or analog input signal.
No output to Sub Woofer Out.	Sub-woofer = NONE has been selected in SETUP mode.	Select Sub-woofer = YES.
Noise is produced during DTS-encoded CD or laser disc play.	Analog has been selected for input.	Be sure to perform digital connection, select digital input, then play.
A specific channel does not produce output.	Nothing recorded on source.	Check the encoded channel on the source side.
FM or AM reception fails.	Antenna connection is incomplete.	Correctly connect the indoor FM and AM antennas to FM and AM antenna outlets.
Noise is heard during AM reception.	Reception is affected by other electrical fields.	Try changing location where the AM indoor antenna is set up.
Noise is heard during FM reception.	The radio waves from the broadcasting station are weak.	Install an FM outdoor antenna.
Cannot get programmed station when the PRESET button is pressed.	Preset data has been erased.	Disconnecting power plug for long periods of time will erase preset data. If that happens, input the preset data again.
Control with the remote control unit fails.	Batteries are consumed.	Replace all the batteries with new ones.
	Remote controller's function-key setting is wrong.	Select different position from which equipment will be controlled.
	The distance between this ZR6001 and the remote commander is too far.	Move closer to this ZR6001.
	Something is blocking ZR6001 and the remote commander.	Remove offending object.
Nothing is heard over PLC connection.	The PLC is wrongly set.	Correctly set the PLC as explained in "MULTI PLC SETUP" on page 24. You can check whether or not the ZC4001 is securely connected to the ZR6001 via the PLC status display area of the ZC4001.
	The source (Marantz product) is not correctly connected to the ZR6001.	Marantz products connect over an RC-5 bus. Correctly connect the source as explained in "CONNECTING TO THE RC-5" on page 17.
	The source (other brand product) is not correctly connected to the ZR6001.	Other brand sources are controlled by remote control signals sent from an emitter connected to the IR EMITTER OUT terminals of the ZR6001 to the IR sensor of the source unit. Operation requires you to set the brand code or use the IR code learning feature. Correctly connect the source as explained in "CONNECTING AN IR EMITTER" on page 13.
	Another device is generating a high level of noise on the power line.	Turn off the device that is causing the noise or move it farther away from the ZR6001 and ZC4001.

Note:

- After "PROTECT" appears on the unit's display, the standby indicator may start flashing. If it does, there is a problem in the unit or the connection. If this problem reoccurs even when power is activated from the remote control unit, call for servicing.

GENERAL MALFUNCTION


If the equipment malfunctions, this may be because an electrostatic discharge or AC line interference has corrupted the information in the equipment memory circuits. Therefore:

- disconnect the plug from the AC line supply
- after waiting at least three minutes, reconnect the plug to the AC line supply
- re-attempt to operate the equipment

Memory backup

- In case a power outage occurs or the power cord is accidentally unplugged, the ZR6001 is equipped with a backup function to prevent memory data such as the preset memory from being erased.

HOW TO RESET THE UNIT

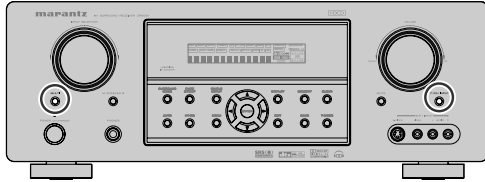

Should the operation or display seem to be abnormal, reset the unit with the following procedure.

The ZR6001 is turned on, press and hold the **MULTI** and **7.1CH INPUT** buttons simultaneously for 3 seconds or more.

Remember that the procedure will reset the settings of the function selector, Surround mode, delay time, TUNER PRESET etc., to their initial settings.

TECHNICAL SPECIFICATIONS

FM TUNER SECTION

Frequency Range 87.5 - 108.0 MHz
 Usable Sensitivity IHF 1.8 μV/16.4 dBf
 Signal to Noise Ratio Mono/Stereo 75/70 dB
 Distortion Mono/Stereo 0.2/0.3 %
 Stereo Separation 1 kHz 45 dB
 Alternate Channel Selectivity ±300 kHz 60 dB
 Image Rejection 98 MHz 70 dB
 Tuner Output Level 1 kHz, ±75 kHz Dev 800 mV

AM TUNER SECTION

Frequency Range 520 - 1710 kHz
 Signal to Noise Ratio 50 dB
 Usable Sensitivity
 ... Loop 400 μV (When MULTI PLC SERVER is OFF)
 Distortion 400Hz, 30 % Mod. 0.5 %
 Selectivity ±18 kHz 70 dB

AUDIO SECTION

Power Output (20 Hz - 20 kHz/THD=0.08%)
 Front L&R 8 ohms 95 W / Ch
 Center 8 ohms 95 W / Ch
 Surround L&R 8 ohms 95 W / Ch
 Surround Back L&R 8 ohms 95 W / Ch

Front L&R 6 ohms 115 W / Ch
 Center 6 ohms 115 W / Ch
 Surround L&R 6 ohms 115 W / Ch
 Surround Back L&R 6 ohms 115 W / Ch

Input Sensitivity/Impedance 168 mV/ 47 Kohms
 Signal to Noise Ratio(Analog Input / Pure Direct) 105 dB
 Frequency Response
 (Analog Input / Pure Direct)
 8 Hz - 100 kHz (±3 dB)
 (Digital Input / 96 kHz PCM)
 8 Hz - 45 kHz (±3 dB)

VIDEO SECTION

Television Format NTSC
 Input Level/Impedance 1 Vp-p/75 ohms
 Output Level/Impedance 1 Vp-p/75 ohms
 Video Frequency Response 5 Hz to 8 MHz (-1 dB)
 Video Frequency (Component) ... 5 Hz to 80 MHz (-1 dB)
 S/N 60 dB

PLC SECTION

Modulation Method Multi carrier
 Frequency Band 2 MHz - 20 MHz

GENERAL




Power Requirement AC 120 V 60 Hz
 Power Consumption 5 A
 Weight 30.2 lbs (13.7 kg)

ACCESSORIES

- Remote Control Unit RC5500SR 1
- AAA-size batteries 2
- FM Antenna 1
- AM Loop Antenna 1
- Front AUX Jack Cover 1
- AC Power Cable 1

Specifications subject to change without prior notice.

DIMENSIONS

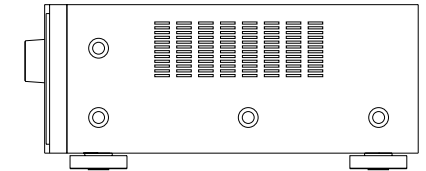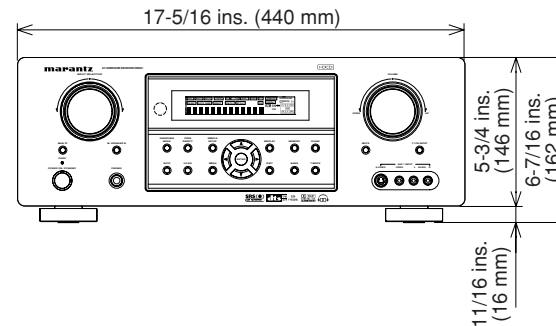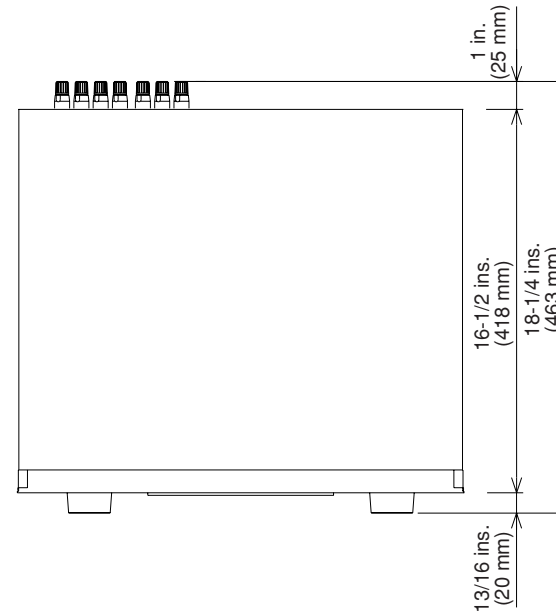

SETUP CODES FOR REMOTE CONTROLLER RC5500SR

CD

Aiwa	0184
Burmester	0447
California Audio Labs	0056
Carver	0184, 0206
Classic	0324
Denon	0030
DKK	0027
DMX Electronics	0184
Emerson	0332
Fisher	0352, 0206
Garrard	0447
Genexxa	0059, 0332
GPX	0323
Harman/Kardon	0184, 0200, 0229
Hitachi	0059
Integra	0128
JVC	0099, 0321
Kenwood	0055, 0064, 0217
KLH	0345
Koss	0344
Krell	0184
Linn	0184
Luxman	0120
LXI	0332
Magnavox	0184, 0332
Marantz	0999, 0056, 0184
MCS	0056
Miro	0027
Mission	0184
MTC	0447
NSM	0184
Onkyo	0128
Optimus	0027, 0059, 0064, 0332, 0206, 0495, 0172, 0447, 0102
Panasonic	0056
Parasound	0447
Philips	0999, 0184
Pioneer	0059, 0332, 0495
Polk Audio	0184
Proton	0184
QED	0184
Quad	0184
Quasar	0056

RadioShack	0102
RCA	0089, 0059, 0447, 0080, 0332, 0206, 0495
Realistic	0447, 0206
Rotel	0184, 0447
SAE	0184
Sansui	0184, 0332
Sanyo	0206
Scott	0332
Sears	0332
Sharp	0064
Sonic Frontiers	0184
Sony	0027, 0127, 0391
Soundesign	0172
Symphonic	0332
TAG McLaren	0184
Tascam	0447
TDK	0235
Teac	0447
Technics	0056
Victor	0099
Wards	0184, 0080
Yamaha	0063, 0319
Zonda	0184

CDR

Classic	0324
Fisher	0352
Harman/Kardon	0229
JVC	0321
Kenwood	0999
Marantz	0999
Philips	0999
Pioneer	0089, 0114
Sony	0391, 0127
TDK	0235
Teac	0447
Yamaha	0319

MD PLAYERS

Denon	1900
-------------	------

Kenwood	1708, 1853
Marantz	1207
Onkyo	1895
Optimus	1090
Pioneer	1090
Sharp	1888
Sherwood	1094
Sony	1517
Yamaha	1915

TAPE

Aiwa	0056, 0227, 0224
Akai	0310
Carver	0056
Denon	0103
Fisher	0101
Garrard	0466, 0335
Harman/Kardon	0209, 0056
JVC	0271, 0300
Kenwood	0097
Magnavox	0056
Marantz	0056, 0036
Mitsubishi	0310
NAD	0171
Onkyo	0309, 0163, 0162
Optimus	0054, 0247, 0466, 0364
Panasonic	0256
Philips	0056
Pioneer	0054, 0247, 0126
Polk Audio	0056
RCA	0054, 0247
Revox	0217
Sansui	0056, 0036
Sherwood	0364
Sony	0270, 0197, 0318
Teac	0335
Technics	0256
Victor	0300
Wards	0054
Yamaha	0124, 0121

SAT (DSS)

AlphaStar	0799
Chaparral	0243
Crossdigital	1136

DirecTV	0419, 0593, 0666, 1666, 1169, 0274, 0776, 1776, 0751, 0846, 1883, 1103, 1136, 0126, 1470, 1469
Dish Network System	1032, 0802, 1197
Dishpro	1032, 0802
Echostar	1032, 0802, 1197
Expressvu	0802
GE	0593
General Instrument	0896
GOI	0802
Hitachi	0846
HTS	0802
Hughes Network Systems	1169, 0776, 1776, 1470, 1469
JVC	0802, 1197
Magnavox	0751, 0749
Memorex	0751
Mitsubishi	0776
Motorola	0896
Next Level	0896
Panasonic	0274, 0728
Paysat	0751
Philips	1169, 0776, 1776, 0751, 1103, 0749, 0126, 1469
Proscan	0419, 0593
RadioShack	0896
RCA	0419, 0593, 0882, 0170
Samsung	1303, 1136
SKY	0883
Sony	0666, 1666
Star Choice	0896
Tivo	1169, 1470, 1469
Toshiba	0776, 1776, 0817, 1312
Uniden	0751, 0749
Zenith	0883, 1883

TV

Admiral	0120, 0490
Advent	0788, 0869
Aiko	0119
Akai	0729, 0057, 0699
Albatron	0870
America Action	0207
Anam	0207
AOC	0057
Apex Digital	0775, 0792, 0906
Audiovox	0478, 0207, 0119
Bell & Howell	0181

PLC REMOTE CODES

TV

TV's

Accent 0009
 Acura 0009
 Addison 0092, 0108, 0653
 Admiral 0093, 0463
 Advent 0761, 0842
 Aiko 0009, 0092
 Aim 0037, 0706
 Aiwa 0701, 1904, 1911
 Akai 0009, 0030, 0037, 0178, 0208, 0480,
 0548, 0556, 0672, 0702, 0714, 0812
 Akiba 0037
 Akito 0037
 Akura 0009, 0037, 0668, 0714
 Alba 0009, 0037, 0443, 0487, 0668, 0714, 1037
 Albatron 0700, 0843
 Alfide 0672
 Allstar 0037
 America Action 0180
 Amplivision 0370
 Amstrad 0009, 0037, 0171, 1037
 Anam 0009, 0180, 0250, 0700
 Anam National 0250, 0650
 Anglo 0009
 Anhua 0051
 Anitech 0009, 0037
 Ansonic 0009, 0370, 0668
 AOC 0009, 0030, 0060, 0092, 0093,
 0108, 0178, 0180, 0451
 Apex Digital 0748, 0765, 0767, 0879, 1943
 Ardem 0037, 0714
 Aristona 0037, 0556
 Asberg 0037
 Asora 0009
 Astra 0037
 ATD 0698
 Atlantic 0037
 Atori 0009
 Audinac 0180
 Audiosonic 0009, 0037, 0370, 0486, 0714
 Audioton 0370, 0486
 Audiovox 0092, 0180, 0451, 0623
 Awa 0009, 0108
 Axxent 0009
 Axxon 0714
 Baihe 0009
 Baile 0009, 0661
 Baird 0073, 0208
 Bang & Olufsen 0565
 Baosheng 0009

Basic Line 0009, 0037, 0556, 0668, 1037
 Baur 0009, 0037
 Baysonic 0180, 0236, 0463
 Beaumark 0178
 Beijing 0009, 0208, 0661, 0812
 Beko 0037, 0370, 0486, 0714, 1037
 Bell & Howell 0154
 BenQ 1032, 1756
 Beon 0037
 Berthen 0668
 Bestar 0037, 0370
 Black Diamond 1037
 Blaupunkt 0195
 Blue Sky 0037, 0487, 0556, 0668, 0714,
 1037, 1254
 Boots 0009
 BPL 0037
 Bradford 0180
 Brand Unknown 0060
 Brandt 0287, 0560, 0625
 Brinkmann 0037, 0486, 0668
 Broksonic 0236, 0463, 1911, 1935
 Bush 0009, 0037, 0208, 0487, 0556, 0661,
 0668, 0698, 0714, 1037, 1935
 Caihong 0009
 Cailing 0748
 Candle 0030
 Carad 0610, 0668, 1037
 Carena 0037
 Carnivale 0030
 Carver 0054
 Cascade 0009, 0037
 Casio 0037
 Cathay 0037
 CCE 0037
 Celebrity 0000
 Celera 0765
 Celestial 0767
 Centrum 1037
 Centurion 0037
 CGE 0370
 Changcheng 0009, 0051, 0661
 Changfei 0009
 Changhai 0009
 Changhong 0009, 0156, 0508, 0765, 0767,
 1008, 1156
 Chengdu 0009
 Ching Tai 0009, 0092
 Chun Yun 0000, 0009, 0092, 0180, 0700, 0843
 Chunfeng 0009
 Chung Hsin 0053, 0108, 0180
 Chunsun 0009
 Cimline 0009

Cinema 0672
 Cinal 0092, 0451
 Citizen 0030, 0060, 0092, 0451
 City 0009
 Clarion 0180
 Clarivox 0037
 Clatronic 0009, 0037, 0370, 0714
 Clayton 1037
 Commercial Solutions 0047, 1447
 Concorde 0009
 Condor 0009, 0037, 0370
 Conrac 0808
 Conrowa 0009, 0145, 0156, 0698, 1156
 Contec 0009, 0037, 0180
 Continental Edison 0287, 0487
 Cosmel 0009, 0037
 Craig 0180
 Crosley 0054
 Crown 0009, 0037, 0053, 0180, 0208, 0370,
 0486, 0487, 0672, 0714
 Crown Mustang 0672
 Curtis Mathes 0030, 0047, 0051, 0054, 0060,
 0093, 0145, 0154, 0166, 0451,
 0702, 1147, 1347
 CXC 0180
 D-Vision 0037, 0556
 Daenix 0180, 0672
 Daenyk 0672
 Daewoo 0009, 0030, 0037, 0092, 0108,
 0154, 0178, 0180, 0451, 0556,
 0623, 0634, 0661, 0672, 0700,
 0865, 1661
 Dansai 0009, 0037, 0208
 Dantax 0714
 Dawa 0009, 0037
 Dayton 0009
 Daytron 0009, 0037, 0180
 Dayu 0661
 De Graaf 0208, 0548
 Decca 0037
 Dell 1080
 Denon 0145
 Denver 0037
 Desmet 0009, 0037
 Diamant 0037
 Diamond 0009, 0698, 0706
 Digatron 0037
 Digiline 0668
 Digitor 0037
 Dixi 0009, 0037
 Domeos 0668
 Dongda 0009
 Donghai 0009
 Dreon 0037
 DTS 0009
 Dual 0037

Dumont 0017
 Durabrand 0171, 0178, 0180, 0463, 1034, 1463
 Dux 0037
 Dynatron 0037
 Ecco 0706
 ECE 0037
 Edison-Minerva 0487
 Elbe 0610
 Electrobond 0000
 Elekta 0009
 Elektra 0017, 1661
 ELG 0037
 Elin 0009, 0037, 0548
 Elta 0009
 Emerson 0037, 0154, 0171, 0178, 0180, 0236,
 0370, 0463, 0486, 0623, 0714, 1911
 Envision 0030
 Erres 0037
 ESA 0171, 0812
 ESC 0037
 Ether 0009, 0030
 Etron 0009
 Euroman 0037, 0370
 Europa 0037
 Exquisit 0037
 Feilang 0009
 Feilu 0009
 Feiyue 0009
 Fenner 0009
 Ferguson 0037, 0053, 0073, 0287, 0548,
 0560, 0625
 Fidelity 0037, 0171
 Finlandia 0208, 0548
 Finlux 0037, 0480, 0714
 Firstar 0009, 0236
 Firstline 0009, 0037, 0208, 0556, 0668,
 0714, 1037
 Fisher 0047, 0154, 0208, 0370
 Flint 0037, 0610
 Formenti 0037
 Fortress 0093
 Fraba 0037, 0370
 Friac 0009, 0037, 0370, 0610
 Frontech 0009
 Fujitsu 0009, 0683, 0809, 0853
 Fujitsu General 0009
 Fujitsu Siemens 0809
 Funai 0171, 0180, 0668, 1904
 Furi 0145
 Futuretech 0180
 Galaxi 0037
 Galaxis 0037, 0370
 Gateway 1755, 1756
 GBC 0009
 GE 0030, 0047, 0051, 0092, 0093, 0178,
 0180, 0451, 0560, 0625, 1147, 1347,
 1447, 1454, 1917, 1922

GEC	0037	Hua Tun	0009	Kathrein	0556	Matsui	0009, 0037, 0195, 0208,
Geloso	0009	Huafa	0009, 0145	KEC	0180		0443, 0487, 0556, 0714, 1037
General Electric	0047	Huanghaimei	0009	Ken Brown	0236, 0463	Matsushita	0051, 0250, 0650
General Technic	0009	Huanghe	0009	Kendo	0037, 0610	Matsuyama	0587
Genesis	0009, 0037	Huanglong	0009	Kenia	0030	Maxent	1755
Genexxa	0009, 0037	Huangshan	0009	Kenwood	0030	MCE	0009
Gericom	0865	Huari	0145	Kioto	0054, 0556, 0706	Mediator	0037
Gibraltar	0017, 0030	Huodateji	0051	Kiton	0037, 0668	Medion	0037, 0556, 0668, 0698, 0714,
Go Video	0886	Hyper	0009	KLH	0765, 0767		0808, 1037
Goldfunk	0668	Hypson	0037, 0668, 0714, 1037	KLL	00037	Megapower	0700
GoldStar	0030, 0037, 0154, 0178, 0714	Hyundai	0849, 0865	Kneissel	0037, 0556, 0610	Megas	0610
Gooding	0487	Hoher	0714	Kolin	0053, 0108, 0150, 0180	Megatron	0145, 0178
Goodmans ..	0009, 0037, 0480, 0487, 0556, 0560,	Iberia	0037	Kongque	0009	MEI	1037
	0634, 0661, 0668, 0714, 1037	Imperial	0037, 0370	Konichi	0009	Meletronic	0009, 0037, 0480,
Gorenje	0370	Imperial Crown	0009, 0661	Konka	0037, 0587, 0714, 1084		0634, 0661, 0714
Gradiente	0053	Indiana	0037	Kontakt	0487	Memorex	0009, 0060, 0150, 0154, 0178,
Graetz	0487	Infinity	0054	Korpel	0037		0250, 0463, 1037, 1911
Granada	0037, 0108, 0208, 0548, 0560	Ingelen	0487, 0610, 0714	Koyoda	0009	Mercury	0009, 0037, 0060
Grandin	0009, 0037, 0610, 0668,	Ingersoll	0009	KTV	0030, 0180	Mermaid	0037
	0714, 1037	Inno Hit	0009	Kuaille	0009	Metronic	0625
Grundig	0009, 0037, 0195, 0443, 0487, 0556,	Innova	0037	Kulun	0009	Metz	0037, 0447, 0587, 0668, 0746
	0587, 0672, 0706, 1935	Innowert	0865	Kunlun	0051, 0208, 0661	MGA	0030, 0150, 0178
Grunpy	0180	Inteq	0017	L&S Electronic	0714, 0808	Micromaxx	0037, 0668, 0808, 1037
Haaz	0706	Interbuy	0037	LaSAT	0486	Microstar	0808
Haier	0037, 0508, 0587, 0698, 1017, 1034	Interfunk	0037	Leader	0009	Midland	0017, 0047, 0051
Haihong	0009	Internal	0037	Lecson	0037	Minato	0037
Hallmark	0178	Intervision	0009, 0037, 0486, 0487	Legend	0009	Minerva	0108, 0487
Hankook	0030, 0178, 0180	IR	0037, 0073, 0093, 0108, 0195,	Lenco	0037, 1037	Minoka	0037
Hanseatic	0009, 0037, 0556, 0634, 0661,		0287, 0370, 0556	Lenoir	0009	Mitsubishi	0030, 0037, 0093, 0108, 0150, 0154,
	0714, 0808	Irradio	0009, 0037	Leyco	0037		0178, 0180, 0236, 0250, 0556, 1037,
Hantarex	0009, 0037, 0865	IRT	0451, 0698, 1661	LG	0030, 0037, 0060, 0108, 0178,	Mivar	1250, 1917
Hantor	0037	Isukai	0037		0556, 0698, 0700,	Monaco	0609
Harley Davidson	1904	ITS	0037		0714, 0856	Monovision	0009
Harman/Kardon	0054	ITT	0208, 0480, 0548, 0610	Liesen & Tter	0037	Morgan's	0700, 0843
Harsper	0865	ITT Nokia	0180, 0208, 0480, 0548, 0610	Liesenkotter	0037	Motorola	0037
Harvard	0180	ITV	0037	Lifetec	0009, 0037, 0668, 0683, 0714, 1037	MTC	0093
Harwood	0009, 0037, 0487	JBL	0054	Lloyd's	0009, 1904	MTC	0030, 0060, 0370
Hauppauge	0037	JCB	0000	Loewe	0037	MTlogic	0714
Havermy	0093	Jean	0009, 0051, 0092, 0156, 0236	Logik	0009, 0698	Mudan	0009, 0051, 0208
HCM	0009, 0037	Jensen	0761	Logix	0668	Multitec	0037, 0486, 0668, 1037
Helios	0865	Jiahua	0051	Lumatron	0037, 0073	Multitech	0009, 0037, 0180, 0486
Hello Kitty	0451	Jialicai	0009	Lux May	0009, 0037	Myryad	0556
Hema	0009	Jinfeng	0051, 0208	Luxor	0208, 0480, 0548, 1037	NAD	0156, 0178, 0866
Highline	0037	Jinque	0009	LXI	0047, 0054, 0154, 0156, 0178	Naiko	0037
Himitsu	0180	Jinta	0009	M & S	0054	Nanbao	0009
Hinari	0009, 0037	Jinxing	0009, 0037, 0054, 0145, 0156,	M Electronic	0009, 0037, 0287, 0480	National	0051, 0208, 0508
Hisawa	0610, 0714		0556, 0698, 1011	Madison	0037	NEC	0009, 0030, 0051, 0053, 0154,
Hisense	0009, 0145, 0156, 0208, 0508,	JMB	0443, 0556, 0634	Magnavox	0030, 0054, 0706,		0156, 0178, 0508, 0661
	0556, 0748, 1022, 1156	Jubilee	0556		1254, 1454, 1904	Neckermann	0037, 0370, 0556
Hitachi	0009, 0030, 0037, 0092, 0108, 0145,	JVC	0053, 0093, 0463, 0508, 0653,	Magnum	0037, 0714	NEI	0037
	0156, 0178, 0480, 0481, 0508, 0548,		0683, 0731, 1253, 1923	Manesth	0037	Netsat	0037
	0634, 1037, 1145, 1156, 1256, 1904, 1960	Kaige	0009	Manhattan	0037, 0668, 1037	Neufunk	0009, 0037, 0556, 0610, 0714
Hitachi Fujian	0108, 0150	Kaisui	0009, 0037	Marantz	0030, 0037, 0054, 0556	New Tech	0009, 0037, 0556
Hitsu	0009, 0610	Kangli	0009, 0661	Mark	0009, 0037, 0714	Newave	0009, 0092, 0093, 0178
Hongmei	0009, 0093	Kangyi	0009	Masuda	0009, 0037	Nikkai	0009, 0037
Hornophon	0037	Karcher	0610, 0714			Nikko	0030, 0092, 0178

Noblex	0037, 0154	Premier	0009	Sansei	0451	Sony	0000, 0037, 0053, 0093, 0145, 0150, 0156, 0250, 0650, 1100, 1651, 1904
Nokia	0180, 0208, 0480, 0548, 0610	Prima	0009, 0761	Sansui	0037, 0463, 0706, 1904, 1911, 1935	Soundesign	0178, 0180
Norcent	0748, 0824	Princeton	0700	Santon	0009	Soundwave	0037
Nordmende	0037, 0195, 0287, 0560, 0714	Prinston	1037	Sanyo	0088, 0108, 0145, 0154, 0156, 0180, 0208, 0370, 0508	Sowa	0051, 0060, 0092, 0156, 0178
Normerel	0037	Prism	0051	Sanyuan	0009, 0093	Spectra	0009
Novatronic	0037	Profex	0009	SBR	0037, 0556	Squareview	0171
NTC	0092	Profi	0009	Schaub Lorenz	0486, 0548, 0714	Ssangyong	0009
NU-TEC	0698	Proffitronic	0037	Schneider	0037, 0556, 0668, 0714, 1037, 1904	SSS	0180
Oceanic	0208, 0548	Proline	0037, 0625, 0634	Scotch	0178	Staksonic	0009
Okano	0009, 0037, 0370	Proscan	0047, 1347, 1447, 1922	Scott	0178, 0180, 0236	Standard	0009, 0037, 1037
Omni	0698	Proscoc	0156	Sears	0047, 0054, 0154, 0156, 0171, 0178, 1904	Starlite	0009, 0037, 0180
Onimax	0714	Prosonic	0037, 0370, 0668, 0714	Seaway	0634	Strato	0009, 0037
Onwa	0180	Protech	0009, 0037, 0486, 0668, 1037	Seelver	1037	Studio Experience	0843
Opera	0037	Proton	0009, 0030, 0178	SEG	0009, 0037, 0634, 0668, 1037	Sunkai	0487, 0610
Optimus	0154, 0166, 0250, 0650	ProVision	0037, 0556, 0714	SEI	0037	Sunstar	0009, 0037
Optonica	0093	Pulsar	0017	Sei-Sinudyne	0037	Sunwood	0037
Orbit	0037	Pye	0037, 0556	Semivox	0180, 0236, 0463	Supersonic	0009, 0208
Orion	0037, 0236, 0443, 0463, 0556, 0714, 1463, 1911	Pymi	0009	Semp	0156, 1356	SuperTech	0009, 0037, 0556
Orline	0037	Qingdao	0051, 0208	Sencora	0009	Supra	0009, 00178
Ormond	0668, 1037	Quasar	0009, 0051, 0250, 0650	Serie Dorada	0030, 0156, 0178, 0180	Supreme	0000
Osaki	0037, 0556	Quelle	0037, 0668	Serino	0093, 0610	Susumu	0287
Osio	0037	R-Line	0037	Shanghai	0009, 0208	Sutron	0009
Osume	0037	Radiola	0037, 0556	Shaofeng	0145	SVA	0587, 0748, 0865
Otto Versand	0037, 0093, 0556	Radiomarelli	0037, 0154	Sharp	0009, 0030, 0053, 0093, 0650, 1193, 1917	Sylvania	0030, 0054, 0171
Pacific	0556, 0714, 1037	RadioShack	0030, 0037, 0047, 0154, 0178, 0180, 1904	Shen Ying	0009, 0092	Symphonic	0171, 0180, 1904
Palladium	0037, 0370, 0714	Radiotone	0009, 0037, 0668, 1037	Shencai	0009, 0145	Synco	0000, 0060, 0092, 0093, 0178, 0451
Palsonic	0037, 0698	RCA	0000, 0030, 0047, 0051, 0060, 0090, 0092, 0093, 0178, 0560, 0618, 0625, 0679, 1047, 1147, 1247, 1347, 1447, 1454, 1547, 1917, 1922, 1948	Sheng Chia	0009, 0093, 0236	Sysline	0037
Panama	0037	Realistic	0030, 0154, 0178, 0180	Shenyang	0009	T + A	0447
Panasonic ...	0037, 0051, 0054, 0108, 0208, 0250, 0508, 0548, 0650, 0853, 1941	Recor	0037	Sherwood	0009	T+A	0447
Panavision	0037	Rectiligne	0037	Shintoshi	0037	Tacico	0009, 0092, 0178
Panda	0009, 0051, 0208, 0508, 0698, 0706	Rediffusion	0548	Shivaki	0037, 0178, 0443	Tai Yi	0009
Pausa	0009	Reflex	0037, 0668, 1037	Show	0009	Taishan	0009
Penney	0030, 0047, 0051, 0060, 0156, 0178, 1347	Relisys	0865	Siam	0037	Talent	0178
Perdio	0037	Reoc	0714	Siemens	0037, 0195	Tandy	0093
Perfekt	0037	Revox	0037	Siesta	0370	Targa	0702
Philco	0030, 0037, 0054, 0092, 0145, 0178, 0180, 0370, 0451, 0463, 0481, 1661, 1911	RFT	0037	Silva	0037	Tashiko	0092, 0650
Philips	0000, 0009, 0017, 0030, 0037, 0051, 0054, 0092, 0108, 0178, 0556, 0690, 1454, 1961	Roadstar	0009, 0037, 0668, 1037	Silva Schneider	0037	Tatung	0009, 0037, 0051, 0054, 0060, 0154, 0156, 1156, 1254, 1756
Phoenix	0037, 0486	Rowa	0009, 0037, 0587, 0698, 0748	Singer	0009, 0037	TCL	0698, 1027
Phonola	0037	Royal Lux	0370	Sinudyne	0037	TCM	0714, 0808
Pilot	0030	Runco	0017, 0030	SKY	0037	Teac	0009, 0037, 0171, 0178, 0668, 0698, 0706, 0714, 1037, 1755, 1904
Pioneer	0037, 0166, 0287, 0486, 0679, 0760, 0866	Saba	0250, 0287, 0548, 0560, 0625, 0714	Skygiant	0180	Tec	0009, 0037
Pionier	0370, 0486	Sagem	0610	Skyworth	0009, 0037, 0698, 0748, 1115	Tech Line	0037, 0668
Plantron	0009, 0037	Saige	0009	SLX	0668	Technics	0051, 0250, 0556, 0650
Playsonic	0037, 0714	Saisho	0009	Smaragd	0487	TechniSat	0556
Poppy	0009	Saivod	0037, 0668, 1037	Soemtron	0865	Techwood	0051
Portland	0092	Salora	0208, 0480, 0548	Solavox	0037, 0548	Tecnimagen	0556
Powerpoint	0037, 0487	Sampo	0009, 0030, 0092, 0093, 0154, 0171, 0178, 0650, 0700, 1755	Songba	0009	Teco ...	0009, 0051, 0092, 0093, 0178, 0653, 1040
		Samsung	0009, 0030, 0037, 0060, 0090, 0092, 0093, 0154, 0156, 0178, 0208, 0370, 0556, 0587, 0618, 0702, 0766, 0812, 1060, 1959	Soniko	0037	Tedelex	0009, 0208
				Sonitron	0208, 0370	Tek	0009
				Sonneclair	0037	Teknika	0054, 0060, 0092, 0150, 0180
				Sonoko	0009, 0037	Telecor	0037
				Sonolor	0208, 0548	Telefunken	0037, 0073, 0287, 0486, 0560, 0587, 0625, 0698, 0702
				Sontec	0009, 0037, 0370		

Telefusion	0037	Vlnc	1756	Orion	1911	Gehua	0476
Telegazi	0037	Vision	0037	RadioShack	1904	General Instrument	0003, 0276, 0476, 0810
Telesonic	0037	Vortec	0037	RCA	1917, 1922	General Instruments	0003, 0276, 0476
Telestarr	0009, 0037, 0556	Voxson	0178	Samsung	1959	GNI	1466
Teletech	0009, 0037, 0668, 1037	Waltham	0037, 0668, 1037	Sansui	1904, 1911	GoldStar	0144
Television	0037	Wards	0000, 0017, 0030, 0047, 0051, 0054, 0060, 0154, 0156, 0166, 0178, 0180, 0866, 1147, 1156, 1347	Schneider	1904	Hamlin	0009, 0273
Tempest	0009	Warumaia	0661	Sears	1904	Hongtian Jianguo	1462
Tennessee	0037	Watson	0009, 0037, 0668, 1037	Sharp	1917	Hwalin	0303
Tensai	0009, 0037	Waycon	0156	Sony	1904	Jerrold	0003, 0276, 0476, 0810
Tenson	0009	Wega	0037	Symphonic	1904	Jiuzhou	1445
Tera	0030	Weipai	0009	Teac	1904	Kabelvision	0003
Tevion	0037, 0668, 0714, 1037	Westinghouse	0889	Thomas	1904	KNC	0008
Texet	0009	Wharfedale	0037, 0556	Zenith	1904, 1911	LG	0144
Thomas	1904	White Westinghouse	0037, 0463, 0623	TV/DVD		Macab	0817
Thomson	0037, 0287, 0560, 0625, 1447	Windsor	0668, 1037	Apex Digital	1943	Melita	0003
Thorn	0037, 0073	Windy Sam	0556	Broksonic	1935	Memorex	0000
Thorn-Ferguson	0073	Wintel	0714	Bush	0698, 1037	Motorola	0276, 0476, 0810, 1254, 1376
Tiane	0093	Xenius	0634, 0661	Grundig	1935	Mr Zapp	0817
TMK	0178	Xiahua	0009, 0698	Hitachi	1960	MS	0303
TNCi	0017	Xianghai	0009	Panasonic	1941	Multitech	0883
Tobo	0009, 0748	Xiangyu	0009	Philips	1961	Noos	0817
Tokai	0009, 0037, 0668, 1037	Xingfu	0009	RCA	1948	NTL	0003, 0276, 1060, 1068
Tokaido	1037	XLogic	0698	Sansui	1935	Oak	0303
Tophouse	0180, 0672	XMS	0698	Sylvania	0171	Ono	1068
Toshiba	0009, 0060, 0093, 0145, 0154, 0156, 0195, 0508, 0618, 0650, 0714, 1156, 1256, 1356, 1656, 1935, 1945	Xoceco	1064	Toshiba	1935	Optus	0276, 1060
Toyoda	0009	Xrypton	0037	TV/VCR/DVD		Pace	0237, 1060, 1068, 1877
Trakton	0009	Yamaha	0030, 0650	Sharp	1917	Panasonic	0000, 0008, 0107
Trans Continens	0037, 0668, 1037	Yamishi	0037	Toshiba	1945	Paragon	0000
Transonic	0009, 0037, 0587, 0698	Yapshe	0250	CABLE		Philips	0317, 0817, 1305
Triad	0556	Yingge	0009	Cable Converters		Pioneer	0144, 0533, 0877, 1877
Triumph	0556	Yokan	0037	ABC	0003, 0008, 0237	Pulsar	0000
Tuntex	0009, 0030, 0092	Yoko	0009, 0037	Americast	0899	PVP Stereo Visual Matrix	0003
TVS	0463	Yonggu	0009	Austar	0276	Quasar	0000
TVTEXT 95	0556	Yousida	0009	Bell South	0899	RadioShack	0303, 0883
Uher	0037, 0480, 0486	Yuhang	0009	Bestlink	0303	Regal	0273, 0279
Ultravox	0037	Zenith	0017, 0092, 0178, 0463, 1904, 1911	Birmingham Cable Communications	0276	Runco	0000
Unic Line	0037	Zhuhai	0009	British Telecom	0003	Sagem	0817
United	0037, 0714	Zonda	0698	Cable & Wireless	1068	Salora	0000
Universal	0037	TV/VCR		Clearmaster	0883	Samsung	0000, 0144, 0840, 1060
Universum	0009, 0037, 0370, 0480, 0618, 0668, 1037	Aiwa	1904, 1911	ClearMax	0883	Scientific Atlanta	0008, 0237, 0477, 0877, 1068, 1877
Univox	0037	America Action	0180	Coolmax	0883	Skyworth	1464
V Inc.	1756	Audiovox	0180	Coship	1462	Sony	1006
V7	1755	Broksonic	1911	Daehan	0778	Starcom	0003
Vector Research	0030	Emerson	0236, 1911	Daeryung	0008, 0477, 0877, 1877	Supercable	0276
Vestel	0037, 0556, 0668, 1037	Funai	1904	Director	0476	Supermax	0883
Vexa	0009, 0037	GE	1917, 1922	France Telecom	0817	Taihan	0778
Victor	0053, 0250, 0650, 0653	Harley Davidson	1904	Galaxi	0008	TCL	1445
Videomac	0009	Hitachi	1904	GE	0237	Telewest	1068
VideoSeven	1755	JVC	1923	CABLE		Time Warner cable	1877
VideoSystem	0037	Lloyd's	1904	Cable Converters		TongKook	0840
Vidikron	0054	Magnavox	1904	ABC	0003, 0008, 0237	Torx	0003
Vidtech	0178	Mitsubishi	1917	Americast	0899	Toshiba	0000
Viewsonic	1755			Austar	0276	Trans PX	0276, 0303

United Cable	0003
US Electronics	0276
V2	0883
Viewmaster	0883
Vision	0883
Visiopass	0817
Vortex View	0883
Zenith	0000, 0008, 0525, 0899

VIDEO ACCESSORY

Video Accessories

ABS	1272
Alienware	1272
CyberPower	1272
D-Link	1554
Gateway	1272
Hewlett Packard	1267, 1272
Howard Computers	1272
HP	1272
iBUYPOWER	1272
LG	1415
Linksys	1365
Media Center PC	1272
Microsoft	1272
Mind	1272
Motorola	1363
Northgate	1272
Packard Bell	1272
Panasonic	1120
Pioneer	1010
Samsung	1190, 1490
Sensory Science	1126
Sharp	1010
SMC	1456
Sony	1272, 1324, 1364
Systemax	1272
Tagar Systems	1272
Toshiba	1272
Touch	1272
Viewsonic	1272, 1329
ZT Group	1272

DSS/SATELLITE

Satellite Receivers

@sat	1300
ABsat	0123
ADB	0642
AGS	0710
Akai	0200
Allsat	0200, 1017, 1043
AlphaStar	0772

Ampere	0132
Amstrad	0132, 0345, 0795, 0847, 0863, 0882, 1175
AntSat	1017, 1083
Arcon	1043, 1075
Arnion	1300
Asat	0200
AssCom	0853
Astacom	0710
Aston	0142
Astro	0173, 1099
Atsat	1300
Aurora	0642, 0879
Austar	0497, 0642, 0863, 0879
Axiel	0710
Axis	1111
Bentley Walker	1017
Blaupunkt	0173
Boca	0132
Boston	0710
Brand Unknown	0132, 0299
British Sky Broadcasting	0847, 1175, 1847
BskyB	0847, 1175
BT	0710
Canal Digital	0853
Canal Satellite	0853
Canal+	0853
CanalSatellite	0853
Century	0856
Chaparral	0216
Cherokee	0123, 0710
Chess	1085
CityCom	0299, 1075, 1176
Colombia	0132
Columbia	0132
Comag	0132
Conrad	0132
Crossdigital	1109
Cryptovision	0795
Cyrus	0200
D-box	0723, 0873
Daewoo	1111
Delfa	0863
Deltasat	1075
Digenius	0299
DigiQuest	0863
Digiturk	1076
DirecTV	0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1392, 1414, 1442, 1639, 1640, 1749, 1856
Discovery	0710
Diseqc	0710
Dish Network System	0775, 1005, 1505, 1775
Dishpro	0775, 1005, 1505, 1775
DMT	1075

DNT	0200
Dream Multimedia	1237
DREAM multimedia.TV	1237
DStv	0642, 0879
DX Antenna	1530
Echostar	0167, 0610, 0775, 0853, 0871, 1005, 1086, 1200, 1505, 1775
Einhell	0132
Elta	0200
Emme Esse	0871
Engel	1017
Eurieult	0882
Europa	0863
Europhon	0132, 0299
Eurosky	0132, 0299
Expressvu	0775, 1775
Force	1101
Force NO AS	1101
Fortec Star	1017, 1083
Foxtel	0497, 0720, 0879, 1176
Fracarro	0871
Freesat	0882
FTEmaximal	0863
Fuba	0173, 0299
Galaxis	0853, 0863, 0879, 1101, 1111
Garnet	1075
GE	0566
General Instrument	0869
General Instruments	0869
GF	1043
GF Star	1043
GOD Digital	0200
GOI	0775, 1775
Gold Box	0853
Goldbox	0853
Goldvision	1017
Gradiente	0099, 0856, 0887
Grundig	0173, 0345, 0847, 0853, 0879
Hanseatic	1099
Hirschmann	0173, 0299, 0710, 0882, 1085, 1111
Hisense	1535
Hitachi	0819, 1250
HNE	0132
Hornet	1300
HSnsel & Gretel	0132
HTS	0775, 1775
Hughes Network Syst	0749
Hughes Network Systems	0749, 1142, 1442, 1749
Humax	0863, 1176, 1406
Huth	1109, 1142, 1392, 1414, 1442, 10132, 1017, 1075
Hyundai	1075
I-Lo	1535
ID Digital	1176
Indovision	0887
Inglen	0882
Innova	0099

International	0132
Interstar	1017
InVideo	0871
IR	0173
Irdeto Technology	0879
ISkyB	0887
Italtel	0871
ITT Nokia	0723, 0873
Jiuzhou	1450
JOK	0710
JVC	0775, 1775
Kaon	1300
KaTelco	1111
Kathrein	0123, 0173, 0200, 0249, 1221
Kenwood	0853
Key West	0132
Klap	0710
Koscom	1043
Kreiling	0249
Kreiselmeyer	0173
L&S Electronic	0132, 1043
LaSAT	0132, 0299
LG	1075, 1414
Lifesat	0132, 0299, 1043
Logix	1017, 1075
Lorenzen	0132, 0299
Luxor	0345
Magnavox	0722, 0724
Manata	0132, 0710
Manhattan	1017, 1083
Marantz	0200
Maspro	0173, 1530
Matsui	0173, 0710
Maximum	1075
MediaSat	0853
Medion	0132, 0299, 1043, 1075
Mega	0200
Memorex	0724
Metz	0173
Micromaxx	0299
Microstar	1075
Mitsubishi	0749
Morgan's	0132, 0200
Motorola	0856, 0869
Multichoice	0642, 0879
Myryad	0200
Netsat	0099, 0887
Neuling	0132
Next Level	0869
Nikko	0200
Nokia	0723, 0751, 0853, 0873, 1023, 1223
OctalTV	1505
OnDigital	0751
Optex	1043
Optus	0879
Orbitech	1099

Origo 0497
OSAT 0345
Pace 0200, 0497, 0720, 0795, 0847,
0853, 0887, 1175
Packard Bell 1111
Packsat 0710
Palcom 0299
Panasat 0615, 0879
Panasonic 0247, 0701, 0847, 1527
Panda 0173
Patriot 0132, 0710
Paysat 0724
Philips 0099, 0173, 0200, 0710, 0722, 0724,
0749, 0853, 0856, 0887, 1076, 1114,
1142, 1442, 1749
Phonotrend 0863, 1017, 1200
Pioneer 0853
Planet 0871
Preisner 0132, 1101
Premiere 0853, 0873
Prima 0795
Primacom 1111
Profile 0710
Proscan 0392, 0566
Proton 1535
QNS 1402
Quadral 0710
Quelle 0299
Radiola 0200
RadioShack 0869
Radix 0882
RCA 0143, 0392, 0566, 0855, 1392
RFT 0200
Roadstar 0853
Saba 0710
Sagem 0820, 1114, 1307
Samsung 0853, 0863, 1017, 1108, 1109, 1276
Sat Control 1300
Satstation 1083
Schneider 0710
Schwaiger 0132, 0863, 1075, 1083, 1111
SCS 0299
Sedea Electronique 0132
SEG 1075, 1087
Seleco 0871
Serino 0610
Siemens 0173
Silva 0299
SKY 0099, 0847, 0856, 0887, 1014,
1175, 1847, 1856
SKY Italia 1847
Sky Television 1014
SKY+ 1175
Skymaster 1075, 1085, 1200
Skymax 0200
SL 0132, 0299

SM Electronic 1200
Smart 0132, 0299, 0882, 1101
Sony 0639, 0847, 0853, 1524, 1639, 1640
SR 0132
Star 0887
Star Choice 0869
Starlite 0200
Stream 1847
Strong 0132, 0853, 0879, 1300
Sunkai 0123
Sunstar 0132, 0642
Supernova 0887
SVA 1455
Tecatel 1200
TechniSat 0200, 0863, 1099
Technowelt 0132
Techsan 1017
tekComm 1017
Telcel 1043
Telefunken 0710
Telestar 1099
Televes 0132, 1300
Televisa 0887
Thomson 0392, 0710, 0820, 0847, 0853, 1046
Tioko 0132
Tivo 1142, 1442
Tokai 0200
Toshiba 0749, 0790, 1285, 1530, 1749
TPS 0820, 1307
Triax 0132, 0200, 0853, 1099
Trio 1075
UEC 0879
UltimateTV 1392, 1640
Uniden 0722, 0724
Unisat 0132, 0200
Universum 0173, 0299, 1087, 1099
US Digital 1535
USDTV 1535
Variosat 0173
Ventana 0200
VH-Sat 0299
Visiosat 0142, 0710
Viva 0856
Voom 0869
Wintel 0299
Wisi 0173, 0299
Worldsat 0123, 0710
XCOM 0123
Xsat 0123, 0847
Xtreme 1300
Yes 0887
Zehnder 1075
Zenith 0856, 1856

VCR

VCRs

ABS 1972
Accent 0072
Admiral 0048, 0209
Adventura 0000
Adyson 0072
Aiko 0278
Aim 0278
Aiwa 0000, 0037, 0209, 0348, 0479
Akai 0037, 0041, 0240, 0315, 0348, 0642
Akiba 0072
Akura 0072
Alba 0000, 0072, 0081, 0209, 0278, 0315, 0348
Alienware 1972
Allorgan 0240
Allstar 0081
America Action 0278
American High 0035
Amoisonic 0479
Amstrad 0000, 0072, 0278
Anam 0037, 0162, 0226, 0240, 0278
Anam National 0162, 0226, 1562
Anitech 0072
Ansonic 0000
Aristona 0081
ASA 0037, 0081
Asha 0240
Asuka 0037, 0038
Audiosonic 0278
Audiovox 0037, 0278
AVP 0000
Awa 0037, 0043, 0278, 0642
Baird 0000, 0041, 0104
Basic Line 0046, 0072, 0104, 0278
Beaumarck 0240
Beko 0104
Bell & Howell 0104
Bestar 0278
Black Diamond 0642
Black Panther 0278
Blaupunkt 0081, 0162, 0226
Blue Sky 0037, 0072, 0209, 0278, 0348, 0642
Bondstec 0072
Brand Unknown 0104, 0348
Brandt 0041, 0320
Brandt Electronic 0041
Brandt Electronique 0041
Brinkmann 0209, 0348
Broksonic 0002, 0121, 0184, 0209, 0348, 0479
Bush 0000, 0072, 0081, 0209, 0278,
0315, 0348, 0642
Calix 0037
Canon 0035
Carena 0081, 0209

Carrefour 0045
Carver 0081
Casio 0000
Cathay 0278
CCE 0072, 0278
CGE 0000, 0041
Changhong 0048, 0081
Cimline 0072
Cineral 0278
Citizen 0037, 0278
Clatronic 0000, 0072
Colt 0072
Condor 0278
Craig 0037, 0047, 0072, 0240
Crown 0037, 0072, 0278
Curtis Mathes 0035, 0041, 0060, 0162
Cybernex 0240
CyberPower 1972
Cyrus 0081
Daewoo 0045, 0046, 0104, 0209, 0278, 0642
Dansai 0072, 0278
Daytron 0278
De Graaf 0042, 0046, 0048, 0081, 0104
Decca 0000, 0041, 0067, 0081, 0209
Deitron 0278
Dell 1972
Denko 0072
Denon 0042
Diamant 0037
Diamond 0348
DirecTV 0739
Domland 0209
Dual 0000, 0041, 0081, 0278, 0348
Dumont 0000, 0081, 0104
Durabrand 0038, 0039
Dynatech 0000
Elbe 0038, 0278
Elcatech 0072
Electrohome 0037
Electroponic 0037
Elin 0240
Elsay 0072
Elta 0072, 0278
Emerex 0032
Emerson 0000, 0002, 0035, 0037, 0043,
0045, 0072, 0121, 0184, 0209,
0240, 0278, 0479
ESC 0240, 0278
Etzuko 0072
Ferguson 0000, 0041, 0278, 0320
Fidelity 0000, 0072, 0240, 0432
Finlandia 0000, 0037, 0042, 0043, 0046,
0048, 0081, 0104, 0226
Finlux 0000, 0042, 0081, 0104
Firstline 0037, 0043, 0045, 0072, 0209, 0278, 0348
Fisher 0046, 0047, 0104

Flint	0209, 0348	International	0037, 0278, 0642	MEI	0035	Palladium	0037, 0041, 0072, 0209, 0348
Frontech	0072	Intervision	0000, 0209, 0278	Melectronic	0000, 0037, 0038	Palsonic	0000, 0072, 0642
Fuji	0033, 0035	IR	0041, 0042, 0045, 0047, 0072, 0081, 0104, 0209, 0226, 0240, 0348	Memorex	0000, 0035, 0037, 0039, 0046, 0047, 0048, 0104, 0162, 0209, 0240, 0348, 0479	Panasonic	0035, 0162, 0225, 0226, 0616, 1062, 1562
Fujitsu	0000, 0045	Irradio	0037, 0072, 0081	Memphis	0072	Pathe Cinema	0043
Fujitsu General	0037	ITT	0041, 0046, 0104, 0240	Metronic	0081	Pathe Marconi	0041
Funai	0000	ITV	0037, 0278	Metz	0037, 0081, 0162, 0226, 0347, 1562	Penney	0035, 0037, 0038, 0042, 0240
Galaxi	0000	JBL	0278	MGA	0043, 0240	Pentax	0042
Galaxis	0278	Jensen	0041	MGN Technology	0240	Perdio	0000, 0209
Garrard	0000	JMB	0209, 0348	Micormay	0348	Philco ... 0000, 0035, 0038, 0072, 0209, 0226, 0479	0000, 0209
Gateway	1972	Joyce	0000	Micromaxx	0209	Philips	0000, 0035, 0081, 0226, 0618, 0739
GE	0035, 0048, 0060, 0226, 0240, 0320	JVC	0041, 0045, 0067, 0081, 1008	Microsoft	1972	Phoenix	0278
GEC	0081	Kaisui	0072	Migros	0000	Phonola	0081
General	0045	Kambrook	0037	Mind	1972	Pilot	0037
General Technic	0348	Karcher	0081, 0278	Minolta	0042	Pioneer	0042, 0067, 0081, 0162
Genexxa	0104	KEC	0037, 0278	Mitsubishi	0000, 0041, 0043, 0048, 0067, 0081, 0642	Polk Audio	0081
Go Video	0432	Kendo	0072, 0209, 0278, 0315, 0348, 0642	Motorola	0035, 0048	Portland	0278
GoldHand	0072	Kenwood	0038, 0041, 0067	MTC	0000, 0240	Prinz	0000
GoldStar	0037, 0038, 0209, 0225, 0226	KIC	0000	Multitec	0037	Profitronic	0081, 0240
Goodmans	0000, 0037, 0072, 0081, 0209, 0278, 0348, 0642	Kimari	0047	Multitech	0000, 0072	Proline	0000, 0278, 0320, 0642
GPX	0037	Kioto	0348	Murphy	0000	Proscan	0060
Gradiente	0000	KLH	0072	Myryad	0081	Prosco	0278
Graetz	0041, 0104, 0240	Kneissel	0037, 0209, 0278, 0348	NAD	0104	Prosonic	0209, 0278
Granada	0000, 0037, 0042, 0046, 0048, 0081, 0104, 0226, 0240	Kodak	0035, 0037	Naiko	0642	Protec	0072
Grandin	0000, 0037, 0072, 0209, 0278	Kolin	0041, 0043	National	0226	Protech	0081
Grundig	0072, 0081, 0226, 0320, 0347, 0348	Kolster	0209	Nebula Electronics	0033	ProVision	0278
Haaz	0348	Korpel	0072	NEC	0035, 0037, 0038, 0041, 0048, 0067, 0104, 0278	Pulsar	0039
Hanseatic	0037, 0038, 0081, 0209	Kuba	0047	Neckermann	0081	Pye	0000, 0081
Haojie	0240	Kuba Electronic	0047	Nesco	0000, 0072	Qisheng	0060
Harley Davidson	0000	Kuwa	0226	Neufunk	0209	Quarter	0046
Harman/Kardon	0038, 0081	Kyoto	0072	Newave	0037	Quartz	0046
Harwood	0072	Lenco	0278	Nikkai	0072, 0278	Quasar	0035, 0162, 0278
HCM	0072	Leyco	0072	Nikko	0037	Quelle	0081
Headquarter	0046	LG	0037, 0038, 0042, 0045, 0209	Noblex	0240	Radialva	0037, 0048, 0072, 0081
Hewlett Packard	1972	Lifetec	0209, 0348	Nokia	0041, 0042, 0046, 0048, 0081, 0104, 0240, 0278, 0315	Radiola	0081
HI-Q	0047	Lloyd's	0000	Nordmende	0041, 0067, 0320	Radionette	0037
Hinari	0041, 0072, 0209, 0240, 0278	Loewe	0037, 0081, 0162, 1562	Northgate	1972	RadioShack	0000, 0037
Hisawa	0209	Logik	0072, 0209, 0240	NU-TEC	0209	Radix	0037
Hischito	0045	Lux May	0072	Oceanic	0000, 0041, 0046, 0048, 0081, 0104	Randex	0037
Hitachi	0000, 0037, 0041, 0042, 0046, 0081, 0089, 0240	Luxor	0043, 0046, 0047, 0048, 0104, 0315	Okano	0072, 0209, 0278, 0315, 0348	Rank	0041
Hornophon	0081	LXI	0037	Olympus	0035, 0226	Rank Arena	0041
Howard Computers	1972	M Electronic	0000, 0038	Onimax	0642	RCA	0000, 0035, 0042, 0048, 0060, 0149, 0226, 0240, 0320, 0880
HP	1972	Magnasonic	0278	Optimus	0037, 0048, 0104, 0162, 0432, 1062	Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0104
HP	1972	Magnavox ... 0000, 0035, 0039, 0081, 0149, 0642	0278	Orbit	0072	Reoc	0348
Hughes Network Syst	0042	Magnin	0240	Orion	0002, 0121, 0184, 0209, 0348, 0479	ReplayTV	0616
Hughes Network Systems	0042, 0739	Magnum	0642	Orson	0000	Rex	0041
Hypson	0000, 0037, 0072, 0209, 0278	Manesth	0045, 0072, 0081, 0209	Osaki	0000, 0037, 0072	RFT	0072
Hoyer	0278, 0642	Marantz	0035, 0038, 0081, 0209	Osime	0072	Roadstar	0037, 0072, 0081, 0240, 0278
iBUYPOWER	1972	Mark	0000, 0278	Otake	0209	Royal	0072
Imperial	0000	Marta	0037	Otto Versand	0081	Runco	0039
Ingersoll	0209, 0240	Master's	0278	Pacific	0000, 0348, 0642	Saba	0041, 0278, 0320
Inno Hit	0072	Matsui	0209, 0240, 0278, 0348	Packard Bell	1972	Saisho	0209, 0348
Interbuy	0037, 0072	Matsushita	0035, 0162, 0226			Salora	0043, 0046, 0104
Interfunk	0081, 0104	Media Center PC	1972			Sampo	0037, 0048
Internal	0278	Mediator	0081				
		Medion	0209, 0348, 0642				

Samsung	0045, 0240, 0432
Sanky	0039, 0048
Sansei	0048
Sansui	0000, 0041, 0067, 0072, 0209, 0348, 0479
Sanyo	0046, 0047, 0048, 0067, 0104, 0209, 0240, 0348
Saville	0240, 0278
SBR	0081
Schaub Lorenz	0000, 0041, 0104, 0315, 0348
Schneider	0000, 0037, 0042, 0072, 0081, 0240, 0278, 0348, 0642
Scott	0043, 0045, 0121, 0184
Sears	0000, 0035, 0037, 0042, 0046, 0047, 0104
Seaway	0278
SEG	0072, 0081, 0240, 0278, 0642
SEI	0081
Sei-Sinudyne	0081
Seleco	0037, 0041
Semivox	0045, 0209
Semp	0045
Sentra	0072
Setron	0072
Sharp	0037, 0048, 0209
Shinco	0000
Shintom	0072, 0104
Shivaki	0037
Shogun	0240
Siemens	0037, 0046, 0081, 0104, 0320, 0347
Siera	0081
Silva	0037
Silver	0278
Singer	0045, 0072, 0348
Sinudyne	0081, 0209
Smaragd	0348
Sonic Blue	0616
Sonneclair	0072
Sonolor	0046
Sontec	0037
Sony	0000, 0032, 0033, 0035, 0636, 1972
Soundwave	0037, 0209, 0348
Ssangyong	0072
Standard	0278
Stern	0278
STS	0042
Sunkai	0209, 0278, 0348
Sunstar	0000
Suntronic	0000
Sunwood	0072
Supra	0037, 0278, 0348
Sylvania	0000, 0035, 0043, 0081
Symphonic	0000
Systemax	1972
T+A	0162
Tagar Systems	1972
Taisho	0209
Tandberg	0278
Tandy	0000, 0104
Tashiko	0000, 0037, 0048, 0081, 0240
Tatung	0000, 0041, 0043, 0045, 0048, 0067, 0081, 0209, 0348
Tchibo	0348
TCM	0348
Teac	0000, 0037, 0041, 0072, 0278, 0642
Tec	0072
Tech Line	0072
Technics	0035, 0081, 0162, 0226
TechniSat	0348
Teco	0035, 0037, 0038, 0041, 0048
Tedalex	0037, 0209, 0348
Teknika	0000, 0035, 0037
Teleavia	0041
Telefunken	0041, 0209, 0278, 0320, 0642
Telestar	0037
Teletech	0000, 0072, 0278
Tenosal	0072
Tensai	0000, 0072, 0278
Tevion	0209, 0348, 0642
Textet	0278
Thomas	0000
Thomson	0041, 0060, 0067, 0278, 0320
Thorn	0037, 0041, 0104
Tivo	0618, 0636, 0739, 1503
TMK	0240
Tokai	0037, 0041, 0072, 0104
Topline	0348
Toshiba	0041, 0042, 0043, 0045, 0067, 0081, 0432, 1008, 1503, 1972
Totevision	0037, 0240
Touch	1972
Towada	0072
Tradex	0081
Triad	0278
Uher	0240
Ultravox	0278
Unitech	0240
United	0348
United Quick Star	0278
Universum	0000, 0037, 0081, 0104, 0209, 0240, 0348
Vector	0045
Vector Research	0038
Victor	0041, 0067
Video Concepts	0045
Video Technic	0000
Videomagic	0037
Videosonic	0240
Viewsonic	1972
Villain	0000
Wards	0000, 0033, 0035, 0038, 0039, 0042, 0045, 0046, 0047, 0048, 0060, 0072, 0081, 0149, 0240
Watson	0081, 0642

Weltblick	0037
Wharfedale	0642
White Westinghouse	0072, 0209, 0278
World	0348
XR-1000	0000, 0035, 0072
Yamaha	0038, 0041
Yamishi	0072, 0278
Yokan	0072
Yoko	0037, 0072, 0240
Zenith	0000, 0033, 0039, 0209, 0479
ZT Group	1972
ZX	0209, 0348

LD

Laser Disk Players

Baolijin	0726
Caishi	0726
Caosde	0726
Denon	0059
Grundig	0059
Lingxian	1220
Microboss	0726
Mitsubishi	0059
NAD	0059
Nagsmi	0059
Optimus	0059
Panasonic	0204
Pioneer	0059
Quasar	0204
Skyworth	1218
Sony	0201
TCL	1184
Technics	0204
Telefunken	0059
Wards	0059

DVD

Digital Video Disks

3DLAB	0539
Acoustic Solutions	0730
AEG	0770
Aim	0699, 0833
Airis	1250
Aiwa	0533
Akai	0690, 0770, 1115
Akira	0699
Alba	0539, 0672, 0695, 0699, 0713, 0717, 0730, 0783
Allegro	0869
Amitech	0770, 0784, 0850
Amstrad	0713
Ansonic	0774, 0831
Apex Digital	0672, 0717, 0794, 0796, 0797, 1004, 1020, 1056, 1061
Aspire Digital	1168
Audiosonic	0690
Audiovox	0717
Awa	0730
Axion	0730
Baze	0672
Bellagio	1004
Black Diamond	0713
Blaupunkt	0717
Blue Parade	0571
Blue Sky	0651, 0672, 0695, 0713
Boghe	1004
Boman	0783
Brainwave	0770, 1115
Brand Unknown	0490, 0717, 0730
Brandt	0503, 0651
Broksonic	0695
Bush	0672, 0690, 0695, 0699, 0713, 0717, 0730, 0831
C-Tech	0768, 0798
Cambridge Soundworks	0690
Cat	0699
CCE	0730
Celestial	1020
Centrex	0672, 1004
Centrum	0713
CGV	1115
Changhong	1061
Cineral	0730
Cinetec	0713
cineULTRA	0699
CineVision	0869
Classic	0730
Clatronic	0672
Clayton	0713
Coby	0730, 1086
Conia	0672

Continental Edison	0831	Grunkel	0770	Metronic	0690	Revoy	0699
Crown	0690, 0770, 1115	H & B	0850	Metz	0525, 0571, 0713	Rio	0869
Cybercom	0831	H&B	0713, 0850	Micromedia	0503, 0539	Roadstar	0672, 0690, 0699, 0713, 0730
CyberHome	0816, 1129	Haaz	0768	Micromega	0539	Rotel	0558, 0623
Cytron	0651, 0774	Hanseatic	0741, 0783	Microsoft	0522	Rowa	0717, 1004
D-Vision	1115	HE	0730	Microstar	0831	Saba	0651
Daewoo	0770, 0784, 0833, 0869, 1172	HenS	0713	Minato	0752	Sabaki	0798
Dansai	0770, 0783, 1115	Hitachi	0573, 0664, 0695	Minax	0713	Saivod	0831
DCE	0831	Hiteker	0672	Minoka	0770	Salora	0741
Decca	0770, 1115	Home Electronics	0730	Mintek	0717, 0839	Sampo	0752
Denon	0490	Humax	0646	Mirror	0752	Samsung	0490, 0573, 0744, 0820, 1075
Denver	0672, 0699	Hyundai	0783, 0850	Mitsubishi	0521, 0713, 1521	Sansui	0695, 0768, 0784
Desay	1212	Hoher	0651, 0713, 0831	Mustek	0730, 1730	Sanyo	0670, 0695, 0873
Diamond	0651, 0768	Initial	0717, 0839	Mx Onda	0651	Scan	0850
Digihome	0713	IRT	0783	NAD	0741	ScanMagic	0730, 1730
digiRED	0717	ISP	0695	Naiko	0770, 1004	Schaub Lorenz	0770, 1115
Digitor	0651	JDB	0730	NEC	0869	Schneider	0539, 0651, 0774, 0783, 0831
Digitrex	0672, 1056	Jeken	0699	Nesa	0717	Schwaiger	0752
DiK	0831	Jepssen	1250	Nevir	0770, 0831	Scientific Labs	0768
DK digital	0831	JMB	0695	Nintaus	1202	Scott	0651, 0672
DMTECH	0783	JVC	0503, 0539, 0558, 0623, 0867	Nordmende	0774, 0831	SEG	0713, 0768, 0798
Dragon	0831	Karcher	0783	Noriko	0752	Semp	0503
Dual	0651, 0713, 0730, 0783, 0831	Kendo	0699, 0713	Okano	0752	Shanghai	0672
Durabrand	0713	Kennex	0770	Olidata	0672	Sharp	0630, 0752
DVD2000	0521	Kenwood	0490, 0534	Omni	0690, 0833	Sherwood	0717, 0741, 0770
DVX	0768	Kiiri	0770	Onkyo	0503	Shinco	0717
Elin	0770	KLH	0717, 1020	Optimus	0525	Shinsonic	0533, 0839
Ellion	0850	KLH Digital	0717	Orion	0695	Silva Schneider	0831
Elta	0672, 0690, 0770, 0850, 1115	Konka	1192	Oritron	0651	Simaudio	0885
Emerson	0591, 0675	Koss	0651	Ormond	0713	Singer	0690, 0768
Enterprise	0591	Lasonic	0798	Pacific	0713, 0768, 0831	Skymaster	0730, 0768
Enzer	0784	Lawson	0768	Palladium	0695	Slim Art	0784
EuroLine	1115	Lenco	0651, 0672, 0699, 0713, 0770, 0774	Palsonic	0672	Slim Devices	0533
Fenner	0651	Lenoxx	0690	Panasonic	0490, 1762	SM Electronic	0690, 0730, 0768
Ferguson	0651	Lexia	0699, 0768	Panda	0717, 1203	Smart	0713
Finlux	0591, 0672, 0741, 0770, 0783	LG	0591, 0741, 0869	Philco	0690	Sonashi	0831
Fintec	0784	Lifetec	0651, 0831	Philips	0503, 0539, 0646, 0675, 0885	Sonic Blue	0783, 0869, 1099
Firstline	0713, 0869	Limit	0768	Phonotrend	0699	Sony	0533, 0573, 0864, 1033
Fisher	0670	Lite-On	1058, 1158	Pioneer	0525, 0571	Soundmaster	0768
Funai	0675, 0695	LiteOn	1058, 1158	Plu2	0850	Soundmax	0768
Gateway	1158	Loewe	0539, 0885	Pointer	0784	Soundwave	0783
GE	0522, 0717	Logix	0783	Polaroid	1061, 1086	Standard	0651, 0768
General Electric	0717	Luxman	0573	Polk Audio	0539	Sunkai	0770, 0850
Global Solutions	0768	Luxor	1004	Polkaudio	0539	Supervision	0768
Global Sphere	0768	Magnasonic	0651	Portland	0770	SVA	0672, 0717, 1105
Go Video	0715, 0741, 0744, 0783, 0833, 0869, 1075, 1099, 1158, 1730	Magnavox	0503, 0539, 0675	Prinz	0831	Sylvania	0630, 0675
GoldStar	0591, 0741	Manhattan	0713	Proline	0651, 0672, 0833, 1004	Symphonic	0675
Goodmans	0651, 0690, 0713, 0730, 0783, 0833, 1004	Marantz	0539	Proscan	0522	Synn	0768
GPX	0699	Mark	0713	Prosonic	0699	Tandberg	0713
Gradiente	0651	Marquant	0770	ProVision	0699	Tatung	0770
Gran Prix	0831	Matsui	0651, 0672, 0695, 0713, 1004	Qwestar	0651	TCL	1180
Grandin	0713	Maxim	0713	Radionette	0741, 0869	Teac	0571, 0717, 0741, 0768, 0833
Greenhill	0717	MBO	0690, 0730, 1730	RCA	0522, 0571, 0717, 0822	Technics	0490
Grundig ...	0539, 0651, 0670, 0695, 0713, 1004, 1730	Mecotek	0770	REC	0490	Technika	0770, 0831, 1115
		Medion	0630, 0651, 0774, 0783, 0831	Red Star	0770	Technisson	1115
		Memorex	0695, 0831	Reoc	0752, 0768	Technosonic	0730, 1115

Techwood	0713
Tedelex	0690
Teletech	0713, 0768
Tensai	0651, 0690, 0770
Tevion	0651, 0768, 0798
Theta Digital	0571
Thomson	0522
Tokai	0784
Toshiba	0503, 0695, 1154
TRANS-continents	0831
Trasonic	0672
Tsinghua Tongfang	1205
Umax	0690
United	0672, 0730, 1115
Universum	0591, 0713, 0741, 0869
Urban Concepts	0503
US Logic	0839
Vestel	0713
Voxson	0690, 0730, 0774, 0831
Walkvision	0717
Welkin	0831
Wellington	0713
Wesder	0699
Wharfedale	0752
Wilson	0831
Windy Sam	0573
WIZE	1115
Xbox	0522
XLogic	0768, 0798
Xoro	1250
Yakumo	1004, 1056
Yamada	1004
Yamaha	0490, 0539, 0545, 0646
Yukai	0730, 1730
Zenith	0503, 0591, 0741, 0869
Zeus	0784

TUNER

Audio Amp/Tuners

ADC	0531
Aiwa	0121, 0158, 0189, 1405
Anam	1074, 1609
Arcam	0189
Audiolab	1189
Audiotronic	1189
AVLight	0158
Bose	1229
Cairn	0189
Cambridge	0189
Cambridge Audio	0189
Capetronic	0531
Carver	0189, 1189
Coby	1263
Dell	1383
Denon	1142, 1360
Ferguson	0531
Fine Arts	1189
Fonmix	1360
Glory Horse	1263
Goldmund	0189
Grundig	0189, 1189
Harman/Kardon	0110, 0189, 1189
Inkel	0027
Integra	0135
JBL	0110
JVC	0074, 0531, 1263
Kenwood	0027, 1313, 1569
KLH	1428
Linn	0189
Loewe	0189
Magnavox	0189, 0531, 1189, 1269
Marantz	0039, 0189, 1189, 1269
MCS	0039
Memorex	0014
Micromega	0189, 1189
Mitsubishi	1393
Myryad	0189, 1189
Onkyo	0135
Optimus	0531, 0670, 1023, 1074
Panasonic	0039, 0309, 1308
Philips	0189, 1189, 1269
Pioneer	0014, 0150, 0531, 0630, 1023
Polk Audio	0189
Proscan	1254
Qisheng	1609
Quasar	0039
Radiola	0189
RadioShack	1263
RCA	0531, 1023, 1074, 1254, 1609
Restek	0189
Revox	0189
Rio	1383

Rio Audio	1383
Roadstar	1263
Saba	0531
Sansui	0189
Sanyo	0670
Schneider	0110, 0531
Sharper Image	1263
Silsonic	0176
Sonic Blue	1383
Sony	0158, 1058, 1406, 1759
Soundesign	0670
Stereophonics	1023
Sunfire	1313
TAG McLaren	1189
Teac	0110, 1074
Technics	0039, 0309, 1308
Telefunken	0531
Thomson	1254
Thorens	0189, 1189
Uher	0531
Universum	0189, 1609
Victor	0074
Wards	0014, 0158, 0189
Yamaha	0176, 1176, 1276

AMPLIFIER

Audio Amplifiers

Amstrad	0078
Durabrand	1561
GE	0078
Genexxa	0395
Harman/Kardon	0892
JVC	0331
Left Coast	0892
Lenoxx	1561
Marantz	0892
Optimus	0395
Philips	0892
Polk Audio	0892
Realistic	0395
Soundesign	0078
Victor	0331
Wards	0078
Yamaha	0354

Miscellaneous Audio

Aiwa	0159
Altec Lansing	1485
Cambridge Soundworks	1530
Creative	0872
Imerge	1491
Marantz	1491
Motorola	1464
Omnifi	1605
Omnify	1605
Sony	0159

CD**CD Players**

Acoustic Research	0420
Advantage	0032
Aiwa	0157
Arcam	0157
Audio Research	0157
Audiolab	0157
Audiomeca	0157
Audioton	0157
BAT	0157
Burmester	0420
Cairn	0157
California Audio Labs	0029
Cambridge	0157
Cambridge Audio	0157
Carver	0157, 0179
CCE	0157
CDC	0420
CEC	0420
Cyrus	0157
Denon	0003, 0873
DKK	0000
DMX Electronics	0157
Dual	0003
Dynamic Bass	0179
Emerson	0305
Fisher	0179
Garrard	0420
Genexxa	0000, 0032, 0037, 0179, 0305
Goldmund	0157
Goodmans	0305
Grundig	0157
Harman/Kardon	0157, 0173
Hitachi	0032
Integra	0101
IR	0000
JVC	0072
Kenwood	0028, 0036, 0037, 0157, 0190, 0681
KLH	1318
Krell	0157
Linn	0157
Loewe	0157
LXI	0305
Magnavox	0157, 0305
Marantz	0029, 0157
Matsui	0157
MCS	0029
Memorex	0032, 0305
Meridian	0157
Micromega	0157
Miro	0000
Mission	0157
MTC	0420

Myryad	0157
NAD	0000
Naim	0157
NSM	0157
Oak	0145
Onkyo	0101, 0868
Optimus	0000, 0032, 0037, 0087, 0145, 0179, 0305, 0420, 1063, 1075
Panasonic	0029
Parasound	0420
Philips	0157
Pioneer	0032, 0101, 0305, 1063
Polk Audio	0157
Proton	0157
QED	0157
Quad	0157
Quasar	0029
Radiola	0157
RadioShack	1075
RCA	0032, 0053, 0179, 0305, 0420
Realistic	0179, 0420
Restek	0157
Revox	0157
Roksan	0420
Rotel	0157, 0420
Royal	0420
SAE	0157
Sansui	0157, 0305
Sanyo	0087, 0179
SAST	0157
Scott	0305
Sears	0305
Sharp	0037, 0861
Sherwood	1067
Siemens	0157
Silsonic	0036, 0888
Simaudio	0157
Sonic Frontiers	0157
Sony	0000, 0100, 0490
Soundesign	0145
Symphonic	0305
TAG McLaren	0157
Tandy	0032
Tascam	0420
Teac	0420
Technics	0029
Thomson	0053
Thorens	0157
Thule Audio	0157
Tokai	0420
Universum	0053, 0157
Victor	0072
Wards	0000, 0032, 0053, 0087, 0157, 0179
Yamaha	0032, 0036, 0888
Zonda	0157

HOME**Home Automation**

Accutek	1215
Bionaire	1215
Frigidaire	1333
GE	0240
GE X10 Homeminder	0240
GoldStar	1537
Holmes	1215
Lasko	0846
LG	1537
Lutron	0597
One For All	0167
RadioShack	0240
Security System	0167
Sharper Image	0846
Universal X10	0167
Whirlpool	1332
Windmere	1215
X-10 home automation	0167
X10	0167

**RC-5 REMOTE CODES
(MARANTZ PRODUCT)**

TV	2048
VCR	2053
AUX	2052
TAPE	2066
CD-R	2074
CD	2068
DVD	2064

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

U.S.A. Marantz America, Inc. 1100 Maplewood Drive, Itasca, IL 60143, U.S.A.

EUROPE Marantz Europe B.V. P.O. Box 8744, 5605 LS Eindhoven, The Netherlands

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. Copyright 1992-1999 Dolby Laboratories, Inc. All rights reserved.

marantz[®] is a registered trademark.