marantz

CD Receiver M-CR611

Quick Setup Guide

Start Here
Commencez ici
Iniciar aquí

Before you begin

What's In The Box

M-CR611

Power cord



Remote and batteries

Product manual
on CD-ROM

AM loop antenna



FM indoor antenna

Required For Setup

Network router

Speakers

Speaker cables

Optional

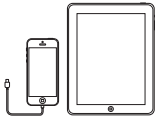

iOS device and USB cable

Router with WPS



Network cable

* For detailed instructions or assistance, please refer to the enclosed CD-ROM manual or visit our support site: www.marantz.com

1. Connection

1 Connect the left and right speakers to the M-CR611

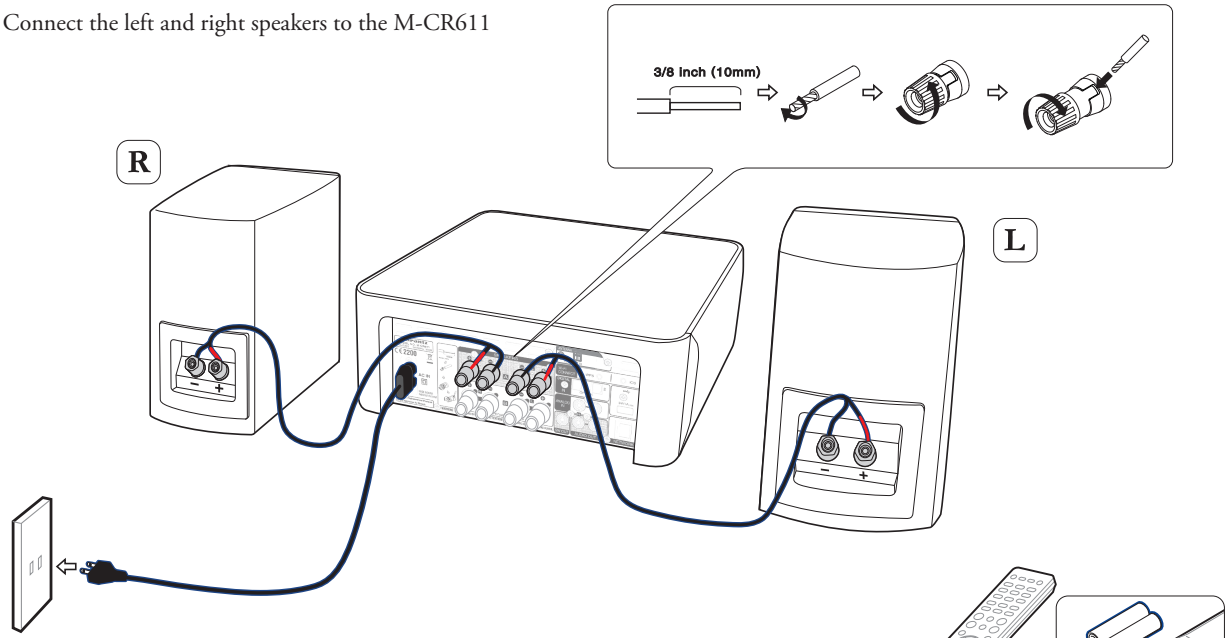

2 Connect the power cord from the M-CR611 to a power outlet

Note: Please refer to the CD or Web manual for Speaker A/B and Bi-amp connection options.

3 Insert the batteries into the remote

2. Connecting to your home network

Choose from one of the following options

Wireless

iOS device

iOS version 7 or later

iOS device + USB cable

iOS version 5 or later

No WPS router

Wi-Fi router

WPS router

Wi-Fi router

1 Power on

2 Select language

3 Make sure your iOS device is connected to your WiFi Network. Select the network named "Marantz M-CR611" from the Settings/Wi-Fi screen on your device

3 Make sure your iOS device is connected to your WiFi Network. Connect your iOS device to the front using your USB cable.

3 Select "Wi-Fi - scan" and wait as your M-CR611 looks for available networks

3 Press the WPS button on your router

Wired

1 Connect a network cable between your M-CR611 and your router
(cable not included)



2 Power on

3 Select language

4 Please wait while your M-CR611 connects to your wired network.

---

4 Follow the instructions and tap Next

5 Please wait as completing the connection can take a few minutes
The front panel of the M-CR611 will show the status of the connection

---

4 Press the iOS Button on the back of your M-CR611



5 This message will appear on your iOS device Select “Allow”

Connected!

---

4 Select your network name.
If your network name is not listed, select “Rescan”

5 Enter your network password using the number keys on the remote control

---

4 Within 2 minutes, press the WPS button on the back of your M-CR611



5 Please wait as completing the connection can take a few minutes
The front panel of the M-CR611 will show the status of the connection

3. Enjoying your music!

Enjoying Internet radio

1 Press the “INTERNET RADIO” button on the remote

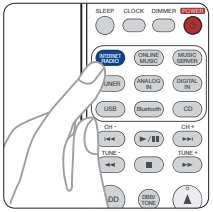

2 Select a station

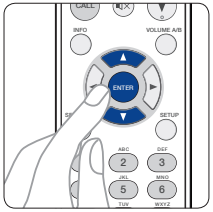

Enjoying music using Apple AirPlay

1 Open Control Center (iOS 7 and later) by swiping up from the bottom of your screen, then tap AirPlay

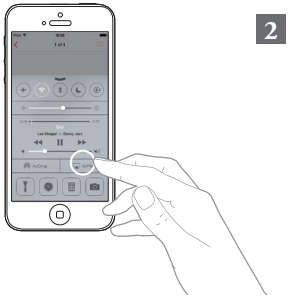

2 Select the “Marantz M-CR611” from the AirPlay Device list

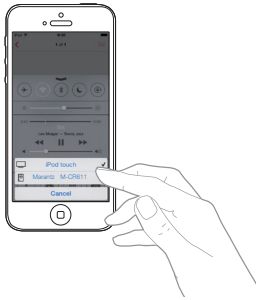

Note: Make sure your iOS device is on the same network as the M-CR611

Download the Marantz “Hi-Fi Remote” app

Scan the QR code to download and install the Marantz “Hi-Fi Remote” app using your smartphone and a scanning app or manually search the Apple App store or Google Play store for the “Marantz Hi-Fi Remote”

Enjoying music using Bluetooth

1 Press INPUT to select Bluetooth, then press and hold the Input button until [Pairing Mode] is displayed

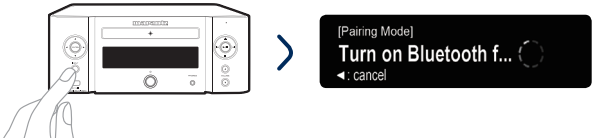

2 Activate Bluetooth on your mobile device

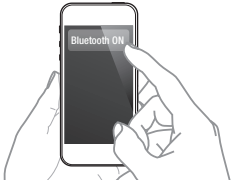

3 Select “Marantz M-CR611” from the Bluetooth device list on your mobile device

Some devices may required you to verify the numeric code and press ENTER on the M-CR611

4 Play music using any app on your device

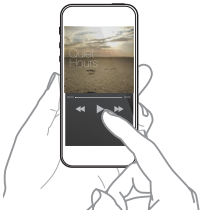

To reconnect a previously paired Bluetooth device, start at step 2.

Pair and connect your NFC capable device by gently touching it on the NFC logo on the top of M-CR611.

Basic trouble shooting

No sound:
- Check all connections.
- Make sure the bare metal wire ends of the speaker wires are in contact with the metal part of the speaker terminals.

Additional information

For more information about this product, scan the QR code using your mobile deviceor visit Marantz Support at: manuals.marantz.com/MCR611/NA/EN/

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz® is a registered trademark.

Printed in China 5411 11302 01AM

Copyright © 2015 D&M Holdings Inc. All Rights Reserved.